SYMMONS[®] Duro[®] the smart choice™


SLS-3612-1.5, SLS-3610-1.5 Single Handle Lavatory Faucet **Operation & Maintenance Manual**






Model Numbers		Feature Highlights	
SLS-3612-1.5	Single Handle Lavatory Faucet with Metal Drain Assembly	 Single hole mount Quarter turn ceramic control cartridge 	
SLS-3610-1.5	Single Handle Lavatory Faucet	 Braided hose connections (3/8" compression) 6-7/8" height 	
Options/Modifications		 Metal drain assembly (SLS-3612 series only) Standard 1.5 gpm (5.7 L/min) aerator 	
	gpm (1.9 L/min) aerator gpm (3.8 L/min) aerator	 Shall be made from metal construction, plated in standard polished chrome finish 	
•	deck plate for single hole mount	Compliance	
faucets		- ASME A112.18.1/CSA B125.1 - NSF/ANSI 61.9; NSF/ANSI 372 - WaterSense 1.5 gpm (5.7 L/min) only	
Note: Append appropriate -suffix to model number.		Warranty	
Finish Modificat	ions		
-BBZ Brus	hed Bronze finish	 Limited Lifetime - to the original end purchaser in consumer installations. 5 Years - for commercial installations. Refer to www.symmons.com/warranty for complete 	
□ -MB Matte	e Black finish		
-STN Satin	n Nickel finish	warranty information.	
Note: Append appropriate -suffix to model number.			

Dimensions

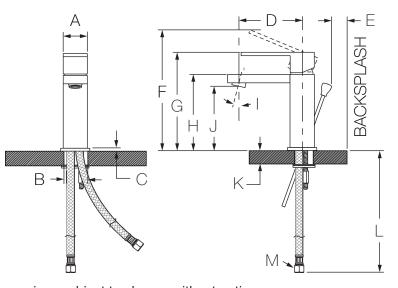

Note: Dimensions subject to change without notice.

Measurements			
Α	1-11/16", 43 mm		
Hole Size:			
В	Min. Ø 1-1/4", 32 mm		
	Max. Ø 1-1/2", 38 mm		
С	3/16", 5 mm		
D	4-7/16", 113 mm		
Е	Min. 2-1/2", 64 mm		
F	8-7/16", 214 mm		
G	6-7/8", 175 mm		
Н	5-5/16", 135 mm		
Ι	12°		
J	4-7/16", 113 mm		
	Deck Thickness Ref.		
K	Min. 7/8", 22 mm		
	Max. 2-1/2", 64 mm		
L	24", 610 mm		
Μ	(2x) 3/8" compression fitting		

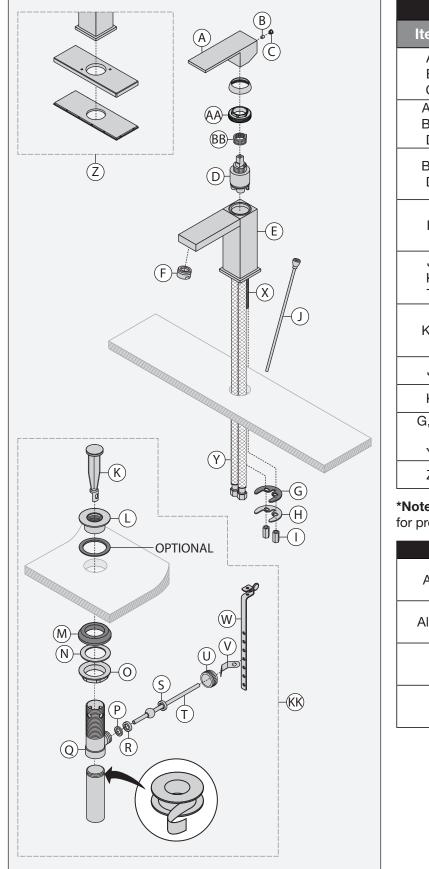


Replacement Parts				
Item	Description	Part Number		
A B C	Handle Set Screw Plug Button	LN-01416*		
AA BB D	Compression Nut Limit Stop Cartridge	RL-069		
BB D	Limit Stop Cartridge	RL-070		
F	Aerator 1.5 Aerator 1.0 Aerator 0.5	RL-059-1.5* RL-059-1.0* RL-059-0.5*		
J K T	Lift Rod Stopper Ball Rod	RL-014*		
КК	Pop-up Assembly	RL-154LR-11*		
J	Lift Rod	RL-015*		
К	Stopper	RL-016*		
G, H I Y	Mounting Gaskets (2x) Fasteners Supply Hose	RL-011		
Z	Deck Plate	RL-082*		

***Note:** Append appropriate finish -suffix to part number for premium finish.


Tools Required			
Adjustable wrench	-3		
Allen wrench 2.5mm			
Plumber tape	e e e e e e e e e e e e e e e e e e e		
Plumber putty	8		

Installation

1) Insert faucet body (E) through deck surface.

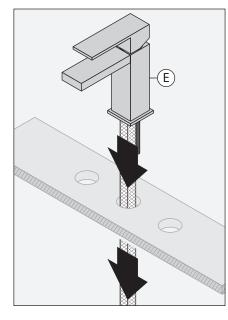


 Slide mounting gasket (G) and metal washer (H) on to fasteners (X). Secure with mounting nuts (I).

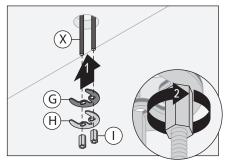


Note: Hoses removed for clarity.


 Install plumber tape to inlets of shut-off valves. Attach supply lines to shut-off valves and hand tighten. Using a wrench, finish with onehalf turn. **DO NOT** overtighten.

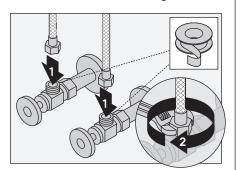


Optional: Adjust limit stop washer to limit handle turn to the hot position if desirable.

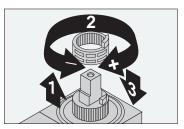

4) Apply plumber putty to underside of flange (L).

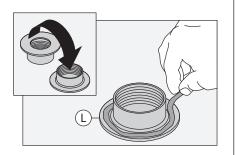


5) Insert flange (L) into drain opening. From below, attach drain body (Q) with gasket (M) and washer (N) to flange (2-3 turns until hand tight).

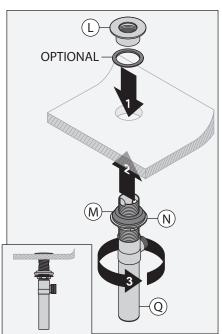


Note: Make sure drain cavity (on drain body) faces rear of sink.

6) From below, tighten flange nut (O) to secure drain body (Q).DO NOT overtighten.

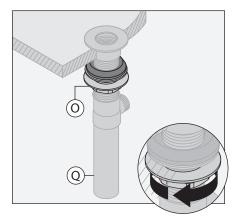

Note: Make sure flange is centered in drain opening.


7) Insert stopper (K) into flange (L) and rotate to proper position.

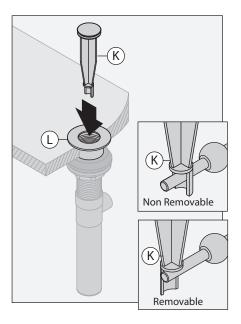

Note: Stopper can be installed removable or non-removable determined by eye hole position.


Installation

 Insert pivot rod (T) into drain body (Q) against gasket (P) and inner seat (R). Install outer seat (S) against pivot ball and secure assembly by tightening retaining nut (U).

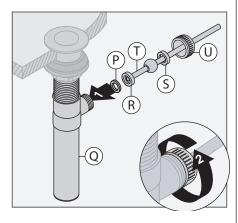


Note: Pivot rod passes under stopper.

 Insert lift rod (J) into back of faucet body (E). From below, attach clevis strap (W) to lift rod (J). Tighten thumb screw to secure.

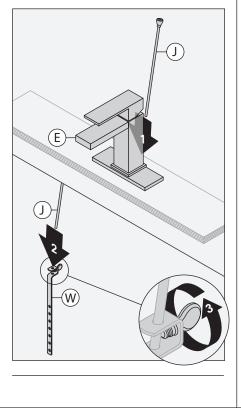

 With stopper in closed location, insert pivot rod (T) into clevis strap (W). Secure with spring clip (V).

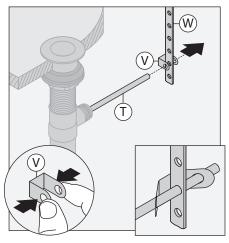

- 11) To adjust stopper, select another hole in clevis strap or loosen thumb screw to slightly raise or lower lift rod.
- 12) Attach drain body to drain trap.

Troubleshooting Chart

Problem	Cause	Solution
Finish is spotting.	Elements in water supply may cause water staining on finish.	Clean finished trim area with a soft cloth using mild soap and water or a non-abrasive cleaner and then quickly rinse with water.
Faucet is leaking from handle or faucet body.	Cartridge o-rings are worn or foreign matter (dirt, chips) is lodged between cartridge and o-rings.	Remove cartridge and inspect for foreign matter. Replace cartridge if necessary.
Faucet no longer maintains desired temperature.	Hard water deposits inside of cartridge is preventing accurate mix of hot and cold water.	Soak cartridge in white vinegar for 1 hour to breakdown hard water deposits, then rinse with water. Replace cartridge if necessary.

WARNING: This product can expose you to chemicals including lead, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.