

Installation and Operation Instructions for

Brute® Mini

Residential Gas-Fired Hydronic Boilers

Sizes 50-200 MBTU/h

FOR YOUR SAFETY: This product must be installed and serviced by a professional service technician, qualified in hot water boiler and heater installation and maintenance. Improper installation and/or operation could create carbon monoxide gas in flue gases which could cause serious injury, property damage, or death. Improper installation and/or operation will void the warranty.

⚠ WARNING

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a nearby phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or gas supplier.

⚠ AVERTISSEMENT

Assurez-vous de bien suivre les instructions données dans cette notice pour réduire au minimum le risque d'incendie ou d'explosion ou pour éviter tout dommage matériel, toute blessure ou la mort.

Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables dans le voisinage de cet appareil ou de tout autre appareil.

QUE FAIRE SI VOUS SENTEZ UNE ODEUR DE GAZ:

- Ne pas tenter d'allumer d'appareils.
- Ne touchez à aucun interrupteur. Ne pas vous servir des téléphones dans le bâtiment où vous êtes.
- Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur.
- Si vous ne pouvez rejoindre le fournisseur de gaz, appelez le service des incendies.

L'installation et l'entretien doivent être assurés par un installateur ou un service d'entretien qualifié ou par le fournisseur de gaz.

TABLE OF CONTENTS

SECTION 1 GENERAL INFORMATION

1.A	Safety Warnings	4
1.B	Introduction.....	6
1.C	Warranty	6
1.D	Model Number and Nomenclature	6
1.E	Model Overview.....	7
1.F	Dimensions.....	9
1.G	The Installation Kit.....	10
1.H	Accessory Kits Available.....	10

SECTION 2 LOCATING THE BOILER

2.A	Field Assembly	10
2.B	Boiler Placement	10
2.C	Clearances	10

SECTION 3 AIR AND VENTING

3.A	Safety Warnings	11
3.B	Combustion Air Supply	12
3.C	Venting	13
3.D	Vertical Venting - Category I	14
3.E	Locations for Vent Pipe Terminator.....	15
3.F	Venting with a Power Venter	16
3.G	Common Vent Test	16

SECTION 4 GAS CONNECTIONS

4.A	Gas Supply and Piping.....	17
4.B	LP Gas Conversion	18
4.C	Special Precautions for LP Gas.....	18

SECTION 5 PUMP REQUIREMENTS

5.A	Pump Sizing	19
-----	-------------------	----

SECTION 6 WATER CONNECTIONS

6.A	Water Piping.....	20
6.B	Low Loss Header	20
6.C	Chilled Water Systems	20
6.D	Oxygen Permeable Systems.....	20
6.E	Anti-freeze	20
6.F	Typical Plumbing Diagrams.....	21

SECTION 7 ELECTRICAL AND WIRING DIAGRAMS

7.A	Safety Warnings	23
7.B	Main Power, 120V	23
7.C	Outdoor Sensor	23

7.D	Field Connections	24
7.D.1	TB1 (Term Block 1 -TT, DHW, OAS) ..	24
7.D.1.a	TT (Central Heat).....	24
7.D.1.b	DHW.	24
7.D.1.c	Field Interlocks	24
7.D.1.d	PV Terminals	24
7.D.1.e	WWSD + COM	24
7.D.1.f	OAS	24
7.D.2	TB2 (for pumps and aux power)	25
7.D.2.a	Boiler Pump.....	25
7.D.2.b	SYS Pump.....	25
7.D.2.c	Aux Power	25
7.D.3	TB3 (for optional equipment)	25
7.D.3.a	DHW Pump	25
7.D.3.b	DHW Aquastat.....	25
7.E	Wiring Connects, Power Vent and Air ..	26
7.F	Wiring Diagram.....	28
7.G	Logic Diagram	29

SECTION 8 THE DIGITAL DASHBOARD

8.A	Getting to know the Digital Dashboard.	
8.A.1	Setting the Economy Feature	30
8.A.2	High Limit (High Temp).....	30
8.A.3	Low Limit (Advanced Options/Adjust) ..	30
8.A.4	Control LEDs	31
8.A.4.a	ACTIVE (TEMP)	31
8.A.4.b	HI TEMP	31
8.A.4.c	ACTIVE (LWCO).....	31
8.A.4.d	LOW WATER	31
8.A.4.e	ACTIVE (ECONOMY)	31
8.A.4.f	TARGET	31
8.A.5	Digital LEDs.....	31
8.A.6	Ignition LEDs	31
8.A.6.a	LIMITS	31
8.A.6.b	V-PWR.....	31
8.A.6.c	V-SW	31
8.A.6.d	FLAME	32
8.B	Default Settings.	32
8.C	Advanced Settings	32
8.C.1	Programming the Outdoor Sensors.....	32
8.C.1.a	Setting the Outdoor Reset.....	32
8.C.1.b	Setting Warm Weather Shutdown	32
8.C.1.d	Thermal Boost	33
8.C.2	Degrees Fahrenheit or Celsius.....	34

8.C.3	Manual Reset Low Water Cut-Off.....	34
8.C.4	Low water Cut-Off	34
8.C.5	High Limit Differential	34
8.C.6	Restore Factory Default Settings	34
8.D	TEST / SETTINGS Button	35
8.E	Temperature and Pressure Gauge	35

SECTION 9 INITIAL STARTUP

9.A	Filling the System	36
9.B	System Start Up (Seq of Operation).....	36
9.C	Proper Pilot Flame.....	38
9.D	Lighting Instructions Decal	39
9.E	System Shutdown	40

SECTION 10 MAINTENANCE

10.A	Removing the covers and panels	40
10.A.1	Access Cover Removal	40
10.A.2	Flue Collector Access	40
10.A.3	Side Panel Removal	41
10.A.4	Draft Hood Removal	41
10.B	Maintenance.....	42

SECTION 11 OPERATING DETAILS AND TROUBLESHOOTING

11.A	Operating Details.....	43
11.B	Electrical Troubleshooting	43
11.C	Troubleshooting Table	44
11.C.1	Troubleshooting Flow Chart 1 (burners off)	45
11.C.2	Troubleshooting Flow Chart 2 (burners on)	46

SECTION 12 REPLACEMENT PARTS

12.A	Parts Illustrations.....	47
12.B	Parts List	49
12.C	Accessories List	50
12.D	Glossary of Terms.....	51

SECTION 1 GENERAL INFORMATION


1.A Safety Warnings

Safety Warnings are used throughout this manual to bring attention to the presence of hazards with various risk levels and to offer important information concerning the life of this product. There are 3 basic types.

1	⚠ WARNING	Indicates an imminently hazardous situation which, if not avoided, can or will result in death or serious injury and can or will result in catastrophic property damage.
2	⚠ CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in moderate injury and/or property damage.
3	NOTE:	Indicates instructions that are important to that topic but not related to personal injury or property damage.

⚠ WARNING

- Water temperature over 125°F (52°C) can cause severe burns instantly or death from scalds.
- Children, disabled and elderly are at highest risk of being scalded.
- See instruction manual before setting temperature at the unit.
- Feel water before bathing or showering.
- If this unit is used to produce water that could scald if too hot, such as domestic hot water use, adjust the outlet control (limit) or use temperature limiting valves to obtain a maximum water temperature of 125°F (52°C).



⚠ WARNING

The inlet gas pressure to the unit must not exceed 13" W.C. (3.2kPa).

⚠ WARNING

This unit must be installed in accordance with the procedures detailed in this manual, or the manufacturers warranty will be voided. The installation must conform to the requirements of the local jurisdiction having authority, and, in the United States, to the latest edition of the National Fuel Gas Code, ANSI Z223.1/NFPA54. In Canada, the installation must conform to the latest edition of CSA B149.1 Natural Gas and Propane Gas Installation Code, and/or local codes. Where required by the authority having jurisdiction, the installation of these units must conform to the Standard for Controls and Safety Devices for Automatically Fired Boilers, ANSI/ASME CSD-1. Any modifications to the boiler, its gas controls, or wiring may void the warranty. If field conditions require modifications, consult the factory representative before initiating such modifications.

⚠ WARNING

Fire or Explosion Hazard

Improper configuration can cause fuel buildup and explosion. Improper user operation may result in property loss, severe physical injury, or death.

Any changes to safety-related configuration parameters must only be done by experienced and/or licensed burner/boiler operators and mechanics.

If any odor of gas is detected, or if the gas burner does not appear to be functioning in a normal manner, close the main gas shutoff valve. Do not shut off the power switch. Contact your heating contractor, gas company, or factory representative.

⚠ WARNING

Carbon Monoxide Hazard

Improper adjustment of the burners may lead to poor combustion quality, increasing the amount of carbon monoxide produced. Excessive carbon monoxide levels may lead to personal injury or death.

NOTE: This unit is protected against hydronic over-pressurization. A pressure relief valve is included with each unit.

⚠ WARNING

CANCER AND REPRODUCTIVE HARM.
WWW.P65WARNINGS.CA.GOV.

AS REQUIRED BY THE STATE OF CALIFORNIA PROPOSITION 65.

⚠ WARNING**Electrical Shock Hazard**

Electrical shock can cause severe injury, death or property damage. Disconnect the power supply before beginning installation or changing the wiring to prevent electrical shock or damage to the equipment. It may be necessary to turn off more than one power supply to disconnect.

All electrical wiring is to be done in accordance with local codes, or in the absence of local codes, with: 1) The National Electrical Code ANSI/NFPA No. 70 - latest Edition, or 2) CSA STD. C22.1 "Canadian Electrical Code - Part 1." This appliance must be electrically grounded in accordance with these codes.

⚠ WARNING

Should overheating occur or the gas supply fail to shut off, do not turn off or disconnect the electrical supply to the pump. Instead, shut off the gas supply at a location external to the appliance.

⚠ AVERTISSEMENT

En cas de surchauffe au si l'admission de gaz ne peut être coupée, ne pas couper ni débrancher l'alimentation électrique de la pompe. Fermer plutôt le robinet d'admission de gaz à l'extérieur de l'appareil.

⚠ WARNING

The Repair Parts list designates parts that contain refractory ceramic fibers (RCF). RCF has been classified as a possible human carcinogen. When exposed to temperatures above 180°F, such as during direct flame contact, RCF changes into crystalline silica, a known carcinogen. When disturbed as a result of servicing or repair, these substances become airborne and, if inhaled, may be hazardous to your health.

Do not remove or replace RCF parts or attempt any service or repair work involving RCF without wearing the following protective gear:

1. A National Institute for Occupational Safety and Health (NIOSH) approved respirator.
2. Long sleeved, loose fitting clothing.
3. Gloves.
4. Eye Protection.

1.B Introduction

This manual provides information necessary for the installation, operation, and maintenance of the Bradford White Brute-Mini residential boiler. Read it carefully before starting the installation.

All application and installation procedures should be reviewed completely before proceeding with the installation. Consult the Bradford White factory, or local factory representative, with any problems or questions regarding this equipment. Experience has shown that most operating problems are caused by improper installation.

1.C Warranty

Bradford White Brute-Mini's are covered by a limited warranty. The owner should complete the warranty registration at www.BradfordWhite.com.

All warranty claims must be made to an authorized Bradford White representative. Claims must include the serial number and model (this information can be found on the rating plate), installation date, and name of the installer. Shipping costs are not included in the warranty coverage.

Some accessory items may be shipped in separate packages. Verify receipt of all packages listed on the packing slip. Inspect everything for damage immediately upon delivery, and advise the carrier of any shortages or damage. Any such claims should be filed with the carrier. The carrier, not the shipper, is responsible for shortages and damage to the shipment whether visible or concealed.


The warranty does not cover damage caused by improper assembly installation, operation or field modification.

1.D Model Number and Nomenclature

Consult the rating plate on the unit. The following information describes the model number structure.

- 0 - 2nd Characters (Series Name)
BJX = Brute Mini
- 3rd thru 5th Characters (Size)
Input MBTU / H
- 6th Character (fuel)
N = Natural Gas
- 7th Character (Config)
X = Standard 50-100
L = Standard 125-200
(Low Loss Header & Pump Installed)
P = 50-100 with Pump Kit
- 8th Character (Altitude in Feet)
X = (0 - 2,000)
H = (2,001 - 5,000)
I = (5,001 - 8,000)
- 9th Character (Country)
U = USA & Canada
- 10th Character (Revision)
1 = 1st Revision

Model Nomenclature

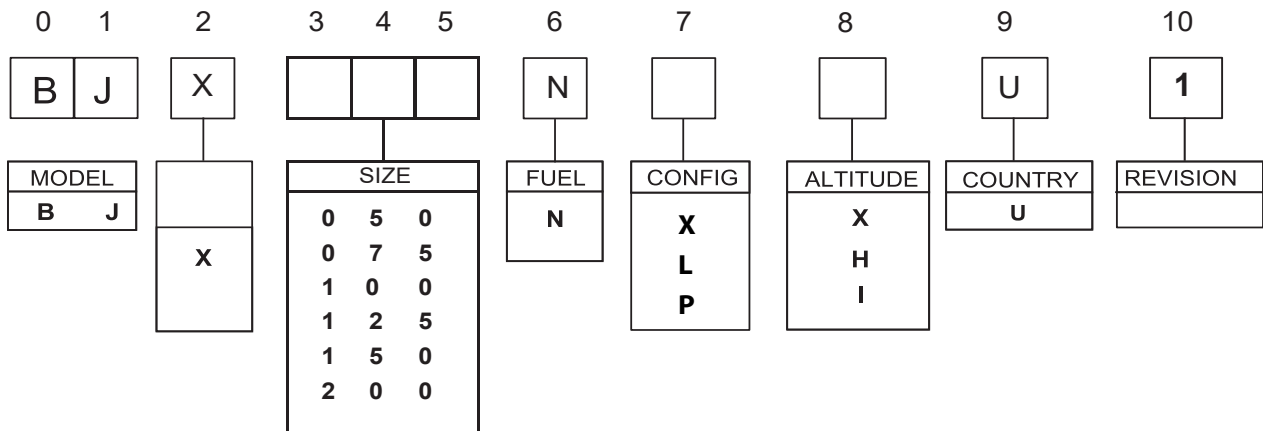

1.E Model Overview

Low Loss Header.
Models 125 - 200 only

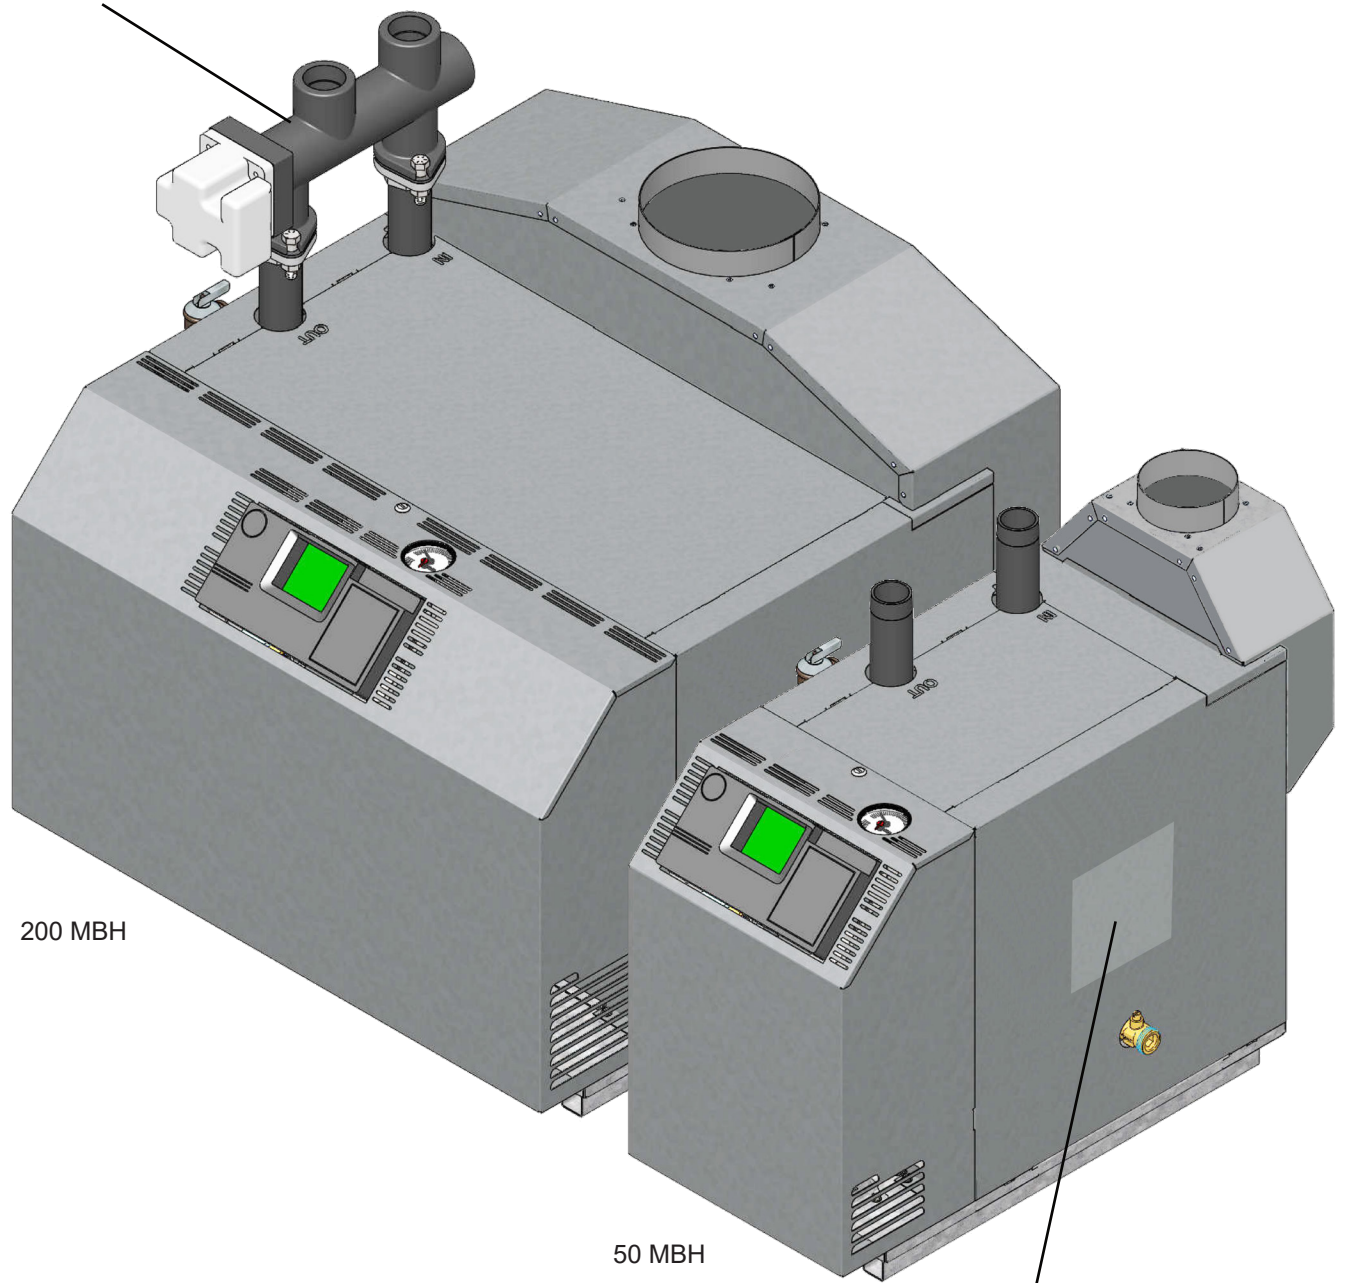


Figure 1. Largest and Smallest

Rating Plate
w/ Model Number
and Nomenclature

1.E Model Overview (continued)





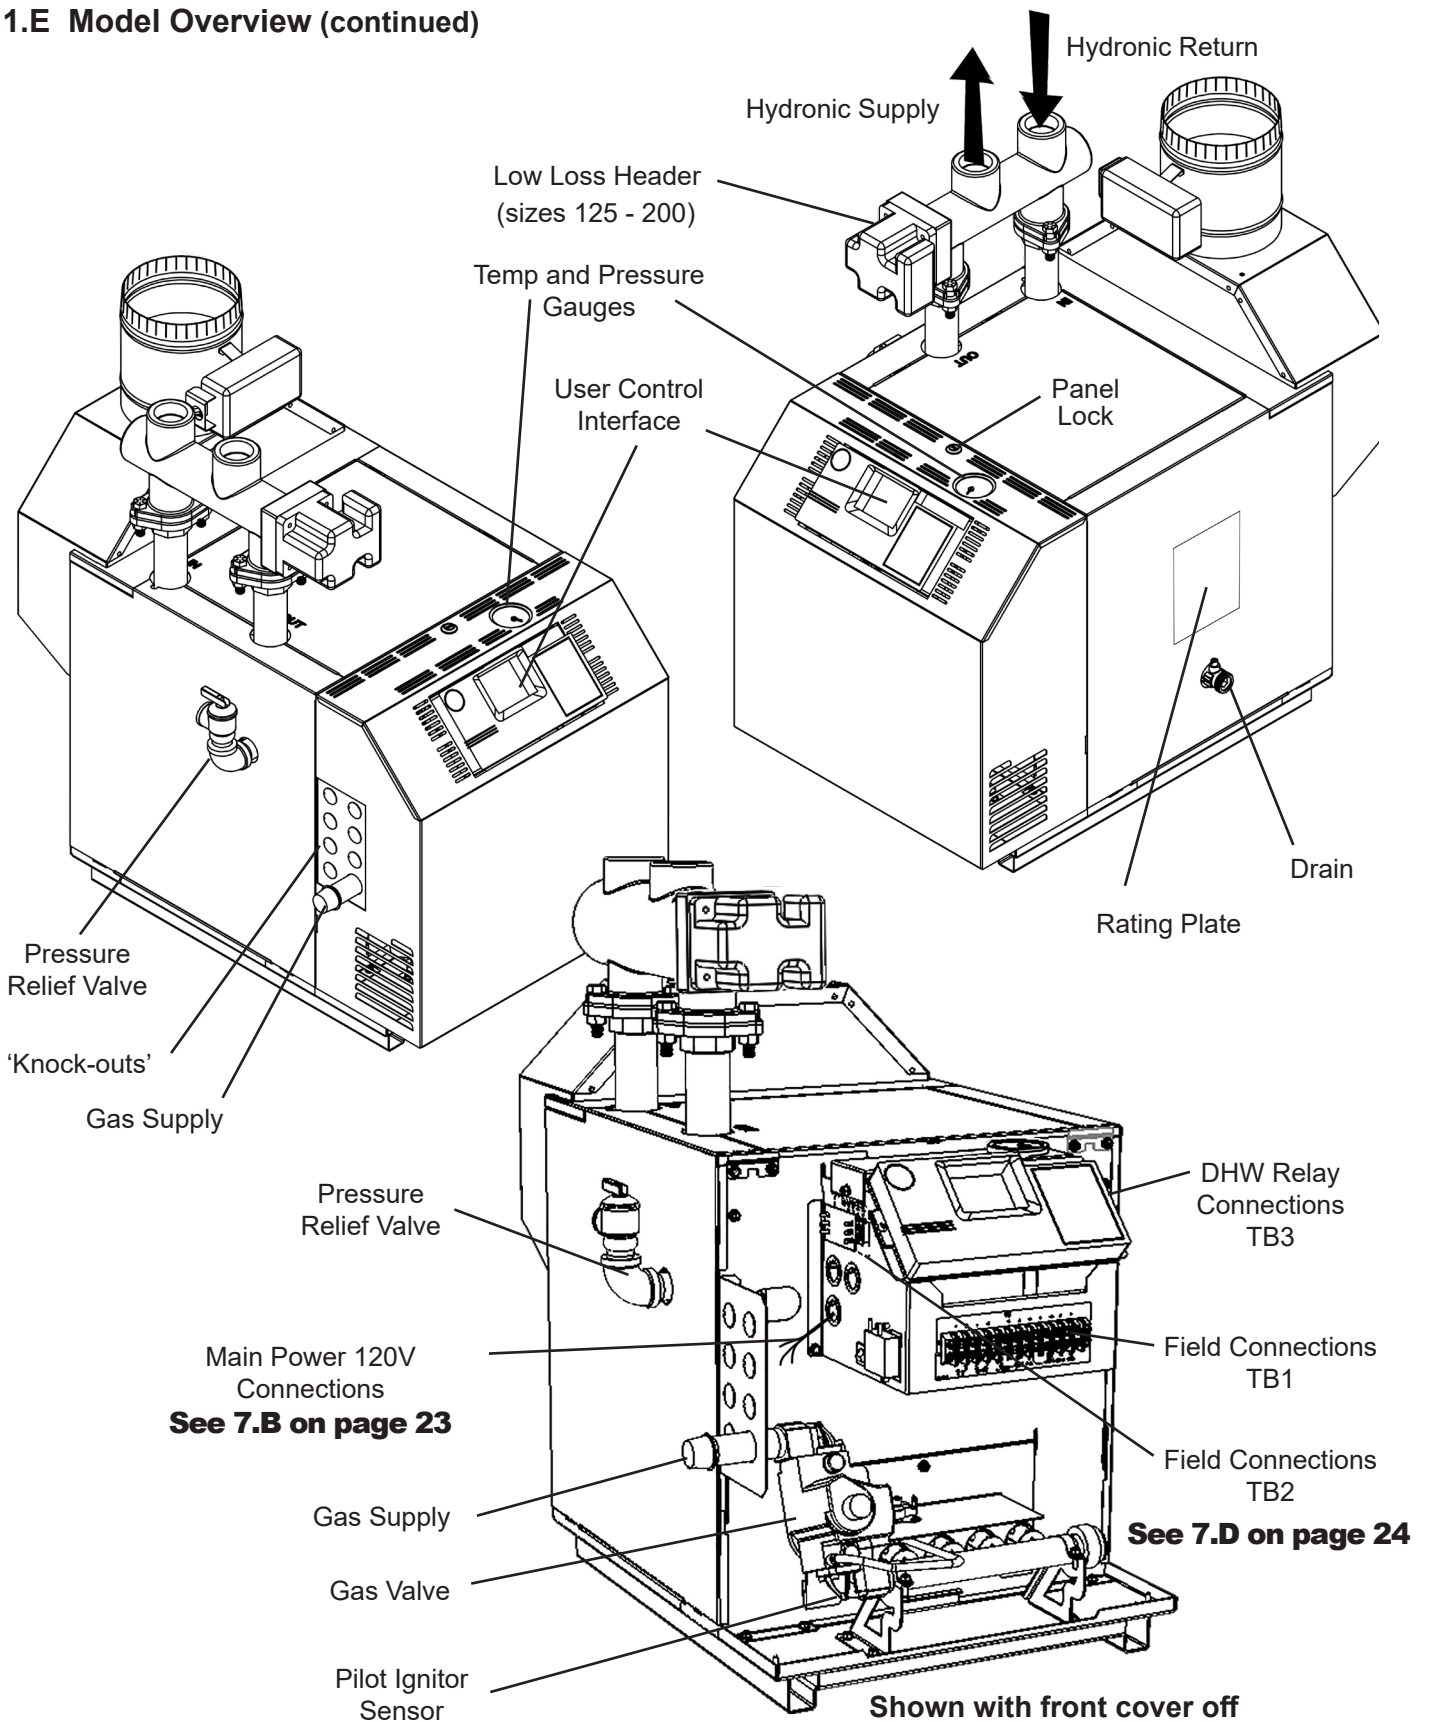


Figure 2. Location of Components (model 100 shown)

1.F Dimensions

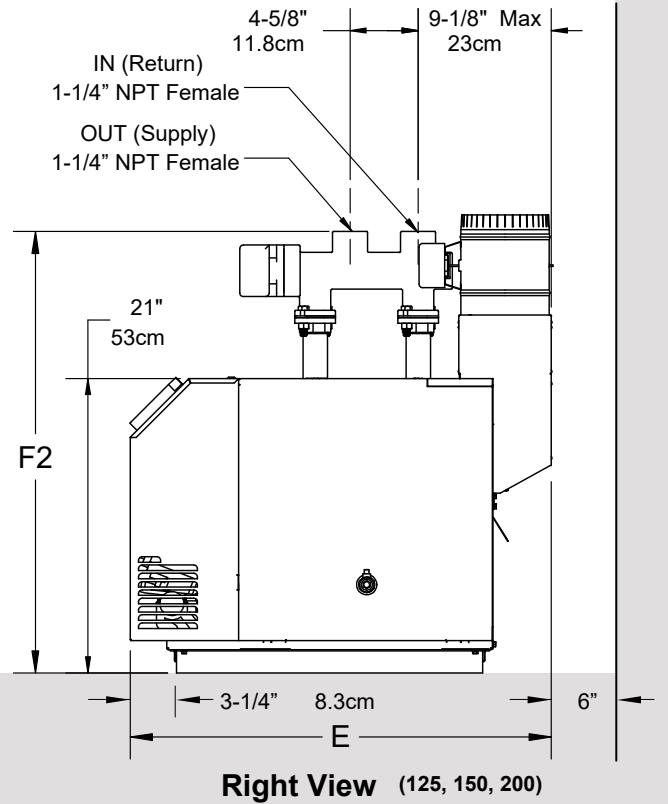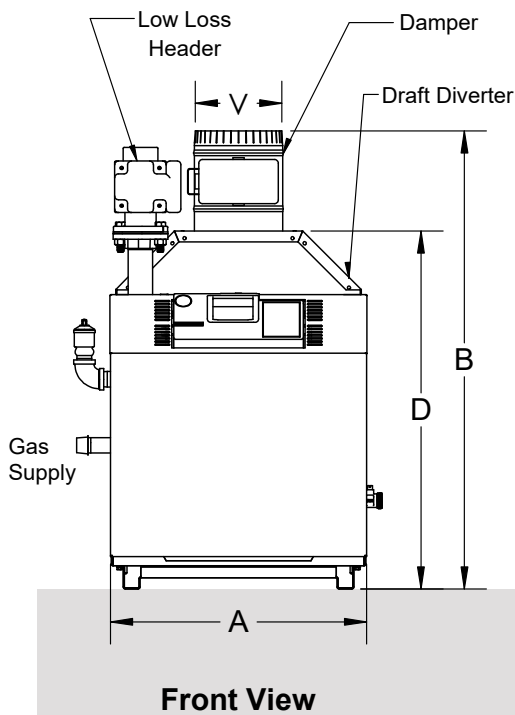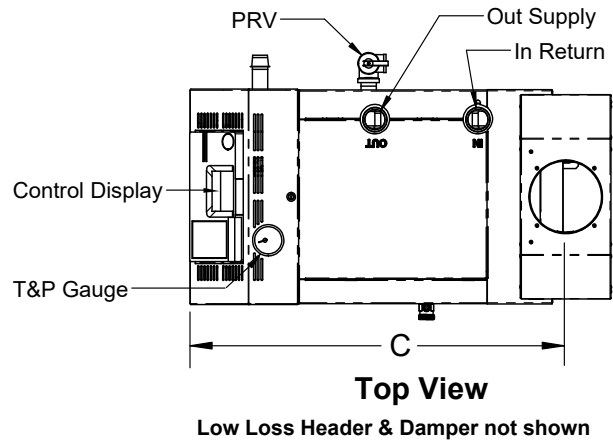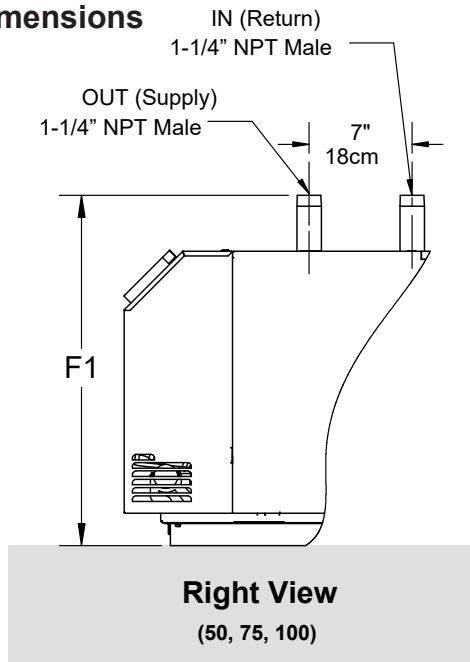

SIZE	A		B		C		D		E		F1		F2		V		WATER CONN (inches)	GAS CONN (inches)
	in.	cm	in.	cm	in.	cm	in.	cm	in.	cm	in.	cm	in.	cm	in.	cm		
50	11-3/4	30	31-5/8	80	25-1/8	64	24-3/4	63	27-5/8	70	24-7/8	63	-	-	4	10	1-1/4	3/4
75	14-1/2	37	31-5/8	80	25-5/8	65	24-3/4	63	28-5/8	73	24-7/8	63	-	-	5	13	1-1/4	3/4
100	17-3/8	45	32-1/8	82	25-1/2	65	25-3/8	65	28-5/8	73	24-7/8	63	-	-	5	13	1-1/4	3/4
125	20-1/8	52	32-1/8	82	25	64	25-3/8	65	28-5/8	73	-	-	31	79	6	15	1-1/4	3/4
150	23	59	32-1/8	82	25	64	25-3/8	65	28-5/8	73	-	-	31	79	6	15	1-1/4	3/4
200	28-3/8	73	32-1/4	82	24-5/8	63	26-1/4	67	28-5/8	73	-	-	31	79	7	18	1-1/4	3/4

Table 1. Dimensions

1.G The Installation Kit

This residential unit is shipped in a single crate with a boxed installation kit that contains these components.

1. I/O Manual
2. Vent Damper
3. Burner Air Baffle Gauge (Mini Gauge)

Optional:

1. Circulator pump & flange kit (50 - 100)

1.H Accessory Kits Available

See Section 12.C on page 50 for part numbers.

- Low Loss Header with Integral Pump for 50 - 100 (Standard on larger models)
- Conversion kits for LP and altitude are available from 0 to 10,000' both fuels.
- Domestic Hot Water Pump Relay Kit
- Power Vent Kits
- Outdoor Air Sensor

SECTION 2 LOCATING THE BOILER

2.A Field Assembly

This boiler is shipped with an automatic vent damper that must be assembled onto the vent collar on the top of the boiler, and then plugged into the unit using the dedicated harness.

2.B Boiler Placement and Clearances

This boiler is design certified by CSA-International for indoor installation on combustible flooring, in basements, in closets, utility rooms or alcoves. **These units must never be installed on carpeting.**

1. This boiler is designed for indoor installations only and should be located to provide clearances on all sides for maintenance and inspection. See Figure 3. It should not be located in an area where leakage of any connections will result in damage to the area adjacent to the unit or to lower floors of the structure. When such a location is not available, it is recommended that a suitable drain pan, adequately drained, be installed under the unit.
2. A minimum of 15" (381mm) access must be available in front of the boiler for burner removal. Consult local codes for clearances to hot water pipes and accessories.
3. If the boiler is to be installed in a garage, all burners and burner ignition devices must have a minimum 18" (457mm) clearance above the floor.
4. Boilers can be installed in a closet as long as all minimum clearances are followed, including between the front of the boiler and the closet door when it is closed. See Figure 3. Consult the American National Standard Z21.13 for more information concerning closet installations. In Canada, refer to the latest edition of CSA-B149.1.
5. When vented vertically, the unit must be located as close as practical to the vertical section of the vent. When a power venter is used with a terminal through a wall, and there is a potential for snow accumulation, the terminal must be installed at an appropriate level

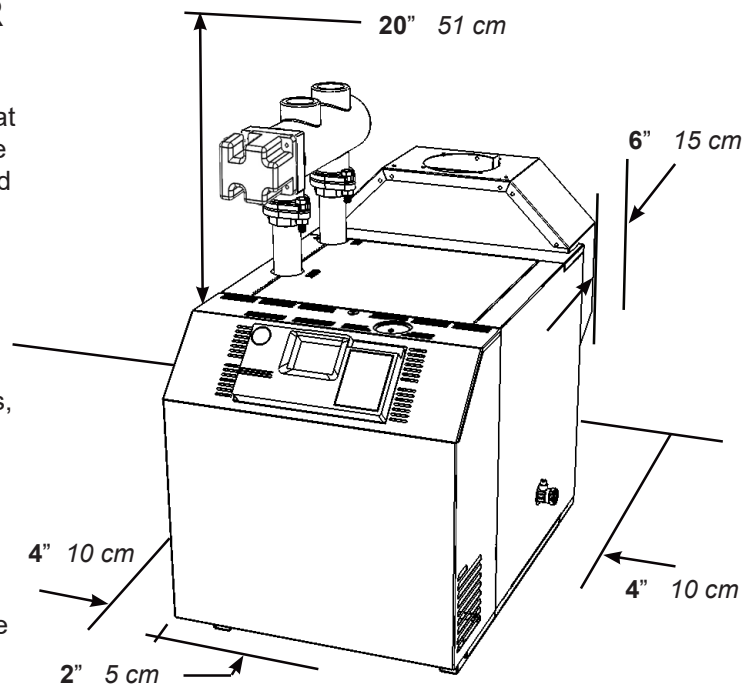


Figure 3. Minimum Clearances

above grade or the maximum expected snow line.

NOTE: For installation on combustible flooring.

Installer seulement sur un plancher combustible.

NOTE: For Closet Installation Clearances, the minimum clearance between hot water pipes and combustible construction is 1" (2.5 cm.)

SECTION 3 Air and Venting

3.A Safety Warnings

WARNING

This boiler must be vented in accordance with Part 7, Venting of Equipment, of the latest edition of the National Fuel Gas code, NFPA 54/ANSI Z223.1 and all applicable local building codes. In Canada, follow CAN/CGA B149 Installation codes. Improper venting of this appliance can result in excessive levels of carbon monoxide which can result in severe personal injury or death!

AVERTISSEMENT

Cette chaudière doit être ventilé, conformément aux dispositions de la partie 7, de la ventilation de l'équipement, de la dernière édition du National gaz carburant code, NFPA 54/ANSI Z223.1 et tous les codes du bâtiment locaux. Au Canada, CAN/CGA B149 codes d'installation. Une mauvaise ventilation de cet appareil peut entraîner des niveaux excessifs de monoxyde de carbone qui peut entraîner de graves blessures ou la mort!

WARNING

Operation of appliances with a blocked common vent may lead to serious injury or death. Safety devices must be implemented to prevent blocked common vent operation. If safe operation of all appliances connected to a common vent cannot be assured, including prevention of spillage of flue gasses into living spaces, common venting should not be applied, and appliances should each be vented separately.

AVERTISSEMENT

Le fonctionnement des appareils avec un système d'évacuation bloqué peut provoquer des blessures graves, voire la mort. Des dispositifs de sécurité doivent être installés pour éviter le blocage des systèmes d'évacuation. Si le fonctionnement de tous les appareils connectés à un système d'évacuation commun ne peut pas être assuré, y compris la prévention de la dispersion des gaz toxiques dans les espaces habités, on ne devrait pas installer un système d'évacuation commun et chaque appareil devrait être ventilé séparément.

WARNING

For Category I, II and IV boilers, have horizontal runs sloping upwards not less than ¼ inch per foot (21 mm/m) from the boiler to the vent terminal.

AVERTISSEMENT

les chaudières de catégories I, II et IV doivent présenter des tronçons horizontaux dont la pente montante est d'au moins ¼ po par pied (21 mm/m) entre la chaudière et l'évent.

WARNING

Damper must be in open position when appliance main burner(s) is operating.

For use only with automatic vent damper device. Follow installation instructions.

This boiler needs fresh air for safe operation and must be installed so there are provisions for adequate combustion and ventilation air.

AVERTISSEMENT

Le registre doit être ouvert lorsque le brûleur principal de l'appareil fonctionne.

Pour utilisation avec un registre de conduit d'évacuation automatique, Suivre les instructions d'installation.

Cette chaudière doit être alimentée en air frais pour fonctionner en toute sécurité et doit être installée de façon que la combustion et l'alimentation en air de ventilation soient adéquates.

3.B Combustion Air Supply

The boiler location must provide sufficient air supply for proper combustion, and ventilation of the surrounding area as outlined in the latest edition of U.S. ANSI standard Z223.1 or in Canada, CAN/CGA-B149.1 or .2, and any local codes that may be applicable.

In general, these requirements specify that the boiler rooms which represent confined spaces should be provided with two permanent air supply openings; one within 12 inches (305mm) of the ceiling, the other within 12 inches (305mm) of the floor.

NOTE: In Canada, follow Canadian Standard, CAN/CGA-B149 or local codes.

Outside Air Supply: When combustion air is supplied directly through an outside wall, each opening should have a minimum free area of one square inch per 4,000 BTU/h (6 sq. cm per 1.2 kW) input of the total input rating of all appliances in the enclosed area.

Inside Air Supply: When combustion is supplied from inside the building, each opening should have a minimum free area of one square inch per 1,000 BTU/h (6 sq. cm per 0.3 kW) input of the total input rating of all appliances in the enclosed area. These openings should never be less than 100 square inches (645 sq. cm).

Exhaust Fans or Vents: Any equipment which exhausts air from the boiler room can deplete the combustion air supply or reverse the natural draft action of venting system. This could cause flue products to accumulate in the boiler room. Additional air must be supplied to compensate for such exhaust.

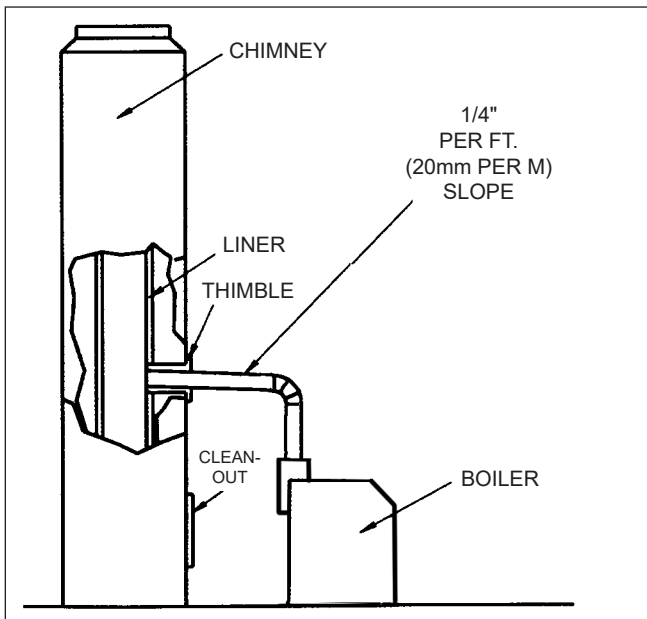


Figure 4. Chimney Venting (clay lined).

Boiler Size	Outside Air Area		Inside Air Area	
	sq. in	sq. cm	sq. in.	sq. cm
50	15	97	100	645
75	20	129	100	645
100	25	161	100	645
125	32	206	125	807
150	40	245	150	980
200	50	323	200	1290

*Area indicated is for one of two openings: one at floor level and one at the ceiling, so the total net free area would be double the figures shown. For special conditions, refer to NFPA54 ANSI Z223.1. In Canada, refer to the National Standard CAN1-B149.1 or .2, which differs from this table.
NOTE: Check with louver manufacturers for Net Free Area of Louvers. Correct for screen resistance to the Net Free Area if a screen is used.

Table 2. Minimum Recommended Air Supply to Boiler Room

The information in **Table 2** is not applicable in installations where exhaust fans or blowers of any type are used. Such installations must be designed by qualified engineers.

Mechanical Combustion Air Systems: If a blower or fan or automatic louvers are used to supply air to the boiler room, the installer should make sure it does not create drafts which could cause nuisance shutdowns. If a blower is necessary to provide adequate combustion air to the boiler, a suitable switch or equivalent must be wired into the boiler control circuit to prevent the boiler from firing unless the blower is operating. See "7.E Wiring Connections, Power Vent and Air" on page 26 for wiring diagram.

The boiler must be completely isolated and protected from any source of corrosive chemical fumes such as those emitted by trichloroethylene, perchloroethylene, chlorine, etc.

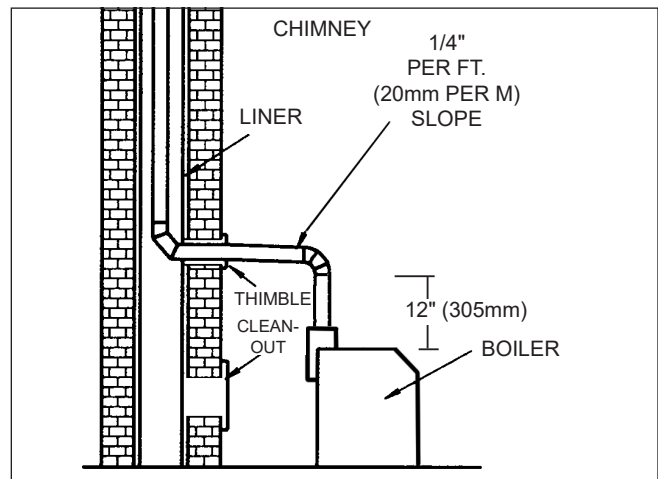


Figure 5. Vertical Venting (vent or manufactured chimney lining system).

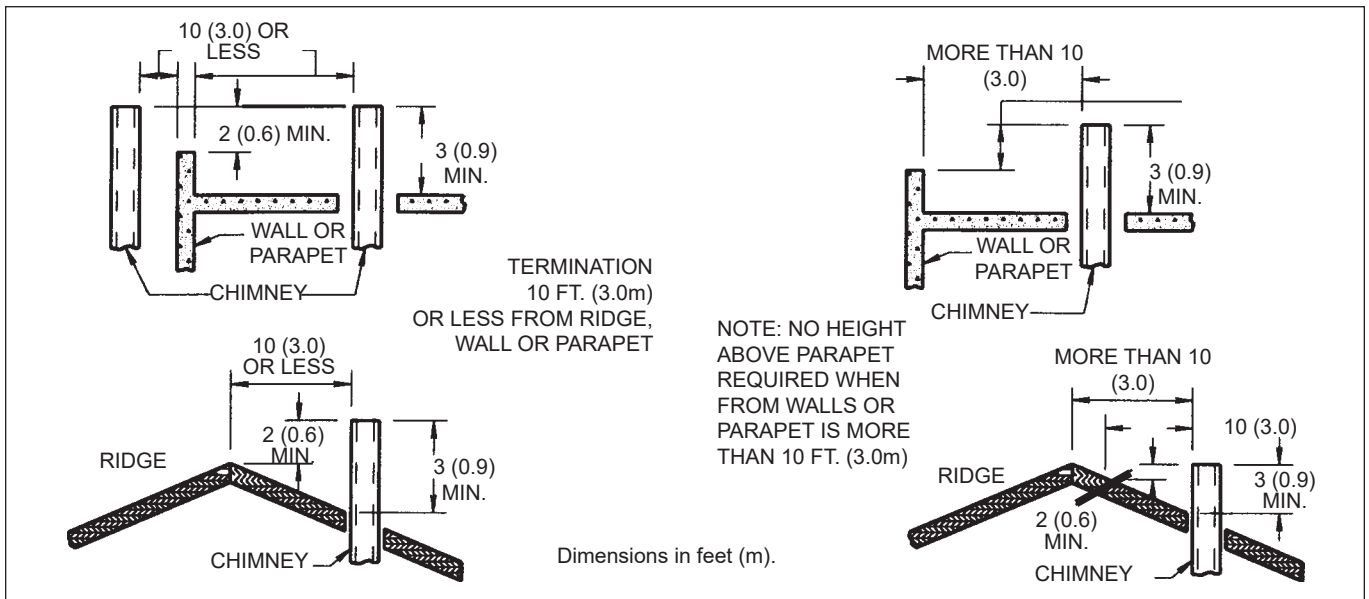


Figure 6. Vertical Vent Termination.

3.C Venting

Vent Category: This boiler is a natural draft appliance for Category I venting. It may also be vented using a power vent. Follow the instructions provided with the power venter. See 3.F for more information.

NOTE: When venting a Category I boiler, the vent damper must be fastened directly to the vent collar, and vent pipe must be fastened directly to the vent damper.

The installation must also conform to the requirements of applicable local codes, or in the absence of such codes, to the National Fuel Gas Code, ANSI Z223.1 and the National Electric Code, ANSI NFPA 70, or in Canada, CAN/CGA B149.1 (a vent damper may not be required in all Canadian jurisdictions) and B149.2 Installation Codes and the requirement of CSA C22.1, Part 1.

Do not weld the vent pipe to the boiler collar.

The weight of the stack must not rest on the boiler.

The boiler top is designed so that it can be easily removed for normal boiler service and inspection without removal of the venting.

Avoid terminating boiler vents near air conditioning or air supply fans. The fans can pick up exhaust flue products from the boiler and return them to the building, creating a possible health hazard.

Avoid oversized vent pipe or extremely long runs of vent pipe, which may cause excessive cooling and condensation.

When installing the vent system, all applicable national and local codes must be followed! The use of thimbles, firestops and other protective devices, when penetrating combustible or noncombustible

construction, must be in accordance with all applicable national and local codes.

An unused lined chimney can be used as a raceway for single wall vent pipe. Never run vent pipe through a flue that has another appliance attached to it.

NOTE: The minimum return water temperature of the unit, in order to avoid condensation in the vent, is 130°F. The unit's control is equipped to protect against low temperatures, however the pumps must be installed and wired properly for this feature to function. The system pumps must be wired to the system pump terminals, and a boiler pump must be installed and wired to the boiler pump terminal (models 125 - 200 are built with LLH/ boiler pump systems that are wired at the factory). See Figure 21 on page 27. If the system is not setup this way, condensation may occur which could damage venting systems.

3.D Vertical Venting - Category I

All venting must comply with fuel gas code and be installed by a licensed installer.

This boiler can be vented into a masonry chimney, (see Figure 4 and Figure 5 on page 12) provided several conditions are met:

1. The chimney must have an appropriate lining that is clean, properly constructed and properly sized.
2. The chimney passage way shall be examined to ascertain that it is clear and free of obstructions.
3. If a chimney rebuild is required, it shall conform to nationally recognized standards (see National Building Code or ANSI/NFPA 211).
4. The boiler must not be connected to a fireplace, wood stove or other solid fuel burning equipment.
5. When the boiler and a hot water heater are to be connected to the same chimney, they must have their own vent connector and enter the chimney at least 6" (152mm) apart.

IMPORTANT NOTE: Always provide a minimum clearance of 6" (152mm) between Type C (single wall) vent pipe and any combustible materials.

NOTE: Exterior masonry chimneys in very cold environments are at risk of condensing due to the high efficiency of this equipment. Insulated liners are recommended based on local conditions and expected system water temperatures. Also ensure the boiler's anti-condensing features are utilized by properly wiring the system pumps. See Figure 20. or Figure 21 on page 27

WARNING

Do not store any chemical, cleaners, or other corrosive material near combustion air openings or in the room. Avoid locating dryer vents in the vicinity of combustion air openings. Failure to prevent corrosive materials from mixing with combustion air can result in reduced boiler life and unsafe boiler operation.

AVERTISSEMENT

N'entreposer aucun produit chimique, produit nettoyant ou produit corrosif à proximité des bouches d'air de combustion ou dans la pièce. Éviter de placer des tuyaux de ventilation pour sècheuse à proximité des bouches d'air de combustion. Le fait de laisser des matières corrosives se mélanger à l'air de combustion risque de réduire le cycle de vie de l'appareil de chauffage et de compromettre son fonctionnement.

WARNING

Single wall vent pipe must NEVER pass through interior walls or through floors or ceilings! Failure to comply with this warning could result in a fire causing property damage, personal injury, or death!

AVERTISSEMENT

Paroi simple tuyau d'évent doit jamais passer par l'intérieur les murs ou par planchers ou plafonds ! Le non-respect de cet avertissement peut provoquer un incendie causant des dommages matériels ou corporels, ou de mort!

3.E Locations for Vent Pipe Terminator

		Canadian Installations ¹	U.S. Installations ²
A =	Clearance above grade, veranda, porch, deck, or balcony	12 in (30 cm)	12 in (30 cm)
B =	Clearance to window or door that may be opened	<ul style="list-style-type: none"> 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW) 12 in (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW) 36 in (91 cm) for appliances > 100,000 Btuh (30 kW) 	<ul style="list-style-type: none"> 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW) 9 in (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW) 12 in (30 cm) for appliances > 50,000 Btuh (15 kW)
C =	Clearance to permanently closed window	See Note 4	See Note 5
D =	Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 ft (61 cm) from the center line of the terminal	See Note 4	See Note 5
E =	Clearance to unventilated soffit	See Note 4	See Note 5
F =	Clearance to outside corner	See Note 4	See Note 5
G =	Clearance to inside corner	See Note 4	See Note 5
H =	Clearance to each side of centerline extended above meter / regulator assy	3 ft (91 cm) within a height of 15 ft (4.6 m)	See Note 5
I =	Clearance to service regulator vent outlet	3 ft (91 cm)	See Note 5
J =	Clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance	<ul style="list-style-type: none"> 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW) 12 in (30cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW) 36 in (91 cm) for appliances > 100,000 Btuh (30 kW) 	<ul style="list-style-type: none"> 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW) 9 in (23cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW) 12 in (30 cm) for appliances > 50,000 Btuh (15 kW)
K =	Clearance to a mechanical air supply inlet	6 ft (1.83 m)	3 ft (91 cm) above if within 10 ft (3 m) horizontally
L =	Clearance above paved sidewalk or paved driveway located on public property	7 ft (2.13 m)†	7 ft (2.13 m) for mechanical draft systems (Category I appliances). Vents for Category II and IV appliances cannot be located above public walkways or other areas where condensate or vapor can cause a nuisance or hazard*
M =	Clearance under veranda, porch, deck, or balcony	12 in (30 cm)‡	See Note 5

† A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.
 ‡ Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.

Notes:

- 1) In accordance with the current CSA B149.1, Natural Gas and Propane Installation Code.
- 2) In accordance with the current ANSI Z223.1/NFPA 54, Natural Fuel Gas Code.
- 3) If locally adopted installation codes specify clearances different than those illustrated, then the most stringent clearance shall prevail.
- 4) For clearances not specified in CAN/CSA-B149, clearance is in accordance with local installation codes and the requirements of the gas supplier.
- 5) For clearances not specified in ANSI Z223.1/ NFPA 54, clearance is in accordance with local installation codes and the requirements of the gas supplier.
- 6) IMPORTANT: Terminal must be placed such that it remains a minimum of 12" above maximum expected snow line. Local codes may have more specific requirements, and must be consulted.

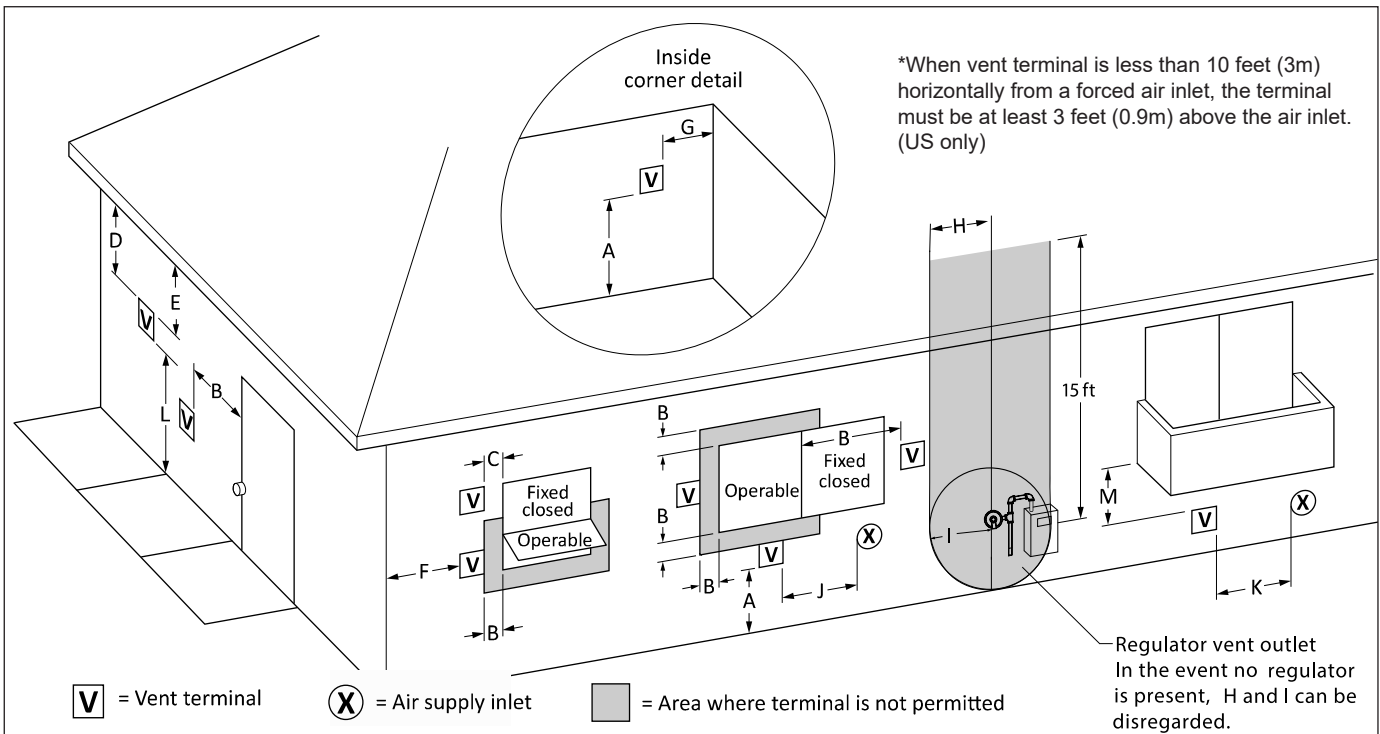


Figure 7. Combustion Air and Vent Through Side Wall

3.F Venting with a Power Venter

This boiler is certified for use with the manufacturer's suggested Power Venter, which is supplied in a kit that includes Installation Instructions. See the accessories list in the Parts Section of this manual. The location of the venter on the outside wall shall be in accordance with ANSI Z223.1/NFPA 54, or in Canada with CAN/CGA-B149 and applicable local codes.

3.G Common Vent

WARNING

When an existing boiler is removed from a common venting system, the common venting system is likely to be too large for proper venting of the appliances remaining connected to it.

Please read Section 3.A on page 11

At the time of removal of an existing boiler, the following steps shall be followed with each appliance remaining connected to the common venting system placed in operation, while the other appliances remaining connected to the common venting system are not in operation.

1. Seal any unused openings in the common venting system.
2. Visually inspect the venting system for proper size and horizontal pitch and determine there is no blockage or restriction, leakage, corrosion or other deficiencies which could cause an unsafe condition.
3. Insofar as it is practical, close all building doors and windows and all doors between the space in which the appliances remaining connected to the common venting system are located and other spaces of the building. Turn on clothes dryers and any gas burning appliance not connected to the common venting system. Turn bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
4. Place in operation the appliance being inspected. Follow the lighting instructions. Adjust thermostat so appliance will operate continuously.
5. Test for spillage at the burner opening after five minutes of main burner operation.
6. After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas burning appliance to their previous conditions of use.
7. Any improper operation of the common venting system should be corrected so the installation conforms with the National Fuel Gas Code, ANSI Z223.1. When re-sizing any portion of the common venting system, the common venting system should be re-sized to approach the minimum size as determined using the appropriate tables in Appendix G in the National Fuel Gas Code, ANSI Z223.1/NFPA 54.

3.G Événement Commun

AVERTISSEMENT

Lorsqu'une chaudière existante est retirée d'un système de ventilation commun, le système de ventilation commun est susceptible d'être trop grand pour une ventilation adéquate des appareils qui y restent connectés.

Lisez s'il vous plaît Section 3.A on page 11

Au moment du retrait d'une chaudière existante, les mesures suivantes doivent être prises pour chaque appareil toujours raccordé au système d'évacuation commun et qui fonctionne alors que d'autres appareils toujours raccordés au système d'évacuation ne fonctionnent pas:

1. Sceller toutes les ouvertures non utilisées du système d'évacuation.
2. Inspecter de façon visuelle le système d'évacuation pour déterminer la grosseur et l'inclinaison horizontale qui conviennent et s'assurer que le système est exempt d'obstruction, d'étranglement, de fuite, de corrosion et autres défaillances qui pourraient présenter des risques.
3. Dans la mesure du possible, fermer toutes les portes et les fenêtres du bâtiment et toutes les portes entre l'espace où les appareils toujours raccordés au système d'évacuation sont installés et les autres espaces du bâtiment. Mettre en marche les sècheuses, tous les appareils non raccordés au système d'évacuation commun et tous les ventilateurs d'extraction comme les hottes de cuisinière et les ventilateurs des salles de bain. S'assurer que ces ventilateurs fonctionnent à la vitesse maximale. Ne pas faire fonctionner les ventilateurs d'été. Fermer les registres des cheminées.
4. Mettre l'appareil inspecté en marche. Suivre les instructions d'allumage. Régler le thermostat de façon que l'appareil fonctionne de façon continue.
5. Faire fonctionner le brûleur principal pendant 5 min ensuite, déterminer si le coupe-tirage déborde à l'ouverture de décharge. Utiliser la flamme d'une allumette ou d'une chandelle ou la fumée d'une cigarette, d'un cigare ou d'une pipe.
6. Une fois qu'il a été déterminé, selon la méthode indiquée ci-dessus, que chaque appareil raccordé au système d'évacuation est mis à l'air libre de façon adéquate. Remettre les portes et les fenêtres, les ventilateurs, les registres de cheminées et les appareils au gaz à leur position originale.
7. Tout mauvais fonctionnement du système d'évacuation commun devrait être corrigé de façon que l'installation soit conforme au National Fuel Gas Code, ANSI Z223.1/NFPA 54 et (au) aux codes d'installation CAN/CSA-B149.1. Si la grosseur d'une section du système d'évacuation doit être modifiée, le système devrait être modifié pour respecter les valeurs minimales des tableaux pertinents de l'appendice F du National Fuel Gas Code, ANSI Z223.1/NFPA 54 et (au) les codes d'installation CAN/CSA-B149.1.

SECTION 4 Gas Connections

4.A Gas Supply and Piping

- Gas piping installation must be in accordance with the latest edition of ANSI Z223.1 and all local codes. In Canada, the installation must be in accordance with CSA-B149.1 and all local codes that apply.

Supply Pressure	Minimum	Maximum
Natural Gas	5.5 Inches WC	10.5 Inches WC
	(1.3 kPa)	(2.5 kPa)
LP Gas	10.0 Inches WC	13.0 Inches WC
	(2.4 kPa)	(3.1 kPa)

Table 3. Gas Supply Pressure Requirements

NOTE: The maximum inlet gas pressure must not exceed the specified value. The minimum value listed is for the purpose of input adjustment. Refer to **Table 4**

- Check the gas supply to be sure that it is the same as the gas indicated on the boiler's plate. This boiler, as shipped from the factory, is certified to operate within the altitude range indicated on the rating plate. If a field conversion to a different altitude range or different gas should be necessary, conversion parts are available. See Section 12.C on page 50 for part numbers.
- Use the figures in Table 4 to size the gas inlet piping from the gas meter to the heater. Check all local codes for compliance before installing the heater.
- A sediment trap (drip leg) must be installed ahead of the gas controls (**see Figure 8**). Fit the trap with a threaded cap which can be removed for cleaning.
- Install a manual gas shutoff valve for service and safety. Do not use a restrictive gas cock. Flexible gas connectors, if used, must be CSA rated for the total input rating of the boiler.
- Disconnect the boiler and its individual shutoff valve from the gas supply system during pressure testing of the system at pressures higher than 1/2 pounds per square inch (psi) (3.45 kilopascals [kPa]). If the test pressure is equal to or less than 1/2 psi (3.45 kPa), close the manual shutoff valve on the heater during the pressure test.
- If the gas supply pressure is less than required, check for oversized pipe between the meter and the boiler, a restrictive fitting, or an undersized gas meter. Gas supply pressures to the heater are listed in Table 3 on page 17.

continued on next page.

⚠ CAUTION

Permanent damage to the gas valve will occur if the following procedures are not followed.

⚠ ATTENTION

Vous endommagerez la soupape de gaz si vous ne respectez pas les procédures suivantes.

Equivalent Distance From Gas Meter	Boiler Size					
	50	75	100	125	150	200
	Needed Pipe Size					
0-50ft 0-15m	1/2 1/2"	3/4 1/2"	3/4 1/2"	3/4 3/4"	3/4 3/4"	1 3/4"
50-100ft 15-30m	1/2 1/2"	3/4 1/2"	3/4 3/4"	1 3/4"	1 3/4"	1-1/4 1"
100-200ft 30-60m	3/4 1/2"	1 3/4"	1 3/4"	1 3/4"	1-1/4 1"	1-1/4 1"

***Note:** These figures are for **Natural Gas (.65 Sp. Gr.)**, and are based on **1/2" water column pressure drop**. For LP (1.5 Sp. 11" wc) and 1/2" water column drop. Check supply pressure with a manometer, and local code requirements for variations. Pipe fittings must be considered when determining gas pipe size. See National Fuel Gas Code or local code requirements for complete pipe sizing requirements.

Table 4. Gas Pipe Size Requirements*

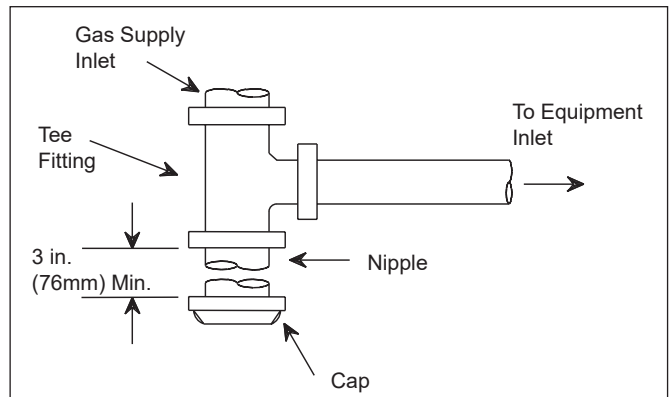


Figure 8. Typical design for a sediment trap/drip leg.

NOTE: The boiler and all other gas appliances sharing the boiler gas supply line must be firing at maximum capacity to properly measure the inlet supply pressure. Low gas pressure could be an indication of an undersize gas meter and/or obstructed gas supply line.

8. The correct manifold gas pressure is stamped on the rating plate. The regulator is pre-set at the factory, and normally requires no further adjustment.
9. Before operating the boiler, the complete gas supply system and all connections must be tested for leaks using approved methods for the authority having jurisdiction. Do not use an open flame.

⚠ CAUTION

Some leak test solutions (including soap and water) may cause corrosion or stress cracking. Rinse the piping with water after testing.

⚠ ATTENTION

Certaines solutions d'essai d'étanchéité (y compris l'eau et le savon) peuvent causer de la corrosion ou de la fissuration. Rincez les tuyaux à l'eau après l'essai d'étanchéité.

⚠ WARNING

The boiler is designed for use with either natural gas or LP gas, but only ships from the factory as natural gas. Conversion kits are available. **DO NOT ATTEMPT TO CONVERT THIS HEATER FOR USE WITH ANY OTHER TYPE OF FUEL.**

⚠ AVERTISSEMENT

Le unit est conçu pour être utilisé avec du gaz naturel ou du gaz LP, mais seulement des navires de l'usine comme gaz naturel. Des kits de conversion sont disponibles. **NE PAS ESSAYER DE CONVERTIR CET APPAREIL À UN AUTRE TYPE DE GAZ.**

4.C Special Precautions for LP Gas

LP Gas is heavier than air and can therefore more readily collect or "pool" in enclosed areas if provision for proper ventilation is not made. Be sure to pay special attention to proper ventilation for LP gas. Locate boilers a safe distance from LP gas cylinders and filling equipment. In the United States, consult the "National Fuel Gas Code" (NFPA 54 / ANSI Z223.1, latest edition) or in Canada, the Propane Installation Code (CSA-B149.2), any local codes and fire protection authorities about specific installation restrictions in your area.

4.B LP Gas Conversion

A conversion kit is available to convert this boiler for operation on LP Gas. The boiler's existing gas valve is converted by changing the valve's outlet regulator spring and resetting the outlet pressure regulator.

See Section 12.C on page 50 for kit part numbers.

The Gas Conversion Kit includes the following:

1. Gas valve regulator spring
2. Main Burner and Pilot Orifices
3. Installation Instructions
4. Conversion Label

SECTION 5 PUMP REQUIREMENTS

5.A Pump Sizing

Size	Temperature Rise											
	15°F 8°C				20°F 11°C				25°F 14°C			
	Flow Rate		Headloss		Flow Rate		Headloss		Flow Rate		Headloss	
	gpm	l/s	ft	m	gpm	l/s	ft	m	gpm	l/s	ft	m
50	5.3	0.3	0.3	0.1	4.0	0.3	0.2	0.1	3.2	0.2	0.1	0.1
75	8.0	0.5	0.6	0.2	6.0	0.4	0.3	0.1	4.8	0.3	0.2	0.1
100	10.7	0.7	1.3	0.4	8.0	0.5	0.7	0.2	6.4	0.4	0.5	0.2
125*	13.3	0.8	2.2	0.7	10.0	0.6	1.3	0.4	8.0	0.5	0.8	0.2
150*	17.0	1.1	2.5	0.8	12.8	0.8	1.8	0.5	10.3	0.6	1.2	0.4
200*	22.8	1.4	5.0	1.5	17.0	1.0	3.1	0.9	13.7	0.9	1.9	0.6

*Models 125-200 ship with a low loss header with integral pump, so a separate boiler pump does not need to be sized or field-supplied.

NOTES:

1. Shaded area represents typical temperature rise.
2. gpm = water flow in gallons per minute.
3. l/s = water flow in liters per second.
4. ft = pressure drop (headloss) through the boiler in feet of water.
5. m = pressure drop (headloss) through the boiler in meters of water.

Table 5. Water Flow Requirements and Temperature Rise

This boiler has a water tube design, and requires correct water flow for proper operation and long life. Models 125-200 are built with a low loss header with integral pump that serves the boiler and ensures proper water flow. Optional low loss header with integral pump kits, or kits with just pumps, are offered for use with models 50, 75 and 100. When neither of the optional kits are used with models 50, 75 and 100, care must be taken to choose pumps and in the design of the piping.

A typical residential pump can flow enough water for the average, properly-designed, zone system for models 50 and 75. If a zone exceeds 100 equivalent feet of 3/4" pipe, a pump may not be large enough to overcome the resistance and ensure proper water flow through the boiler.

To size the pump use the total equivalent pipe length to find its headloss and add it to the boiler headloss in Table 6. Use pump curves for pump selection. Primary/Secondary piping is another option to reduce the need to use larger pumps.

For boilers with the LLH system the boiler will maintain the proper flow through the boiler regardless of the flow through the system. This means that the system flow is now only critical to the building comfort not the boiler safety. Headloss is only calculated through the individual zones for sizing of the system pump(s).

Model Size	GPM	Equivalent Feet of 3/4" Type M Copper	Feet of Head Loss
50	5	75	4.9
		100	6.5
75	7.5	75	10.3
		100	13.8
100	10	75	17.6
		100	23.5

Table 6. Equivalent Feet and Head Loss

SECTION 6 WATER CONNECTIONS

6.A Water Piping

NOTE: This boiler must be installed in a closed pressure system with a minimum of 12 psi (82.7kPa) static pressure at the boiler.

Section 6.F on page 21 shows 'typical' plumbing installations. Be sure to provide unions and isolation valves at the boiler inlet and outlet so it can be isolated for service. Check local codes for specific plumbing requirements before beginning the installation.

An ASME pressure relief valve is supplied on all JX boilers, and is pre-set at 30 PSI. The valve outlet piping should be discharged to a drain and must be piped to discharge near the floor. It cannot have a threaded end at its termination point nor be of a closed circuit design.

A pressure reducing valve (automatic feed) must be used to maintain the system at constant proper pressure. Supply properly installed purge valves to eliminate air from each circuit.

A drain valve is supplied with the boiler. This valve is installed on the lower right side of the boiler and is used for draining the unit for service. If the boiler is being drained so that it will be left in a space that may freeze, it is critical to remove the two lower plugs from the left side of the heat exchanger. See Section 9.E on page 40 This is the only way to ensure all the water is out of the heat exchanger.

Be sure at least one air elimination device is installed in the system to eliminate trapped air from the system.

Hot water piping should be supported by suitable hangers or floor stands, NOT by the boiler. Due to expansion and contraction of copper pipe, consideration should be given to the type of hangers used. Rigid hangers could transmit noise through the system caused by the piping sliding in the hangers. Gas piping shall also be supported by suitable hangers or floor stands, not the boiler.

A properly sized expansion tank must be included in the system.

6.B Low Loss Header with Integral Pump

Models 125-200 are provided with a Low Loss Header to ensure that the boiler always receives adequate water flow for optimum efficiency, ease of installation and long life. The Low Loss Header, with its integral Boiler Pump, eliminates the need for by-pass piping because it allows the system flow and the boiler flow to be independent of each other without the cost and complexity of a typical Primary / Secondary type system. See Section 6.F

The Low Loss Header is available for the model 50, 75, and 100 as an option for smaller systems that could benefit from its use.

6.C Chilled Water Systems

If the boiler is installed in conjunction with refrigeration systems, it shall be installed so that the chilled medium is piped in parallel with the heating boiler with appropriate valves to prevent the chilled medium from entering the heating boiler.

When boiler piping is connected to heating coils, which are in close proximity to refrigerated air circulation, there must be flow control valves or other automatic methods to prevent gravity circulation of the boiler water during the cooling cycle.

6.D Oxygen Permeable Systems

This boiler must not be directly connected to a heating system utilizing oxygen permeable tubing. Provide a water-to-water heat exchanger between systems to prevent corrosion of ferrous metals such as the boiler's piping, wet walls, etc. Air elimination devices are not sufficient protection and corrosion damage is not covered under the limited warranty.

6.E Anti-freeze

Non-toxic HVAC anti-freeze may be added to the hydronic system provided the concentration does not exceed 50%, and the anti-freeze contains an anti-foamant and rust inhibitor. Follow the anti-freeze manufacturer's recommendations for yearly or biannual replacement of system anti-freeze. Never use toxic automotive anti-freeze in a boiler system.

NOTE: Manufacturer supplied pumps are not all capable of maintaining the reduced temperature rise required with glycol concentrations greater than 35%. If glycol concentrations required are greater than 35% a field supplied pump should be used.

CAUTION

Different glycol products may provide varying degrees of protection. Glycol products must be maintained properly in a heating system, or they may become ineffective. Consult the glycol specifications, or the glycol company, for information about specific products, maintenance of solutions, and set up according to your particular conditions.

6.F Typical Plumbing Diagrams

These diagrams are only meant as a guide. All components or piping required by local code must be installed.

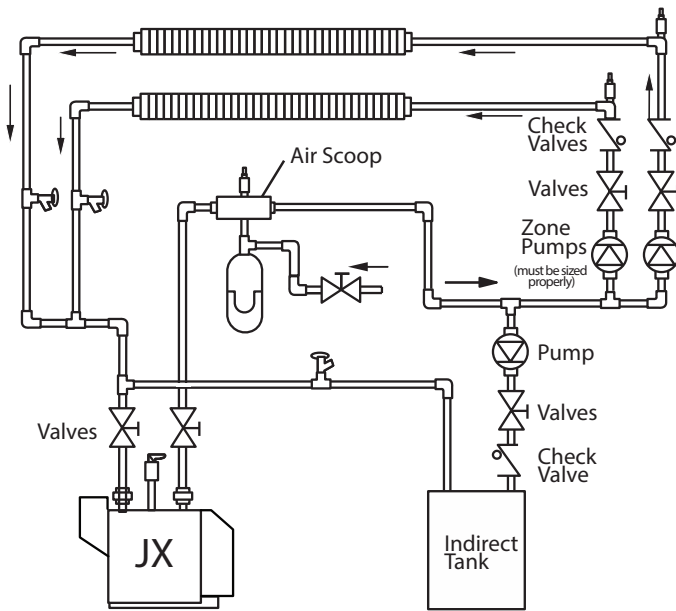


Figure 9. Zone Pumps and DHW
For models 50 - 75

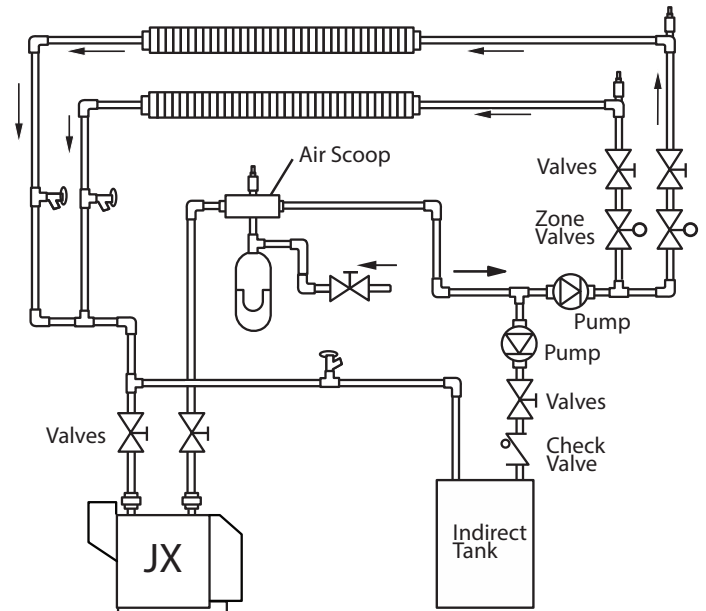


Figure 10. Zone Valves and DHW
For models 50 - 75

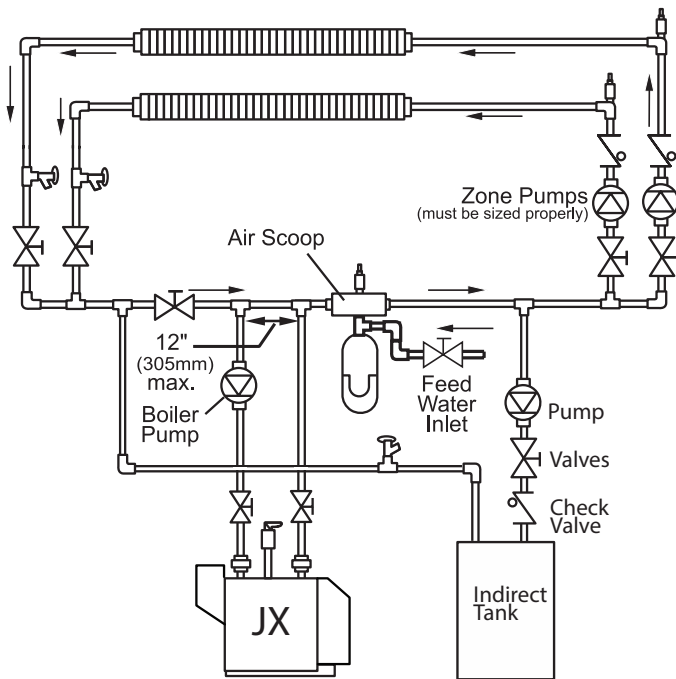


Figure 11. Primary Secondary, Multi-Zone Pump System and DHW
For model 100

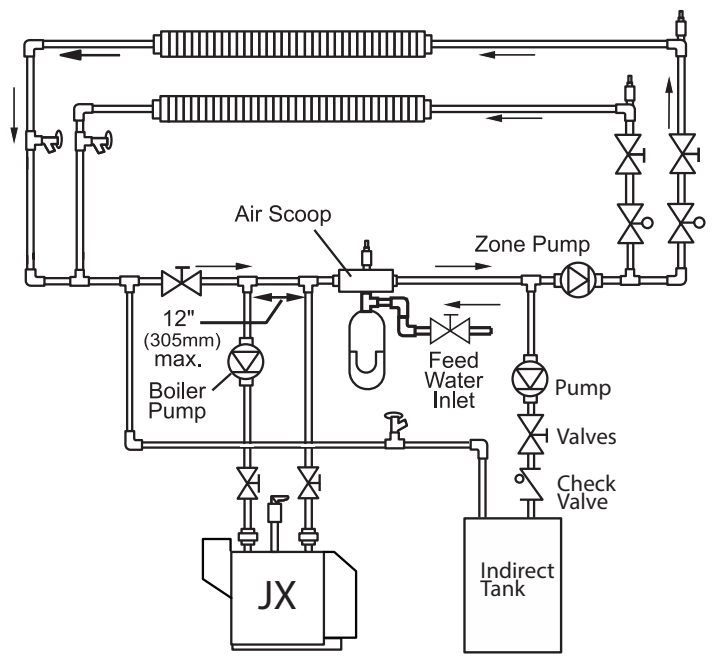


Figure 12. Primary Secondary, Multi-Zone Valve System and DHW
For model 100

NOTE: Primary Secondary piping OR Low Loss Header are required for the model 100.



Typical Plumbing Diagrams (continued)

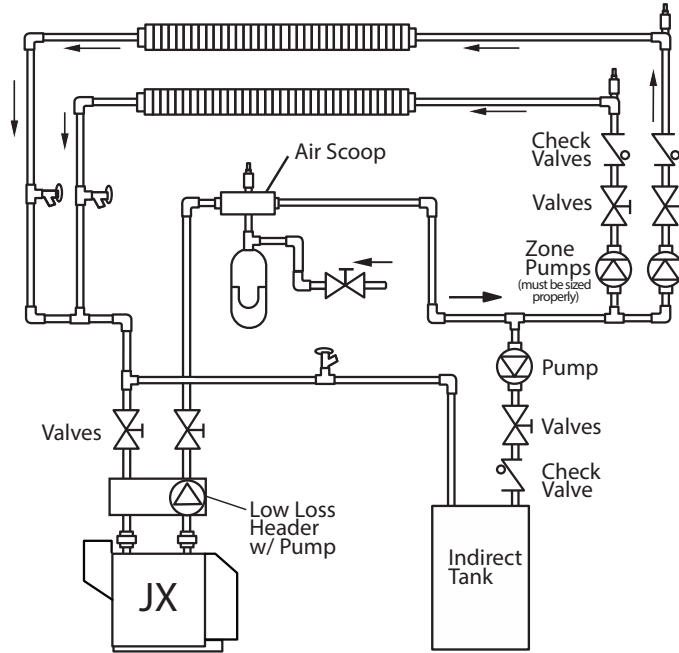


Figure 13. Low Loss Header with Zone Pumps and DHW

Low Loss Header is standard on models 125, 150, and 200 and Optional for models 50, 75, and 100.

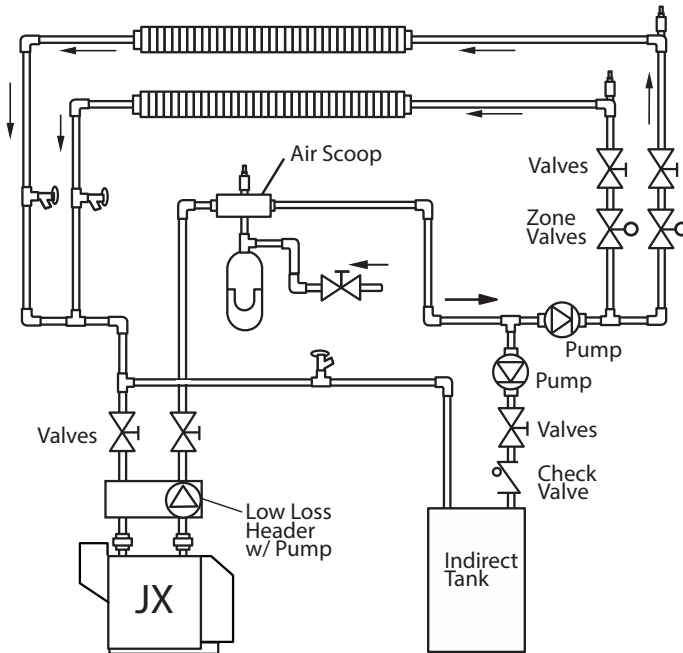


Figure 14. Low Loss Header with Zone Valves and DHW

Low Loss Header is standard on models 125, 150, and 200 and Optional for models 50, 75, and 100.

KEY:	PUMP	CHECK VALVE	VALVE	ZONE VALVE	UNION	AUTO AIR BLEEDER
------	------	-------------	-------	------------	-------	------------------

SECTION 7 ELECTRICAL AND WIRING DIAGRAMS

7.A Safety Warnings

WARNING

This unit must be electrically grounded in accordance with the requirements of the authority having jurisdiction or, in the absence of such requirements, with the latest edition of the National Electrical Code, ANSI/NFPA 70, in the U.S. and with the latest edition of CSA C22.1 Canadian Electrical Code, Part 1, in Canada. Do not rely on the gas or water piping to ground the metal parts of the boiler. Plastic pipe or dielectric unions may isolate the boiler electrically. Service and maintenance personnel, who work on or around the boiler, may be standing on wet floors and could be electrocuted by an ungrounded boiler. Electrocution can result in severe injury or death.

Single pole switches, including those of safety controls and protective devices, must not be wired in a grounded line.

All internal electrical components have been pre-wired. No attempt should be made to connect electrical wires to any other location except the terminal blocks and line voltage hanging leads / pigtail.

CAUTION

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

ATTENTION

Au moment de l'entretien des commandes, étiquetez tous les fils avant de les débrancher. Les erreurs de câblage peuvent nuire au bon fonctionnement et être dangereuses.

CAUTION

Verify proper operation after operation servicing.

ATTENTION

S'assurer que l'appareil fonctionne adéquatement une fois l'entretien terminé.

7.B Main Power, 120V

Main Power Connection: This boiler has a set of wires for the main power connection. They are located in the area between the control bezel and the conduit anchor plate. The black lead for 120V(H), the white for 120V(N) and a green lead provides an earth ground. Appropriate service switches and circuit breakers need to be installed prior to the boiler based on national and local codes having jurisdiction. The size of the main power supply should be determined by Table 7. This table indicates the unit's Full Load Amperage (FLA), Maximum Overcurrent Protection and Minimum Circuit Ampacity (MCA). An overcurrent protection value should be selected based on these numbers.

NOTE: all units with Manufacturer recommended and supplied boiler pumps may be powered using the supplied voltage.

	All Sizes	
	with Low Loss Header	without Low Loss Header
Voltage	120 V	120 V
FLA	.70 A	.20 A
MCA	.9 A	.25 A
MOP	15 A	15 A

Table 7. Boiler Electrical Data

7.C Outdoor Sensor

An optional outdoor sensor can be purchased for use with the outdoor reset or thermal targeting features that are built into the boiler's control system. (See the Accessories List in Section 12.B on page 49). The sensor must be installed in a shaded area, preferably on the north side of the structure, and must be installed above the highest expected snow line.

To use the outdoor sensor for warm weather shutdown (WWSD) only: Connect sensor to WWSD and COM terminals. The control will then operate in Economy Mode settings using Thermal Targeting. It will also shut the boiler off at outdoor temperatures higher than the selected WWSD temperature.

To utilize Outdoor Reset: Connect the sensor to OAS and COM Terminals. The control will then operate based on the selected Outdoor Reset settings. It will also shut the boiler off at outdoor temperatures higher than the selected WWSD temperature.

Once the outdoor sensor is installed, see "8.C.1 Programming the Outdoor Sensors" on page 32 for how to adjust the Outdoor reset using the controller.

7.D Field Connections

This boiler has three Field Connection Terminals. TB1, TB2 and TB3 (TB3 is for optional equipment).

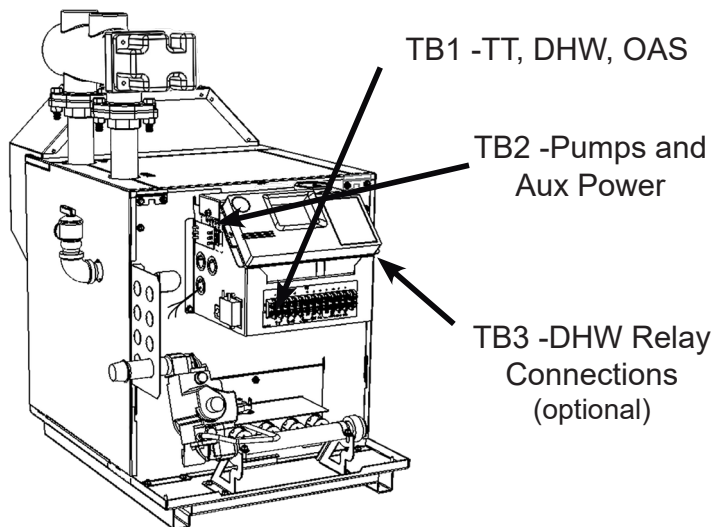


Figure 15. Terminal Block Locations

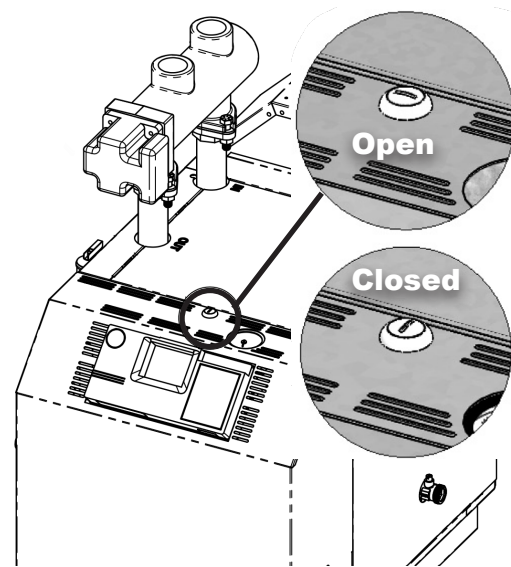


Figure 16. Unlocking the Cover

7.D.1 TB1 (Terminal Block 1 -TT, DHW, OAS)

7.D.1.a TT (Central Heat)

TT is for the end switch of a zone relay control system or direct thermostat connection. It controls the boiler to maintain the central heating.

7.D.1.b DHW.

Either a tank aquastat or the leads from the optional DHW Relay Kit will control the boiler to the high limit setpoint. See SECTION 8 for functionality.

7.D.1.c Field Interlocks

Field Interlocks allow for auxiliary limits or LWCO. Breaking these connections prevents the boiler from operating. The LIMITS LED will flash while these connections are open.

7.D.1.d PV Terminals


PV1, PV2 and PV4 (PV Terminals) are for power venters or air make up equipment (See 7.E on page 26).

7.D.1.e WWSD + COM

10K Ω outdoor air sensor will cause boiler to operate in economy mode but have warm weather shut down.

7.D.1.f OAS

10K Ω outdoor air sensor provides outdoor reset control and warm weather shut down, based on control settings.

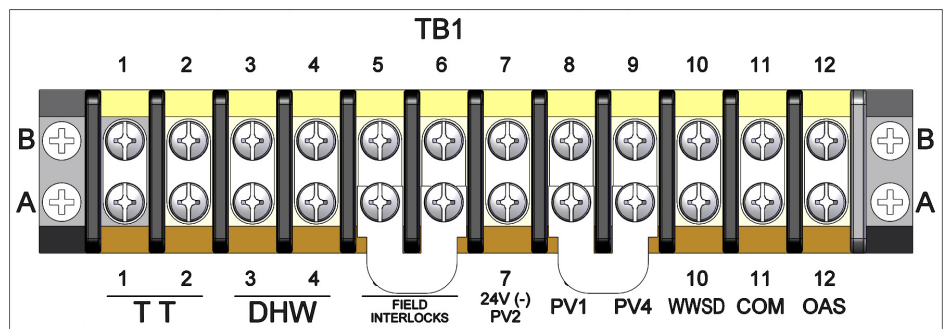


7.D.2 TB2 (for pumps and aux power)

7.D.2.a Boiler Pump

This terminal and the 120V(N) terminal will provide power to the boiler pump whenever the boiler is running. Use this to power the Low Loss Header (LLH) pump. If not using a LLH then this terminal can run power for a single zone or a zone valve system pump.

7.D.2.b SYS Pump

This terminal and the 120V(N) terminal will provide power to zone pumps or a zone valve system pump. This terminal cannot be used if the boiler does not have a dedicated boiler pump that is connected to the boiler pump terminal. When a system pump and dedicated boiler pump are piped and wired correctly, the control will energize the boiler pump only. Once the control detects high enough supply water temperature, the system pump will be energized. This feature helps protect the boiler from condensation due to low inlet water temperature.

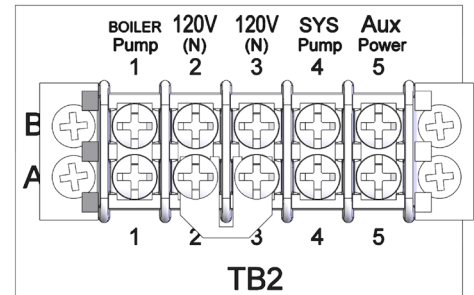

7.D.2.c Aux Power

This terminal and the 120V(N) terminal provide constant high voltage to accessories such as power vent, combustion air and/or zone relay systems. Only the field supplied service switches or the main circuit breaker will interrupt the power to these terminals.


7.D.3 TB3 (for optional equipment)

7.D.3.a DHW Pump

These two terminals along with the GND terminal provide 120V during a DHW call. They are powered continually as long as DHW Aquastat terminals are closed.

7.D.3.b DHW Aquastat

These are 24VAC terminals that energize a relay when they are closed. The relay powers the DHW pump terminals and communicates with the boiler control to switch from heating settings to set point targeting.

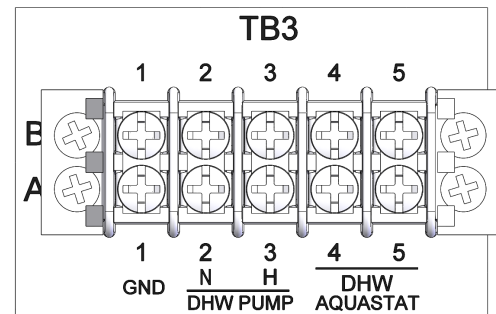

7.E Wiring Connections, Power Vent and Air

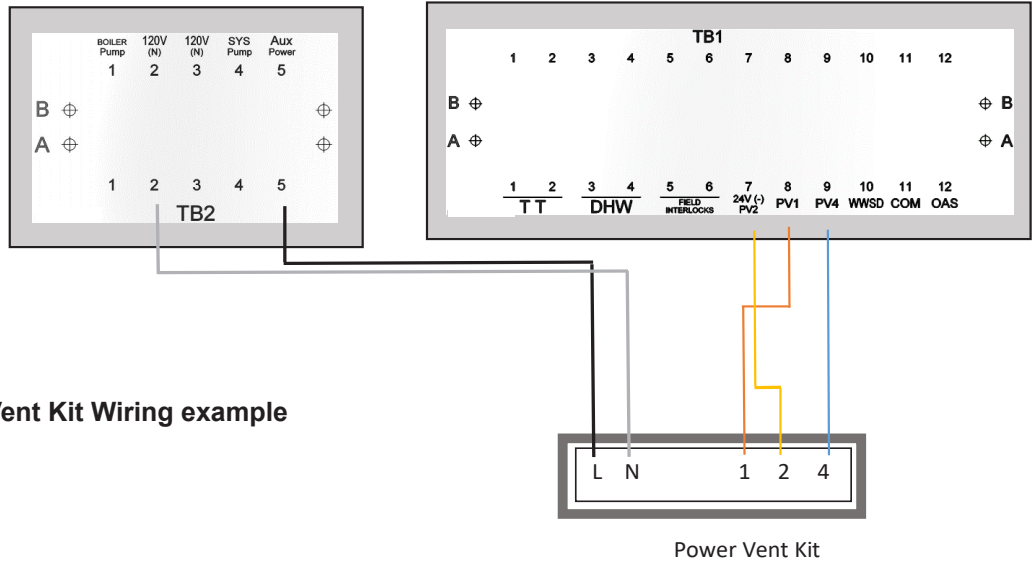


Figure 17. - Power Vent Kit Wiring example

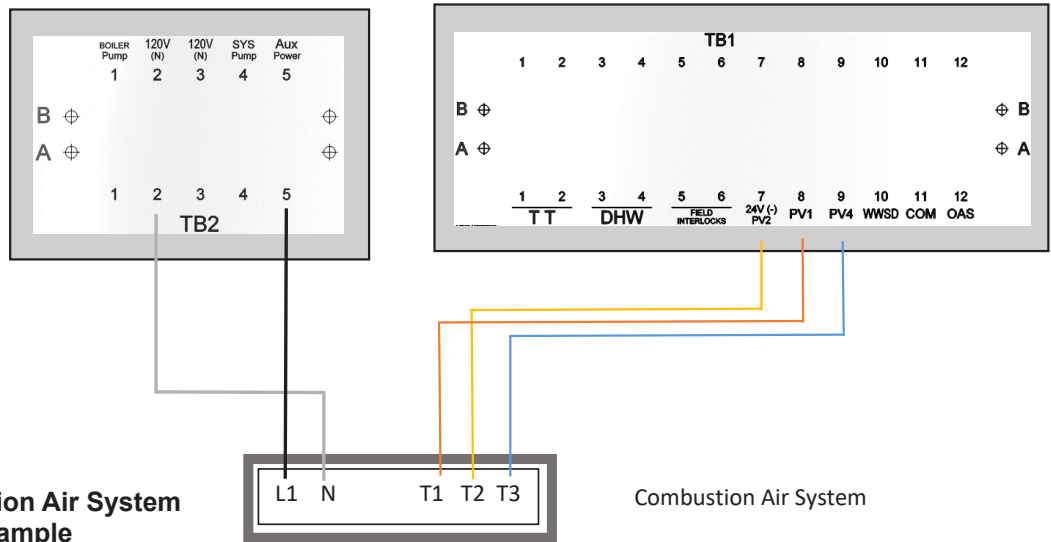


Figure 18. - Combustion Air System wiring example

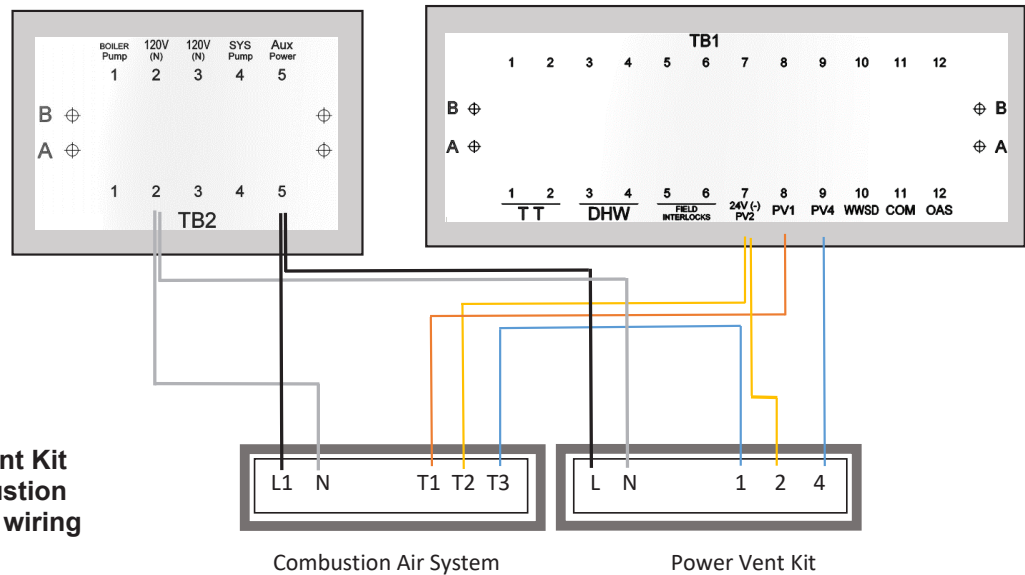


Figure 19. - Power Vent Kit and Combustion Air System wiring example

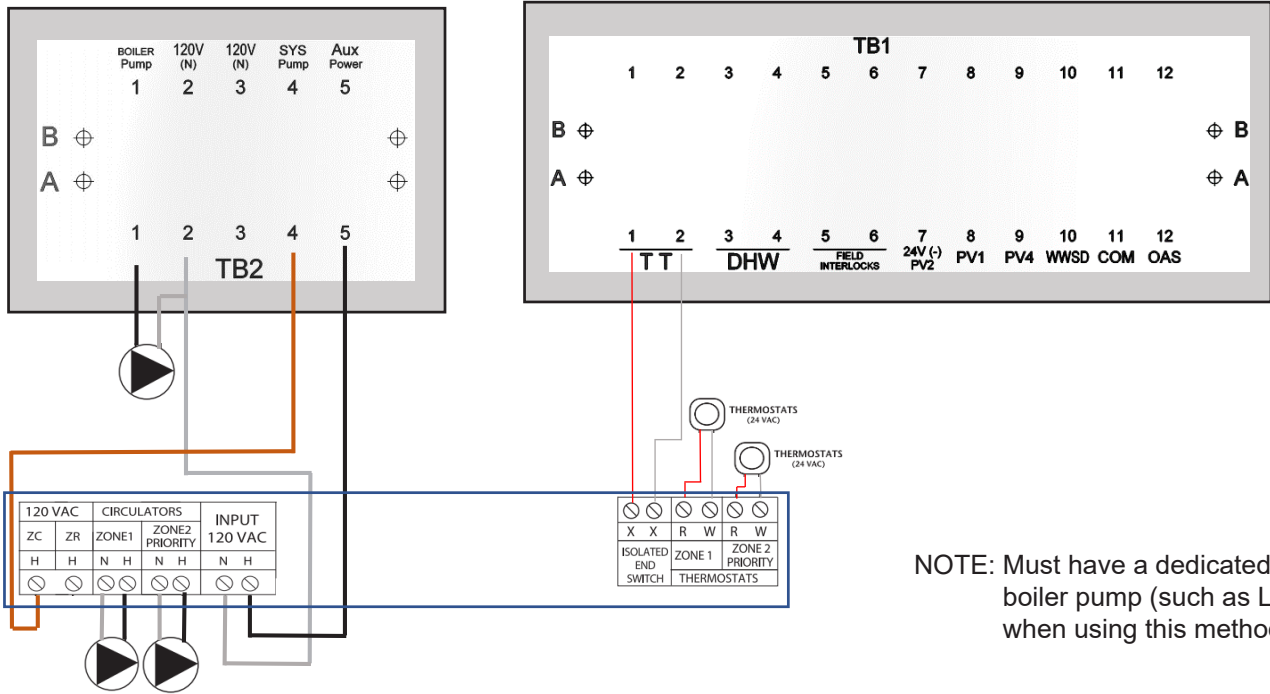


Figure 20. - Typical Zone Pump Control Wiring for Anti-condensing protection


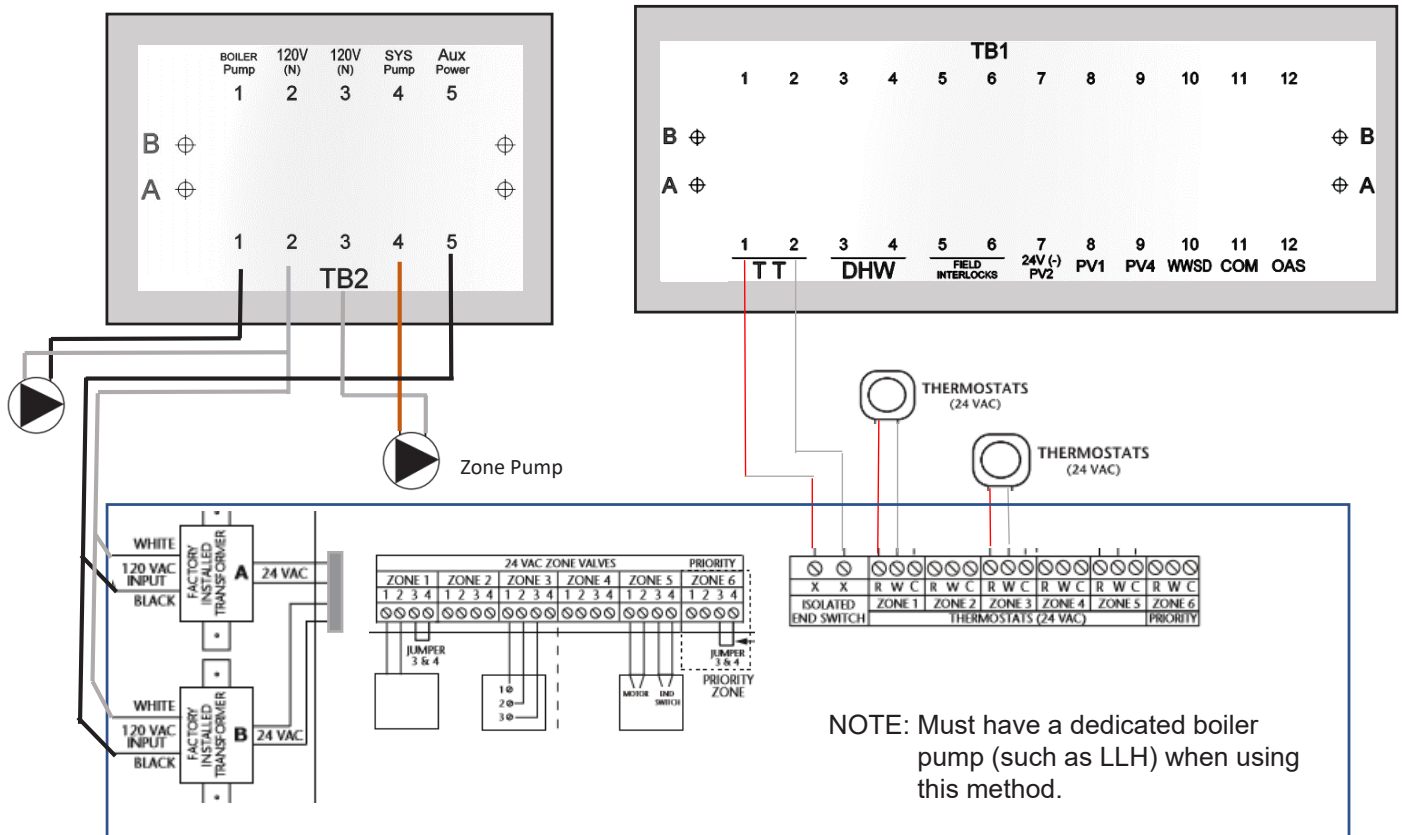


Figure 21. - Typical Zone Valve Control Wiring for Anti-condensing protection.

7.F Wiring Diagram

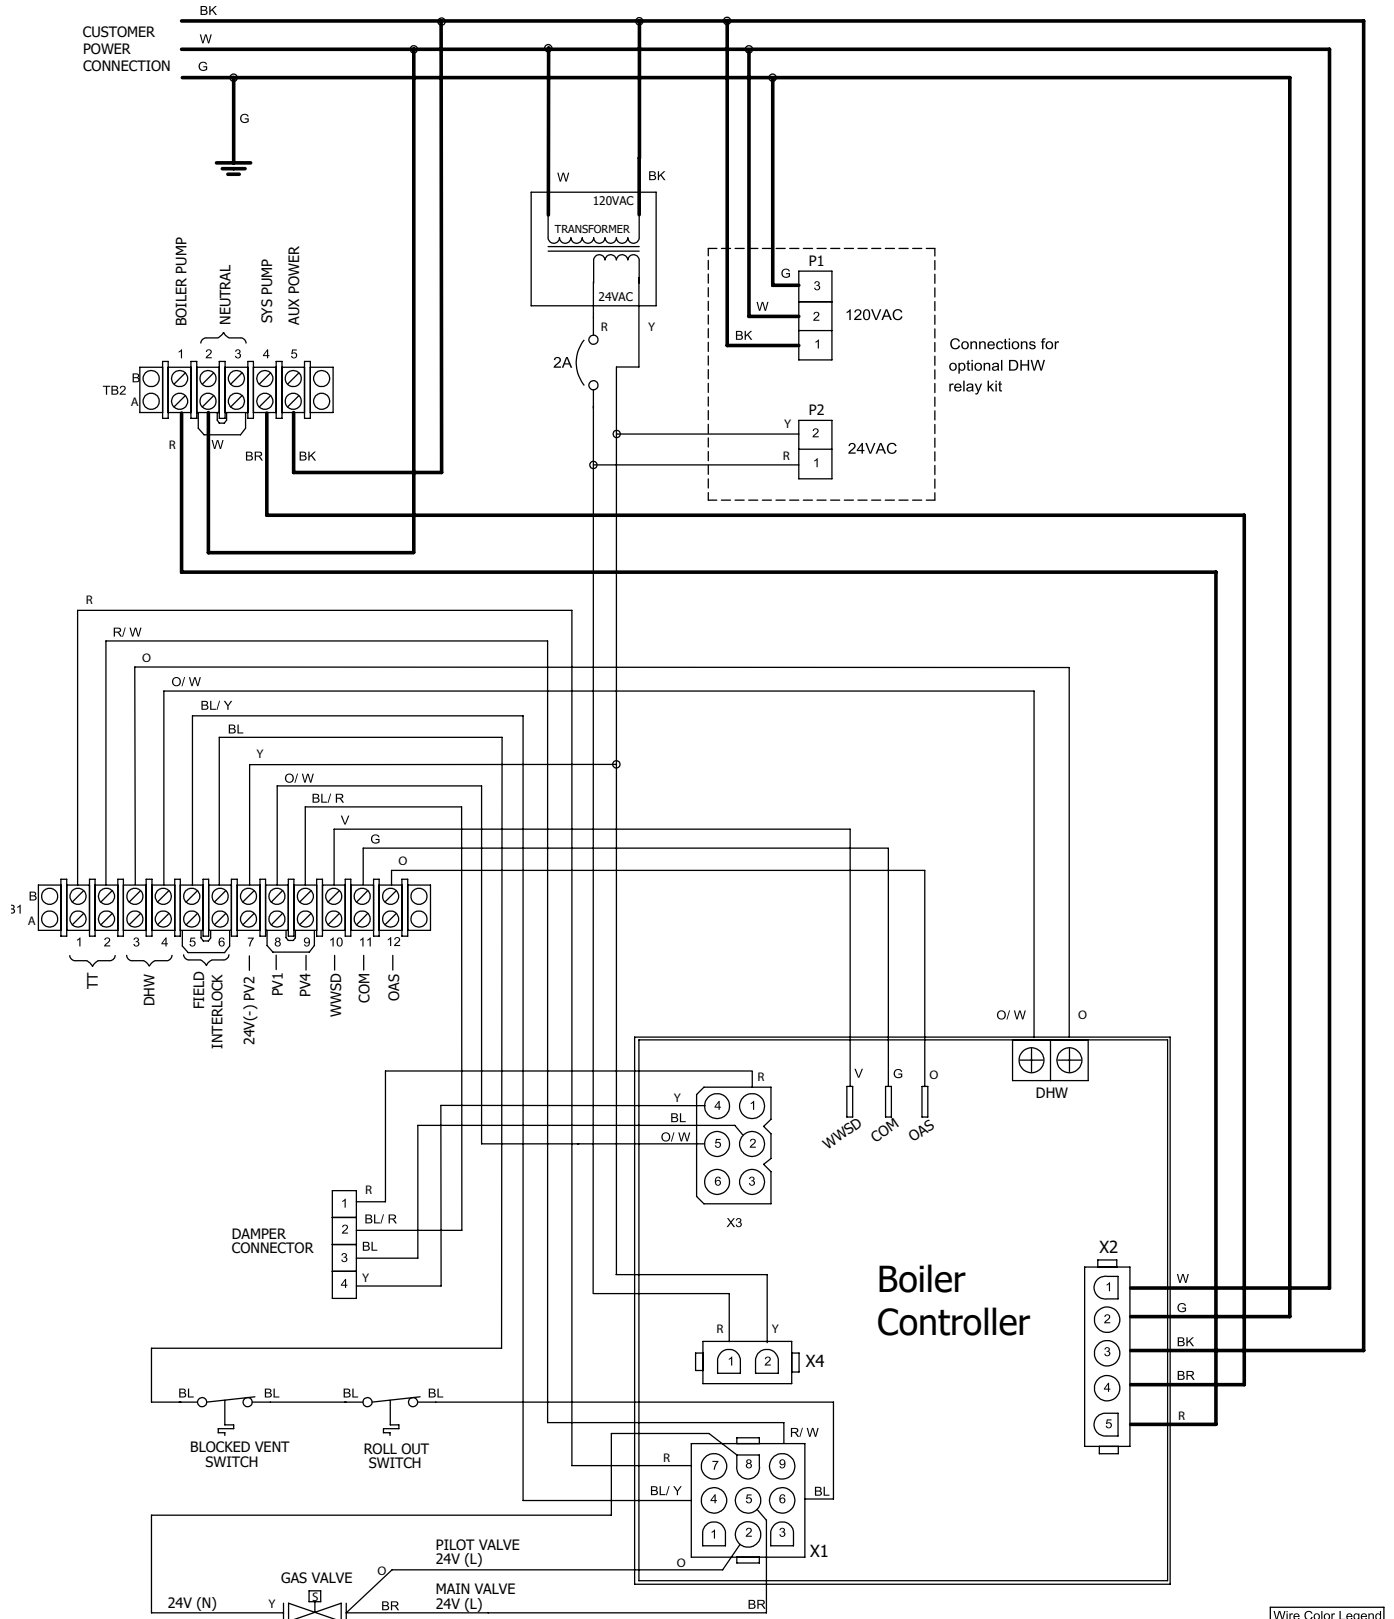

Wire Color Legend	
Black	BK
Blue	BL
Brown	BR
Green	G
Grey	GY
Orange	O
Pink	P
Red	R
White	W
Violet	V
Yellow	Y

FACTORY INSTALLED JUMPERS:
 TB1: 5 & 6 - Field Interlock
 TB1: 8 & 9 - Power Venter
 TB2: 2 & 3 - 120VAC Neutral






Figure 22. - Wiring Diagram

7.G Logic Diagram

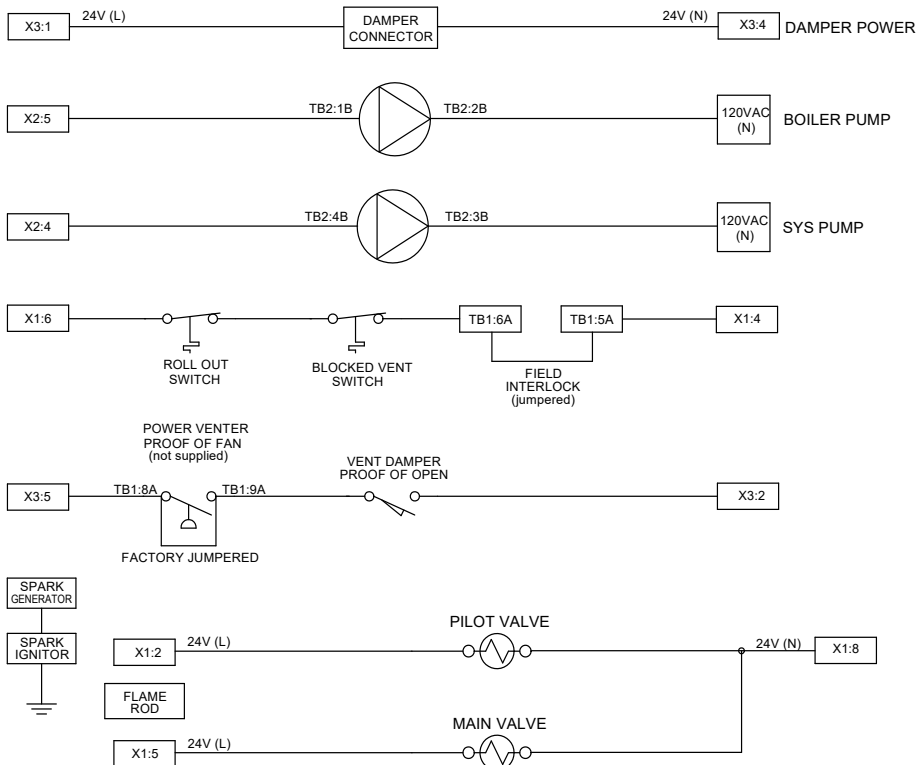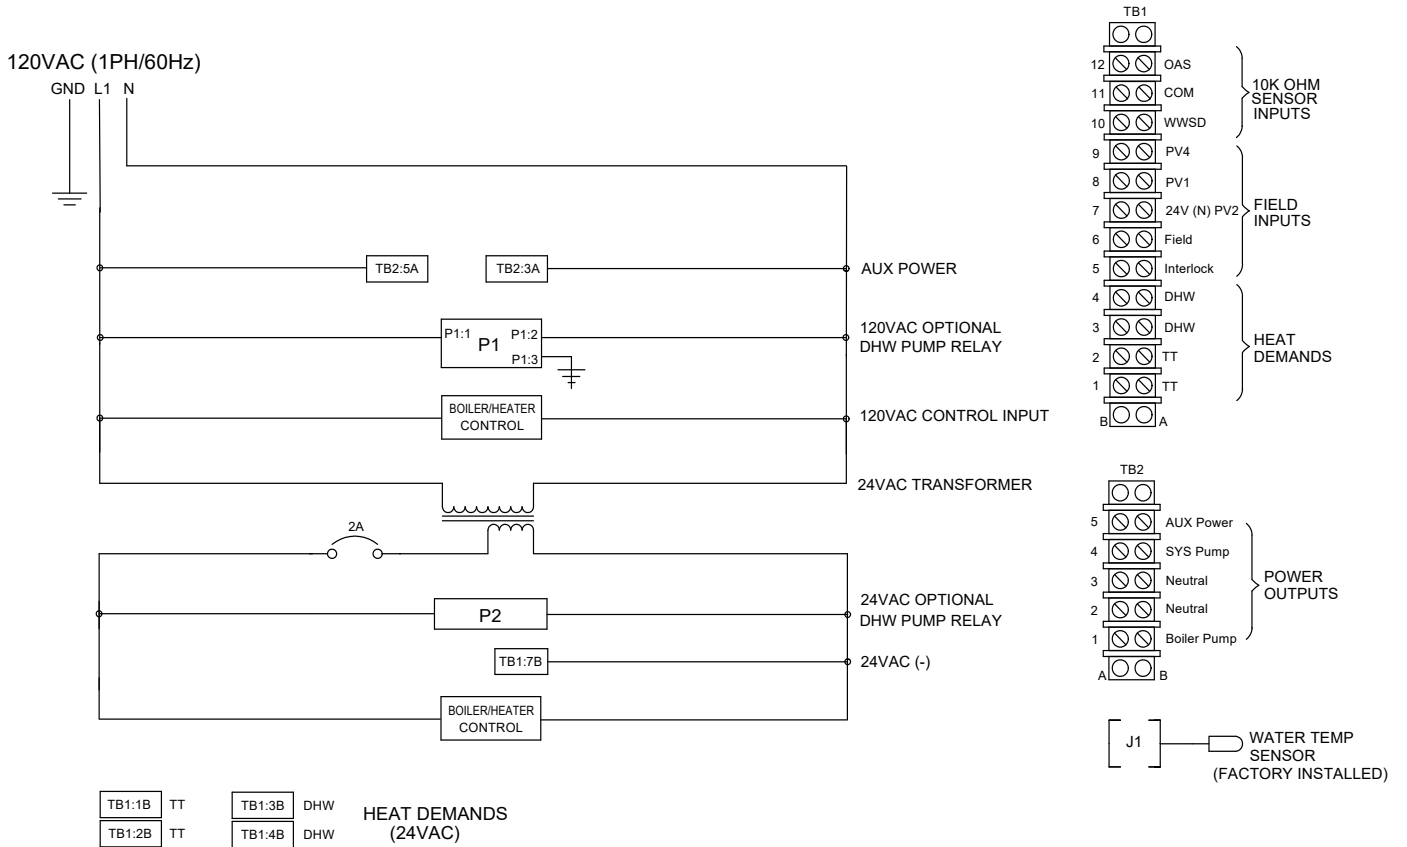

Connector Details




Figure 23. - Logic Diagram

SECTION 8 THE DIGITAL DASHBOARD

This boiler is ready to go 'Out of the Box' and into a typical single loop installation with a preset outlet water temperature of 190°F. Other than the basic installation and connecting the TT (Call for Heat) there is no further setup needed at the Digital Dashboard.

If you are installing a more advanced heating and/or DHW system, you will need to use the Economy, Hi Limit, and Lo Limit Dials. See Sections 8.A.1 and 8.A.2

8.A Getting to know the Digital Dashboard.

The digital dashboard for the controller is protected by a removable clear plastic cover. See Figure 24.

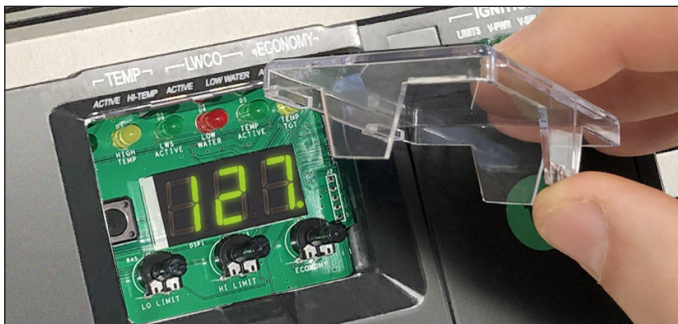


Figure 24. Remove the Cover. Return when Finished

Under the removable clear cover, there are three dials and a test button. See Figure 25 on page 31 and Figure 27 on page 35.

⚠ WARNING

Dry your hands before removing the cover and touching the dials or the test button. ALWAYS place the cover back into it's original position when you have completed your adjustments.

IMPORTANT: This boiler is equipped with a feature that saves energy by reducing the boiler water temperature as the heating load decreases. This feature is equipped with an override which is provided primarily to permit the use of an external energy management system that serves the same function. **THIS OVERRIDE MUST NOT BE USED UNLESS AT LEAST ONE OF THE FOLLOWING CONDITIONS IS TRUE:**

- An external energy management system is installed that reduces the boiler water temperature as the heating load decreases.
- This boiler is not used for any space heating.
- This boiler is part of a modular or multiple boiler system having a total input of 300,000 BTU/hr or greater.
- This boiler is equipped with a tankless coil.

The Current Status of the boiler is displayed by the various indicators along the top of the Dashboard

8.A.1 Setting the Economy Feature

The economy feature is factory set for a 1 zone heating system. To adjust, turn the economy dial until the number display equals the number of heating zones. The economy feature conserves fuel by setting varying target temperatures based on system conditions, over-riding standard limit differentials.

8.A.2 High Limit (High Temp)

The high limit is factory set at 190°F. To adjust, turn the HI TEMP dial until the desired setting is displayed. (Range: 160° - 220°F)

8.A.3 Low Limit (Advanced Options / Adjust)

Low Limit is not applicable to the JX, but this knob does have functionality for Advanced Options.

8.A.4 Control LEDs

8.A.4.a ACTIVE (TEMP)

Indicates that the control is powered and that the temperature function is active.

8.A.4.b HI TEMP

Illuminates when the boiler water temperature reaches the high limit setting. It will remain below it's differential setting. The Control prevents burner operation while this LED is on.


8.A.4.c ACTIVE (LWCO)

Indicates that the low water cut-off (LWCO) function of the Control is active.

IMPORTANT: If the control is installed with a well other than the Electro-Well, this LED will not illuminate indicating that the control is not providing low water cut-off functionality.

8.A.4.d LOW WATER

Indicates that the boiler is in a low water condition. The control will prevent burner operation during this condition. If the LOW WATER light is blinking, the control has been programmed to provide lockout protection in the event a low water condition is detected. Pressing the TEST/SETTINGS button will reset the control. **IMPORTANT:** The system must be checked by a qualified heating professional prior to resuming operation. See 8.C.3 on page 34 for more info.

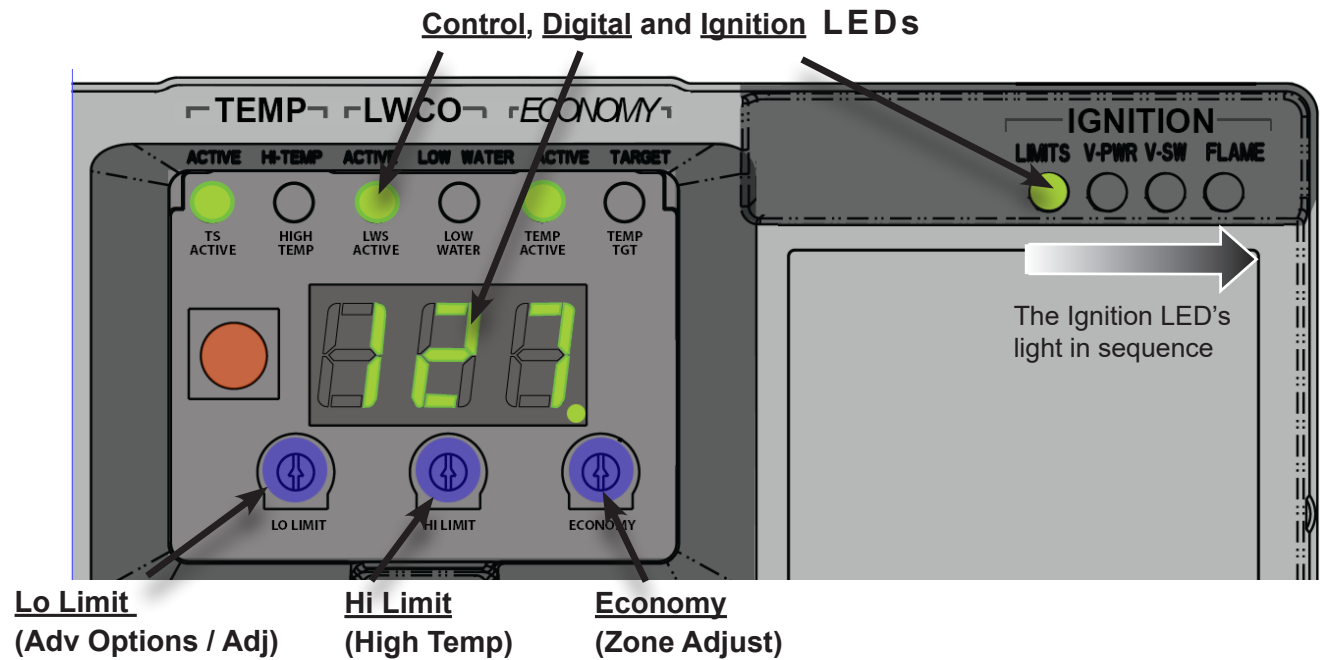

Lo Limit (Adv Options / Adj) **Hi Limit** (High Temp) **Economy** (Zone Adjust)

Figure 25. The Dials and Indicators of the Digital Dashboard

SETTING	
OFF	Disables economy function. Will allow boiler to fire until hi-limit temp is reached and will re-fire with a 30° subtractive differential (adjustable from 10°-30°).
LO	Provides lowest level of fuel savings. Use this setting only if the house does not stay warm at higher settings.
1	Recommended setting for single zone systems
2	Recommended setting for Two zone systems
3	Recommended setting for Three zone systems
4	Recommended setting for Four zone systems
5	Recommended setting for Five zone systems
HI	Provides highest level of fuel savings

Figure 26. Economy Settings

⚠ WARNING

Allow the boiler to fully cool before adding water.

8.A.4.e ACTIVE (ECONOMY)

Indicates that the Thermal Targeting function is active and the control will reduce boiler temperature to conserve fuel. The Economy feature is activated using the ECONOMY dial.

8.A.4.f TARGET

When the Economy feature is active, the control continually sets target temperatures below the high limit setting to maximize fuel efficiency. When the boiler water reaches the target temperature, the LED illuminates and the burner will shut down. The boiler water will continue to circulate and heat the house as long as the thermostat call continues. The LED will

stay lit until the boiler temperature drops below the differential set point at which point the boiler will be allowed to fire again. See 8.C.5 on page 34 for how to set the differential.

NOTE: This LED illuminates regularly during normal boiler operation.

8.A.5 Digital LEDs

The Digital Display will present the numeric value of all temperatures and setpoints and advanced programming settings.

8.A.6 Ignition LEDs

8.A.6.a LIMITS

Illuminates on a call for heat to indicate the external limits are satisfied. External limits may include flame rollout, spill switch, field interlock terminals (secondary low water cutoff etc). If the external limits are open the LED will blink.

8.A.6.b V-PWR

Indicates power has been sent to the vent damper. The damper will open causing it's end switch to close.

8.A.6.c V-SW

Illuminates when the vent damper end switch and PV1 and PV4 terminals (such as power venter and/ or air makeup air pressure switch) have closed indicating the flue is clear. If the damper end switch or the air pressure switch fail to close in 30 seconds the LED will blink.

Ignition LED's (continued)

8.A.6.d FLAME

Illuminates when the pilot flame is lit. If pilot flame is not sensed within 75 seconds or if flame is lost the LED will blink.

8.B Default Settings

This boiler is ready to go 'Out of the Box' and into a typical single loop installation with a preset temp at 190°F. If installing a more complex system,

Advanced Settings will allow you to adjust the system control to provide improved performance.

8.C Advanced Settings

8.C.1 Programming the Outdoor Sensors

Outdoor Sensors are activated automatically when the sensor is wired. See Section 7.D.1 on page 24. When connected, Outdoor reset overrides the Economy Mode. The display will toggle between boiler temperature (8 seconds) and outdoor temperature (2 seconds). If the sensor becomes damaged or disconnected, the control will automatically revert back to the Economy Mode. The display will no longer toggle outdoor temperature.

Important: the outdoor sensor must be plugged in prior to setting the control.

Before installation, determine the proper location for the sensor.

- Sensor should be mounted on the northern outside wall of the house, shielded from direct sunlight.
- Sensor should be installed high enough off the ground to protect it from accidental damage or drifting snow.
- Sensor should be installed away from potential heat sources such as exhaust fans, windows, or doors.

8.C.1.a Setting the Outdoor Reset

The outdoor reset will regulate the boiler's temperature based on the temperature outside. On cold days, the boiler will run at higher temperatures to meet the heating load in the house. On warmer days, the boiler will run cooler to save energy while still meeting the heating needs of the house.

The control's Outdoor Reset feature uses a reset ratio method to control the boiler temperature. The reset ratio determines how much the boiler temperature is adjusted for changes in outdoor temperature. A reset ratio of 2.0 means that for each 1 degree drop in outdoor temperature, the boiler temperature will increase 2 degrees. The control adds 10 degrees to the calculated reset temperature and provides a 20 degree differential for burner operation. You can check the current target temperature at any time, by pressing the Test/Settings button in four short intervals.

To set the desired outdoor Reset Ratio

1. Locate the Outdoor Design Temperature on the left side of the chart (the coldest outdoor temperature at design load conditions).
2. Locate the Boiler Target Temperature (the required supply water temperature at design load conditions) across from the Outdoor Design Temperature.
3. Follow the column up to the top of the chart to obtain the Reset Ratio setting.
4. Adjust the ECONOMY dial on the control to the Reset Ratio.

8.C.1.b Setting Warm Weather Shutdown

The warm weather shutdown feature prevents the boiler from providing space heating when the outside temperature reaches a user-selected temperature. Available settings range from OFF or 40°-70°F. The boiler will still operate to satisfy a call for domestic hot water. The factory default setting for the warm weather shutdown is 70°F.

To set the desired warm weather shutdown temperature: Press and hold the TEST/SETTING BUTTON and simultaneously adjust the ECONOMY dial to the desired setting.

To turn the feature off - which will allow space heating regardless of outdoor temperature - press and hold the TEST/SETTING BUTTON and simultaneously turn the ECONOMY dial fully counter-clockwise. Release the TEST/SETTING BUTTON. Be sure to reset the ECONOMY dial to the correct setting. Any time the outdoor temp exceeds the WWSD set point the display will toggle boiler temperature (8 seconds, outdoor temperature (2 seconds), and OFF (2 seconds).

8.C.1.c Thermal Boost

To ensure that the heating system always satisfies a call for heat, the control is equipped with a thermal boost feature. If the thermostat is not satisfied thirty minutes after the boiler reaches the reset temperature, the control will boost the reset temperature by 10 degrees. It will continue to boost at 30 minute intervals until the call is satisfied. Once the call is satisfied, the control reverts to normal operation, utilizing the calculated reset temperature.

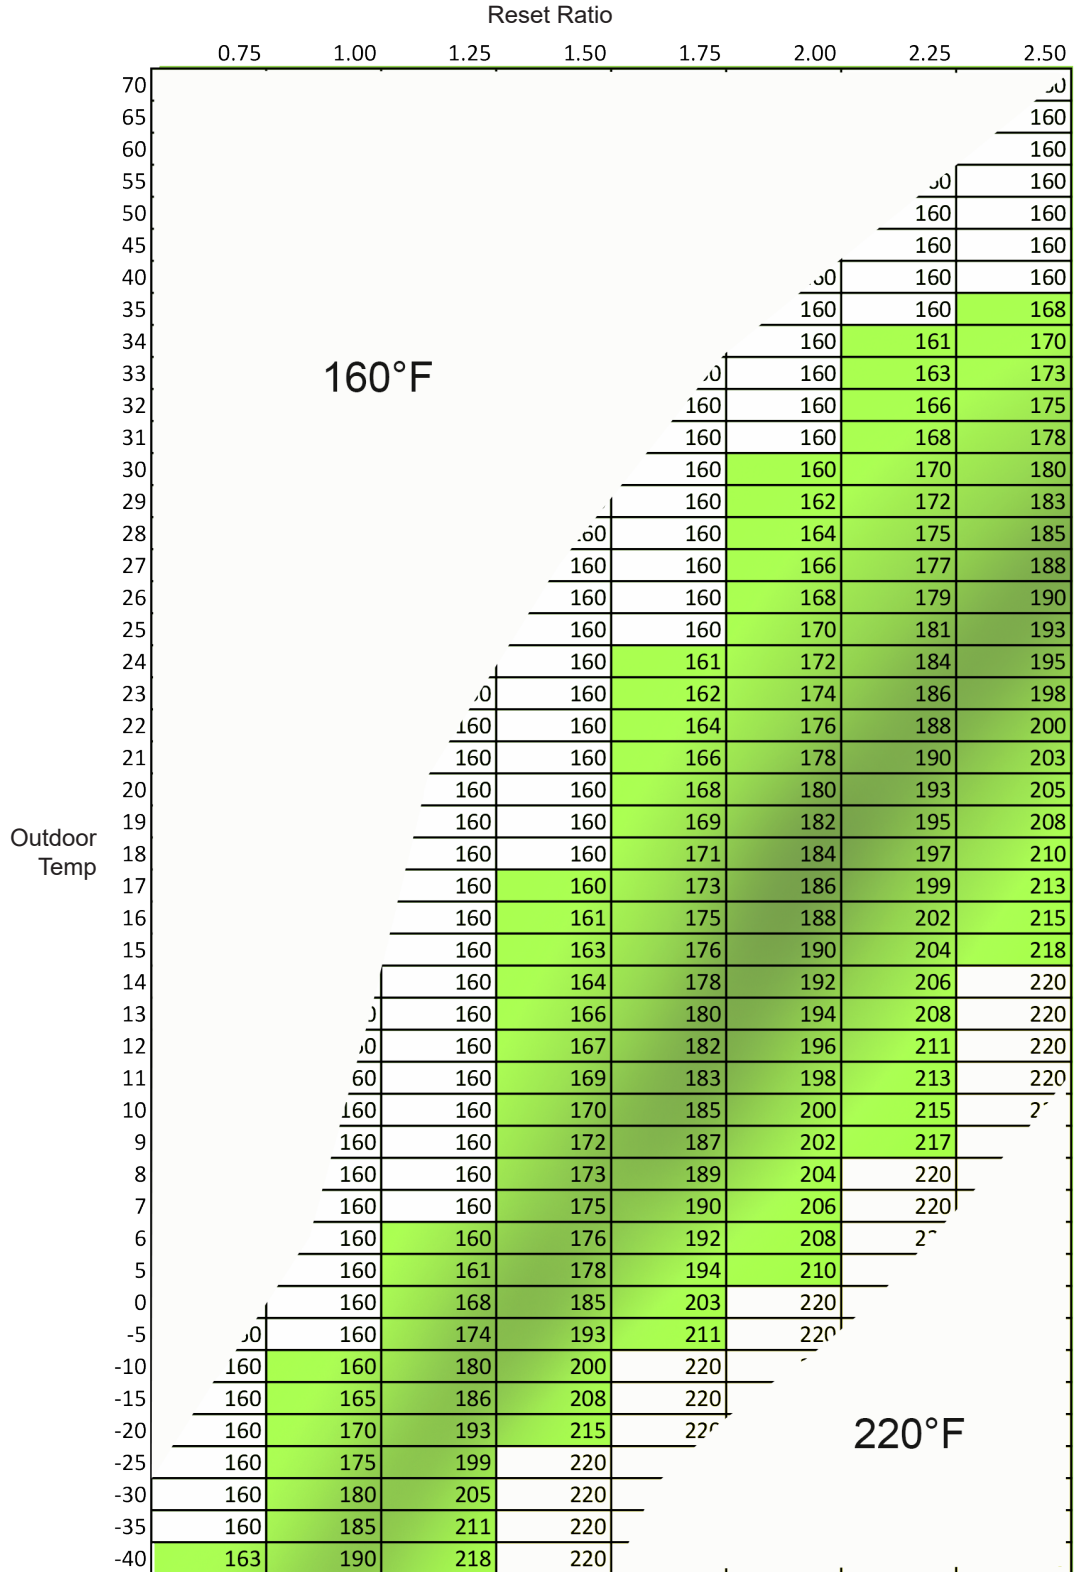


Table 8. Boiler Target Temperature

8.C.2 Degrees Fahrenheit or Celsius

The control has the ability to operate in degrees Fahrenheit or Celsius. When operating in Celsius, a c will appear in the display next to the temperature whenever the temperature is below 100 degrees.

To change between degrees Fahrenheit and degrees Celsius.

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as Pro See Figure 27 on page 35.
2. Turn the HI TEMP dial to select feature 2.
3. Push the Test/Settings Button to c for Celsius or F for Fahrenheit.
4. Reset LO TEMP and HI TEMP settings to desired temperatures.

8.C.3 Manual Reset Low Water Cut-Off

The low water cut-off operation on the control can be set to operate in automatic (default) or manual reset mode. When in manual reset mode, the control will shut-down the burner immediately when a low water condition is detected. If the low water condition is sustained for 30 seconds, the low water light will blink, indicating that the control has locked out the burner. The control can only be reset by pushing the Test Settings button on the top of the control. The manual reset feature meets CSD-1 requirements.

IMPORTANT NOTE: The system must be checked by a qualified heating professional prior to resuming operation.

WARNING

DO NOT ADD WATER UNTIL THE BOILER HAS FULLY COOLED.

To activate Manual Reset LWCO mode.

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as Pro.
2. Turn the HI TEMP dial to select feature 3.
3. Push the Test/Settings Button to A for Automatic Reset Mode or B for Manual Reset Mode.
4. Reset LO TEMP and HI TEMP settings to desired temperatures.

To Test the Manual Reset Feature: Press and hold the Test/Settings button located on the top of the control for 30 seconds to simulate a low water condition. After 30 seconds, the Low Water light will blink indicating that the control is locked out. To reset the lock-out condition, press the Test/Settings button momentarily.

8.C.4 Low water Cut-Off

To turn off Low Water Cut-Off.

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as Pro
2. Turn the HI TEMP dial to select feature 8
3. Push the Test/Settings Button to turn Low Water Cut-Off to **ON** or **OFF**
4. Reset LO TEMP and HI TEMP settings to desired temperatures

8.C.5 High Limit Differential

When the Economy feature is on, the control's Thermal Targeting feature actively sets varying differentials based on system conditions. This option allows for selecting a 10, 20 or 30 degree (Fahrenheit) fixed differential when the Economy feature is turned OFF. These optional differential settings are subtractive from the HIGH LIMIT setting.

NOTE: If the Economy feature is on, this setting will be overridden by the control's Thermal Targeting function.

To change the high limit differential.

1. Turn the LO TEMP dial to access the Program Mode –indicated in the display as Pro.
2. Turn the HI TEMP dial to select feature 9.
3. Push the Test/Settings Button to select a high limit differential of 10, 20, or 30 degrees.
4. Reset LO TEMP and HI TEMP settings to desired temperatures.

8.C.6 Restore Factory Default Settings

To restore all features to the factory default settings (see Table 9 on page 35 for default settings).

1. Turn the LO TEMP dial to access the Program Mode – indicated in the display as Pro.
2. Turn the HI TEMP dial to select feature dEF.
3. Push the Test/Settings Button to Y to reset all features to the default settings.
4. Reset LO TEMP and HI TEMP settings to desired temperatures.

Dial Setting	Feature	Options	Description	Default Setting
2	Fahrenheit or Celsius	F c	Degrees Fahrenheit Degrees Celsius	F
3	LWCO Manual or Automatic Reset	A b	Automatic Reset Manual Reset	A
8	Low Water Cut-Off Function	on OFF	Low Water Cut-Off ON Low Water Cut-Off OFF	on
9	High Limit Differential	10 20 30	10° Differential 20° Differential 30° Differential	10
dEF	Restore Factory Defaults	Y n	Restore Defaults Do Not Restore Defaults	n

Table 9. Factory Defaults

8.D TEST / SETTINGS Button

- To Test Low Water Cut-Off: Press and hold the Test/Settings button for 5 seconds. The display will read LCO. The red Low Water light should illuminate and the burner circuit should de-energize.

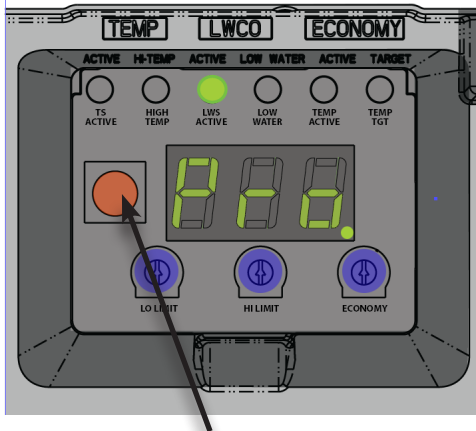


Figure 27. The Test (Reset) Button

To View Current Settings: Press and release the Test/Settings Button in short intervals to sequentially display the following settings:

- HIGH LIMIT SETTING HL
- ▼
- LOW LIMIT SETTING LL
- ▼
- ECONOMY SETTING ECO
- ▼
- FLAME CURRENT FLA
- ▼
- CURRENT TARGET TEMPERATURE 000

The display will return to boiler temperature (default) if Test/Settings Button in not pressed for 5 seconds.

8.E Temperature and Pressure Gauge



The Temperature and Pressure gauge is viewable just above the Digital Dashboard. The pressure is sensed at the top front section of the inlet/outlet header. The temperature is sensed at the outlet pipe.

SECTION 9 INITIAL STARTUP

9.A Filling the System

It is crucial to the efficient operation of the system that all air be removed from the circuit. For this reason, an air scoop and vent should be located close to the boiler outlet, and there should be a minimum distance between cold water feed and air elimination system.


1. When the system has been completely installed, and is free of leaks, open all automatic air vents and close all manual vents. Open the makeup water valve.
2. Close isolation valves. Operate purge and waste stations to purge each circuit one at a time, allowing a water makeup system to maintain pressure. During this purging process excess pressure can speed along the air removal but ensure pressure in the boiler doesn't exceed 30PSI or the relief valve will open.
3. Open all valves after all circuits have been purged.
4. Run the boiler pump for a minimum of 30 minutes with the boiler shut off. If using system pump terminals, the control won't start the pump(s) until the outlet exceeds 150F. To cool purge these zones, turn off power and temporarily connect the lead to the Aux Power Terminal. Turn on power and purge the zones. Then after purging process is complete turn power off and return the lead to Sys pump terminals.
5. Open all strainers in the system, and check for debris.
6. Recheck all automatic air vents to ensure that they are open.
7. Setup boiler according to the procedures described in SECTION 8 and operate the system, including the pump, boiler, and radiation units, for one hour.
8. Close the water makeup valve and re-check all strainers for sediment or debris. Re-open the water makeup valve.
9. Ensure make up regulator is adjusted to maintain 12-15 PSI with matching charge in the properly sized expansion tank. Verify system pressure with the boiler pressure gauge before beginning regular operation.
10. Within 3 days of start-up, recheck and bleed all air vents using these instructions. It's critical that air elimination devices are functioning properly to prevent air locked zones and boiler damage.



Indicates a call for heat

9.B System Start Up (Sequence of Operation)

1. Raise the thermostat temperature to call for heat. The third decimal, lower right of the JX Control display will light indicating a call for heat.
2. The external limits will be confirmed. If the external limits are closed the green "limits" LED will turn on. If the limits are not satisfied the green "limits" LED will blink and the start up sequence will stop until the limits are satisfied and the green "limits" LED is on.
3. Power is sent to the vent damper and the green "v-pwr" LED will light. The damper will begin to open. Power vent and air make up units will start if connected to PV1, PV2 and PV4.
4. The vent damper, power vents and air makeup units end switches will close. The green "v-sw" LED will light when the end switches close. If the switches do not close in 30 seconds the green "v-sw" LED will blink. The startup sequence will stop.

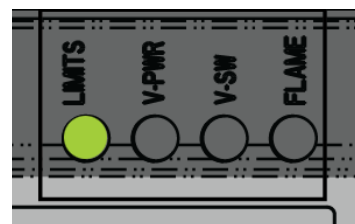

The Ignition LED's light in sequence

⚠ WARNING

Carbon monoxide hazard. The vent damper must be fully open and the flue must be clear before the main burner fires. If the burner fires when the vent damper is not fully open or the flue is blocked, dangerous flue products such as carbon monoxide will escape into the house causing severe personal injury or death. The vent damper and flue must be checked for proper operation before allowing the system to operate.

- The spark will energize and the pilot valve will turn on. There will be an audible spark every 1 second until flame is sensed.

NOTE Be sure to have a good system electrical ground. High voltage ignition can cause electrical interference if not properly grounded.

⚠ WARNING

Electrical shock hazard. The ignition circuit of the control can produce over 10,000 volts which can cause severe injury or death.

- When pilot flame is sensed the green “flame” LED will turn on. If flame is not sensed in 75 seconds the pilot valve will de-energize, the spark will terminate, and the green “flame” LED will blink. After a 5 minute delay the sequence will retry at step 5. There will be an unlimited number of retries.

NOTE: Check for good quality pilot flame. See Section 9.C on page 38.

NOTE: Check the flame current and make the necessary adjustments to the pilot valve. See Section 9.C on page 38. Flame current should be set to a minimum of 1.0 micro amp.

- When pilot flame is sensed, the main valve is energized.

NOTE: The limits, damper switch and pilot flame are continuously monitored during main valve operation. If any of these are opened or pilot flame is lost the main valve is immediately de-energized. A blinking green LED will indicate the cause of the shutdown (limits, v-sw, or flame).

- Observe the main flame pattern on all burners. There should be minimal pulsing, unstable or lifting flame patterns. See Figure 32 on page 38. For any abnormal flame check gas pressures and orifice alignment. If the gas pressures and orifice

alignments are good, then the air shutter needs to be adjusted.

On all burners exhibiting an abnormal flame, use a 5/16 inch wrench to loosen (do not remove) the air shutter locking screw. Slowly close or open the air shutter until a normal flame is observed then re-tighten its associated locking screw. Factory setting is .75” from shutter to burner orifice mounting plate. Use the Mini-Gauge to set to factory starting point. See Figure 28.

- After the startup, the ignition system safety device must be tested. To test, close the manual gas valve and verify that the burner flame is extinguished and the boiler proceeds to a lock out condition (continuous retry of pilot). Restart boiler by opening the manual gas valve.
- Allow the boiler to operate until the target temperature or high temperature set point is reached. The yellow “target” LED or the yellow “hi-temp” LED will light. The main burner and pilot flame will turn off. The “flame” LED will turn off.
- The damper will begin to close and the “v-pwr”, “v-sw”, and “limits” LEDs will turn off.
- Lower the room thermostat temperature to remove the call for heat. The third decimal, lower right of the control display will turn off

⚠ CAUTION

Burn hazard. To prevent serious burns, the boiler should be thoroughly cooled before installing or servicing the control.

NOTE: At initial start up, with the Economy Feature active, the control establishes a 160°F target temperature. To test the high limit shut-off function, the Economy Dial must be turned to OFF. Once tested, restore the Economy setting. If the heating demand is high, the target will increase over time to satisfy the heat load.

⚠ WARNING

Fire, explosion, or carbon monoxide hazard. Water damage can lead to unreliable operation or cause the control to malfunction which could lead to severe personal injury or death. Do not install the control module where it can get wet. Always replace the control if it gets wet or if it has any signs of water residue.

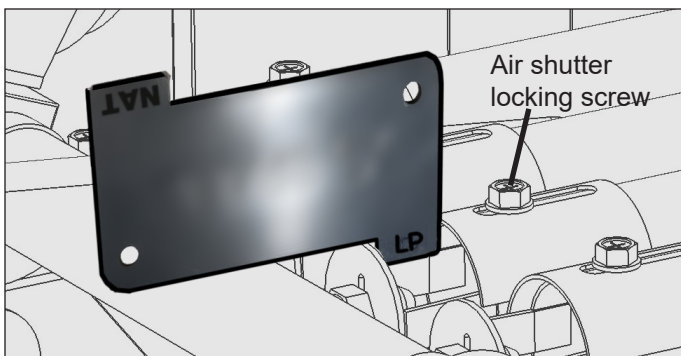


Figure 28. The Mini-Gauge. Air Shutter Adjustment

9.C Proper Pilot Flame

To view the pilot flame, the cover must be unlocked and removed. A properly adjusted pilot should have a blue, steady flame with an inner cone that engulfs 3/8" - 1/2" of the pilot ignitor sensor. The pilot ignitor sensor should glow bright orange from the heat and the flame current should be 1.0 μ A to 1.8 μ A.

NOTE: To read flame current see TEST/SETTINGS button on page 7.

If the pilot flame is over sized, orange in color, and blowing far beyond the pilot ignitor sensor then the pilot is over fired. The flame current will read outside of the nominal range of 1.0 μ A – 1.8 μ A and the pilot should be adjusted down using the valve's pilot adjustment screw, shown in Figure 29.

If the flame is small and the inner cone does not engulf the pilot ignitor sensor then the pilot is under fired. When the pilot is under fired the pilot ignitor sensor does not glow bright orange. The flame current will read below 1.0 μ A and should be adjusted up to a value between 1.0 μ A and 1.8 μ A.

NOTE: If the flame current reads below 0.8 μ A the control will continue to spark as it does not recognize an acceptable flame current.

NOTE: Flame Current reading will remain in the display for 30 seconds to allow for pilot adjustment.

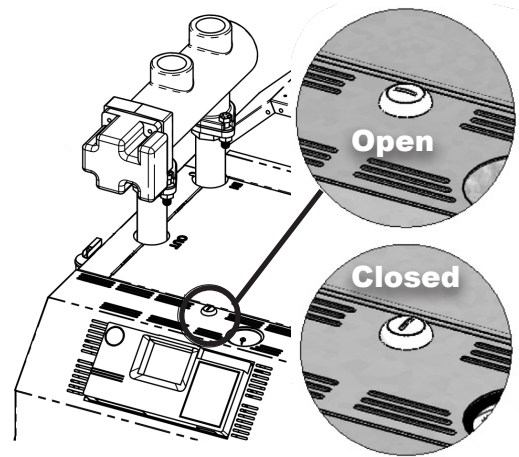


Figure 30. Unlocking the Cover

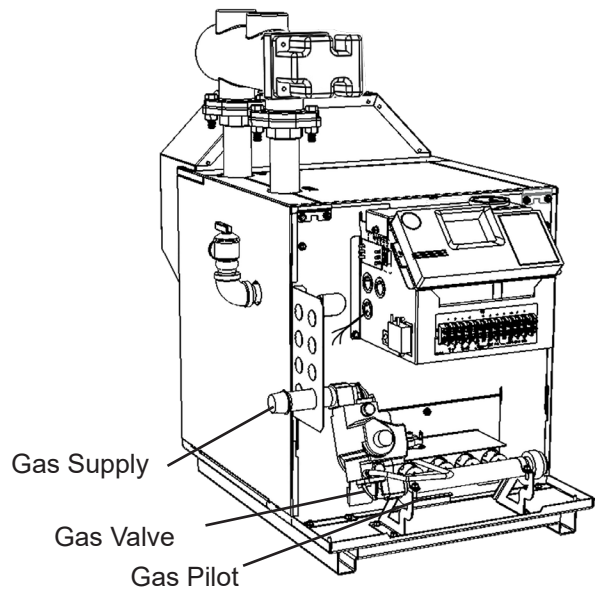


Figure 31. Without the Front Cover

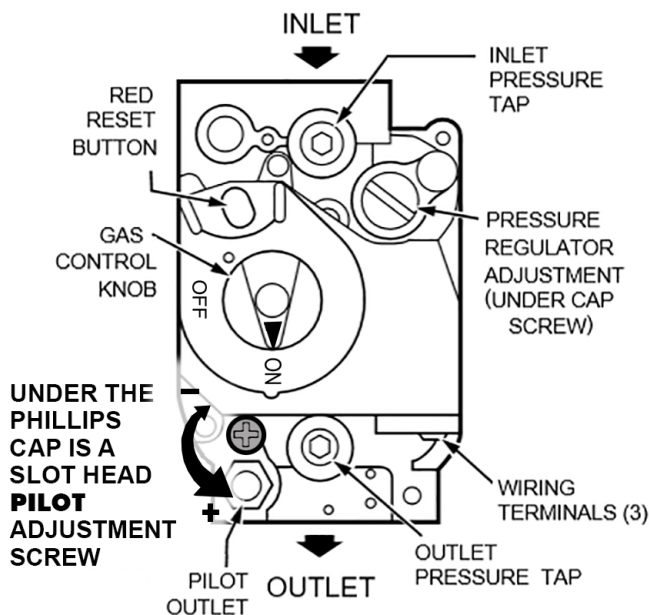


Figure 29. The Gas Valve Adjustment

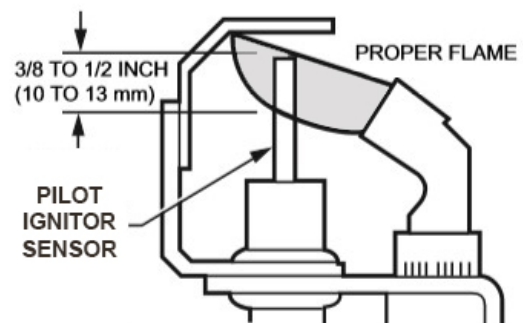


Figure 32. Flame Example

9.D Lighting Instructions Decal

Lighting instructions are located on a label on the right side of the boiler, and are depicted in this section of the manual.

For details on starting this boiler and what the digital dashboard is showing you as the boiler is started, please see Sections 8.A on page 30 and 9.B on page 36

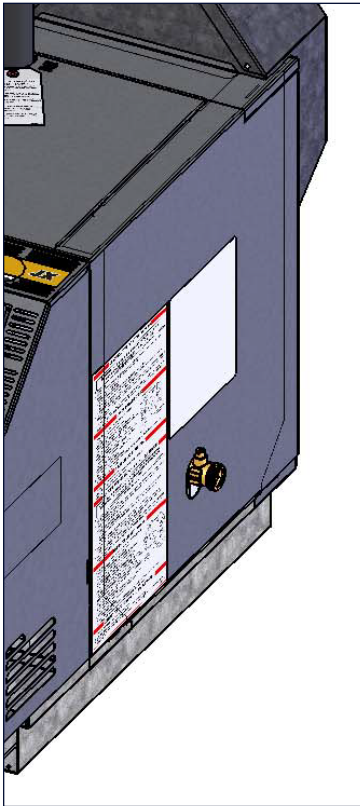


Figure 33. Located on side panel


FOR YOUR SAFETY READ BEFORE OPERATING

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This appliance is equipped with an ignition device which automatically lights the pilot. Do not try to light the pilot by hand.
- B. **BEFORE OPERATING** smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.
WHAT TO DO IF YOU SMELL GAS
 - Do not try to light any appliance.
 - Do not touch any electric switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

OPERATING INSTRUCTIONS

1. STOP! Read the safety information above on this label.
2. Set the thermostat to lowest setting.
3. Turn off all electric power to the appliance.
4. This appliance is equipped with an ignition device which automatically lights the pilot. Do not try to light the pilot by hand.
5. Turn gas control knob clockwise to "OFF".
6. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in the safety information above (to the left) on this label. If you don't smell gas, go to next step.
7. Turn gas control knob counterclockwise to "ON".
8. Set thermostat to desired setting.
9. Turn on all electric power to the appliance.
10. If the appliance will not operate, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas supplier.

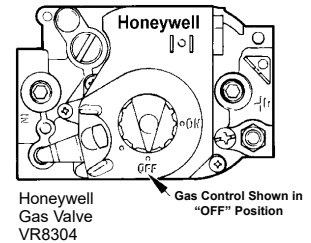

TO TURN OFF GAS TO APPLIANCE

1. Set the thermostat to lowest setting.
2. Turn off all electric power to the appliance if service is to be performed.
3. Turn gas control knob clockwise to "OFF".


POUR VOTRE SÉCURITÉ, LISEZ AVANT DE METTRE EN MARCHÉ

AVERTISSEMENT: Quiconque ne respecte pas à la lettre les instructions dans la présente notice risque de déclencher un incendie ou une explosion entraînant des dommages, des blessures ou la mort.

- A. Cet appareil est muni d'un dispositif d'allumage qui allume automatiquement la veilleuse. Ne tentez pas d'allumer la veilleuse manuellement.
- B. **AVANT DE FAIRE FONCTIONNER**, reniflex tout autour de l'appareil pour déceler une odeur de gaz. Reniflex près du plancher, car certains gaz sont plus lourds que l'air et peuvent s'accumuler au niveau du sol.
QUE FAIRE SI VOUS SENTEZ UNE ODEUR DE GAZ
 - Ne pas tenter d'allumer d'appareil.
 - Ne toucher à aucun interrupteur; ne pas vous servir des téléphones se trouvant dans le bâtiment.
 - Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur.
 - Si vous ne pouvez rejoindre le fournisseur, appelez le service des incendies.
- C. Ne poussez ou tournez la manette d'admission du gaz qu'à la main; ne jamais utiliser d'outil. Si la manette reste coincée, ne tentez pas de la réparer; appelez un technicien qualifié. Le fait de forcer la manette ou de la réparer peut déclencher une explosion ou un incendie.
- D. N'utilisez pas cet appareil s'il a été plongé dans l'eau, même partiellement. Faites inspecter l'appareil par un technicien qualifié et remplacez toute partie du système de contrôle et toute commande qui ont été plongés dans l'eau.

INSTRUCTIONS DE MISE EN MARCHÉ

1. ARRÊTEZ ! Lisez les instructions de sécurité sur la portion supérieure.
2. Réglez le thermostat à la température la plus basse.
3. Coupez l'alimentation électrique de l'appareil.
4. Cet appareil est muni d'un dispositif d'allumage automatique de veilleuse. Ne pas tenter d'allumer la veilleuse à la main.
5. Tourner le bouton de commande dans le sens des aiguilles d'une montre pour le mettre en position d'arrêt "OFF".
6. Attendre cinq (5) minutes pour laisser échapper tout le gaz. Reniflex tout le gaz. Reniflex tout autour de l'appareil, y compris près du plancher, pour déceler une odeur de gaz. Si vous sentez une odeur de gaz, ARRÊTEZ ! Passez à l'étape "B" des instructions de sécurité sur la portion supérieure (à gauche) de cette étiquette. S'il n'y a pas d'odeur de gaz, passez à l'étape suivante.
7. Tourner le bouton de commande dans le sens contraire des aiguilles d'une montre pour le mettre en position de marche "ON".
8. Réglez le thermostat à la température désirée.
9. Mettez l'appareil sous tension.
10. Si l'appareil ne se met pas en marche, suivez les instructions intitulées "Comment couper l'admission de gaz de l'appareil" et appelez un technicien qualifié ou le fournisseur de gaz.

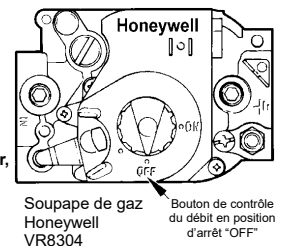

COMMENT COUPER L'ADMISSION DE GAZ DE L'APPAREIL

1. Réglez le thermostat à la température la plus basse.
2. Coupez l'alimentation électrique de l'appareil s'il faut procéder à l'entretien.
3. Tourner le bouton de commande dans le sens des aiguilles d'une montre pour le mettre en position d'arrêt "OFF".

9.E System Shutdown

1. Turn off the main electrical disconnect switch.
2. Close all manual gas valves.
3. If you think the unit might freeze, drain it. All water must be removed from the heat exchanger, or damage from freezing may occur. To completely drain the boiler, first drain the right side by opening the boiler drain. Then remove the PRV and related fittings. Then remove the top and left side panels. Remove BOTH 1/2" plugs from the side of the boiler located at the bottom of the casting. Once the water is fully drained, reinstall the plugs and panels. See 10.A.3
4. Be sure to protect the piping in the building from freezing.

⚠ WARNING

This step must be performed by a qualified service technician.

SECTION 10 MAINTENANCE

10.A Removing the covers and panels

10.A.1 Access Cover Removal

To remove the front access cover simply turn the lock at the top center of the panel with a flat screw driver (slot indicates locking arm direction). Lift slightly and tip the top of the panel forward.

Reverse the process to reinstall.

⚠ WARNING

Do not leave this panel off in normal operation. High voltage and temperatures could cause a hazardous condition

10.A.2 Flue Collector Access

After removing the front access cover, the top access panel can then be lifted up and off the unit. This will expose the flue collector. Lift the flue collector using the handle in the front and slide it up and out. This will allow access to the top of the heat exchanger for cleaning.

Re-install the flue collector in reverse order, **ensuring that the front tabs contact the castings and the bottom flange is inserted into the front heat exchanger baffle.** Return the top panel by inserting the rear edge first at approximately a 15-degree angle then dropping the front. There is a slight spring force pushing forward.

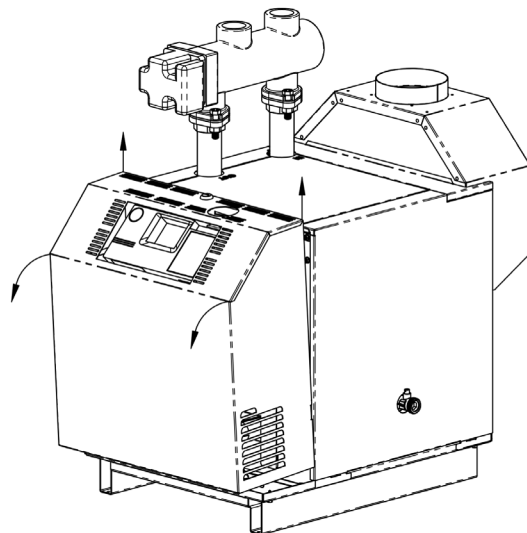


Figure 34. Remove the Front Cover

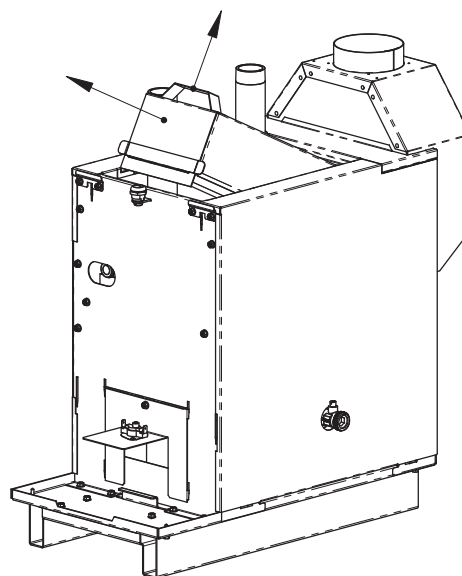


Figure 35. Lift Flue Collector Up and Out

10.A.3 Side Panel Removal

Remove the front access and the top as described previously. Drain the boiler and remove the drain valve and/or the PRV and associated fittings depending on the panel being removed. Then pull upward and inward slightly at the top inside flanges. These are spring type latches which will release as force is applied upward.

Reinstall by placing the panel at a slight angle to line up the bottom flange, tip it in until straight up, then push down until the upper spring catches.

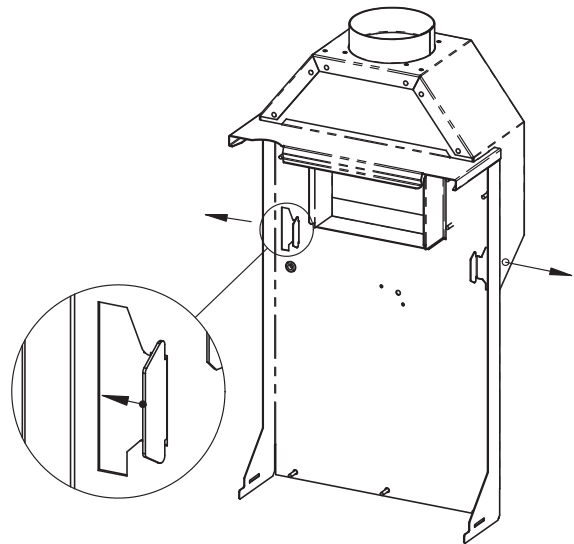
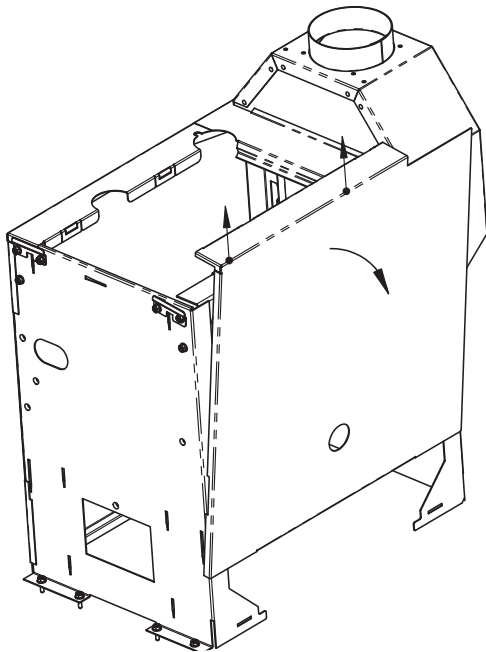
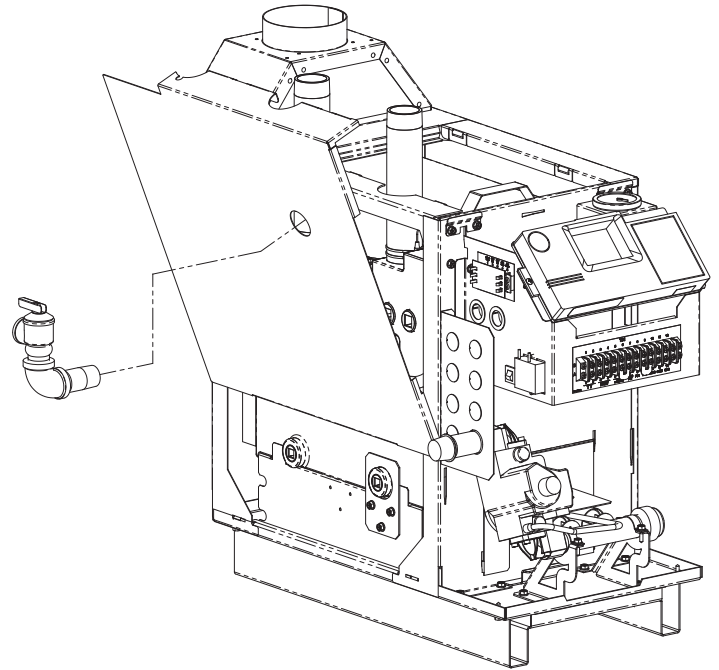



Figure 36. Side Panels and Draft Hood Removal

10.A.4 Draft Hood Removal

First remove the vent pipe. Keep all parts organized for reassembly.

Pull both bottom flanges outward approximately an inch. This frees the latching flanges which then allow the bottom to be pulled away from the boiler. With the hood at a slight angle, slid backward and upward freeing the top flange from the jacket.

Reverse the process to reinstall.

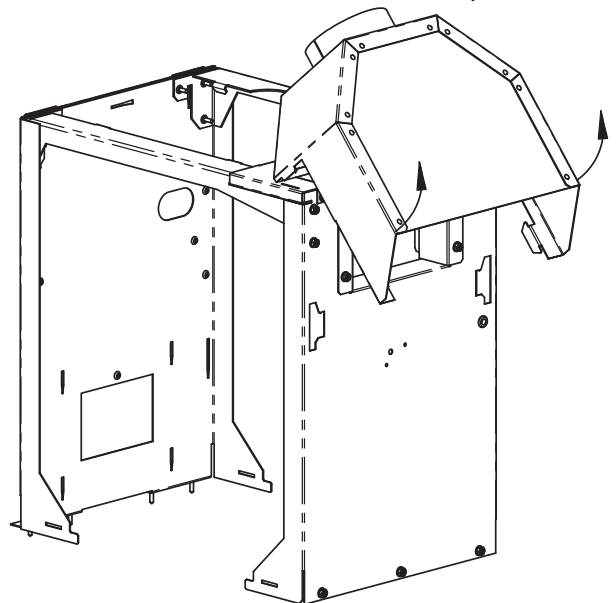

10.B Maintenance

1. Lubricate any motor bearings that are not sealed bearings per the instructions.
2. If a strainer is employed in a pressure reducing valve or the piping, clean it every six months or as needed.
3. At start-up, and periodically thereafter, the burner and pilot flames should be observed. If the flame has the appearance of "sooting" tips, check for debris near the orifices. Clean any debris from orifice area and remove burners to ensure they are debris free inside and out. If this doesn't clear the issue the heat exchanger likely needs cleaning.
4. Ensure Vent Damper motors open and close by watching the connecting rod between the stack and the motor housing. The boiler should never start if the damper is not in the open position. If it does, it is critical to safe operation that this gets repaired.
5. Inspect the venting system for obstruction, leakage or corrosion at least once a year.
6. Keep the boiler area clear and free from combustible materials, gasoline, and other flammable vapors and liquids.
7. Be sure that all combustion air and ventilation openings are unobstructed.
8. This boiler has easy access through the top cover and the flue collector for inspection of the heat exchanger. Follow instructions in the following sections to address cleaning out debris. It is critical to ensure that the flue collector sits in the proper position so that no flue products will escape into the living area of the building.
9. If the boiler is not going to be used for long periods of time in locations where freezing occurs, it should be completely drained of all water. To accomplish this, there is a drain valve on the right side of the boiler which can be opened. This will drain the right side of the boiler. There are two plugs located on the left side of the heater which can be accessed by removing the side panel which must be removed to drain that side. **BOTH SIDES MUST BE DRAINED.** See Section 9.E on page 40
10. The gas and electric controls on the boiler are engineered for long life and dependable operation, but the safety of the equipment depends on their proper functioning. It is strongly recommended that these basic items listed be inspected by a qualified service technician every year.
 - a. Water temperature controls.
 - b. Pilot safety system.
 - c. Automatic gas valves.
 - d. Low Water Cut Off (ensuring the Ectro-well

is cleaned of exterior residue periodically based on system conditions)

- e. Mechanical flue damper operation.
- f. Pressure Relief Valve.

WARNING

The Warranty does not cover damage caused by lack of required maintenance, lack of water flow, or improper operating practices.

AVERTISSEMENT

La garantie ne couvre pas les dommages causés par l'absence d'entretien, absence de débit d'eau, ou pratiques de fonctionnement irrégulières

11. Inspect the heat exchanger for fouling. Fouling on the external surfaces of the heat exchanger is caused by incomplete combustion, and is a sign of venting and/or combustion air problems or too cold of a return water temperature. The heat exchanger can be inspected by using a flashlight and placing a mirror under the burners. An alternate method is to remove the top panel to inspect the exchanger from above. The vent system should be inspected at the same time. If cleaning is required:
 - a. Shut off all power to the boiler.
 - b. Remove the top, flue collector, and heat exchanger baffles.
 - c. Remove the burners
 - d. Use a hand-operated spray bottle filled with water, and a wire brush to clean soot and loose scale from the underside of the heat exchanger. **DO NOT USE COMPRESSED AIR, HIGH PRESSURE WATER, OR A GARDEN HOSE.**
 - e. Clean any fallen debris from the bottom of the unit.
 - f. Check to make sure the burner ports and pilot assembly are free of debris before returning the burners to their original positions.
 - g. Reassemble the boiler in reverse order, making sure to replace the heat exchanger baffles and flue collector into the proper location.

SECTION 11 Operating Details and Troubleshooting

11.A Operating Details

When power is turned on, the digital display will indicate the Boiler Outlet Temperature. If a demand for heat is received from a room thermostat or a tank aquastat (if provided) the third decimal LED, located at the lower right of the last temperature digit, will illuminate to indicate that a call for heat has been received and the startup has been initiated. See Section 9.B for details. If the LED is not illuminated, that indicates that the System Startup has not been initiated because all system parameters are not in their proper operating range. See Section SECTION 11 for details and corrective procedures.

11.B Electrical Troubleshooting

1. Remove the front cover of the boiler.
2. Verify that 115 volts is reaching the boiler by testing at terminals 2 and 5 on TB2.
3. Verify 24 volt transformer output by placing the meter leads on terminals 1 and 7 on TB1. If 24VAC isn't present, check circuit breaker located next to the transformer. Reset (once issue is resolved) if it is tripped. If that appears good remove the control panel to gain access to the internal control wiring. Check transformer across the male push on terminals of the transformer.
4. To perform 24 VAC voltage checks attach one meter lead to terminal 7 of TB1. Use the other lead to check for power on any switch on the boiler.
5. To perform voltage checks on 120VAC attach one meter lead to either terminal 2 or 3 of TB1. Use the other lead to check for power at any high voltage terminal or device.
6. Use Section 8.C on page 32 to follow the sequence of operation, the wiring diagrams, or to follow where the power should be based on the information coming from the control panel's lights. Understanding the control panels messages will help to localize the fault.

⚠ CAUTION

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

⚠ ATTENTION

de mise en garde tous les fils avant le débranchement lors de l'entretien. Les erreurs de câblage peut causer le mauvais et dangereux. Vérifier le fonctionnement correct après l'entretien

⚠ WARNING

Follow local regulations with respect to installation of carbon monoxide (CO) detectors and manufacturer's maintenance schedule of the boiler.

⚠ AVERTISSEMENT

Conformez-vous aux réglementations locales pour ce qui est de l'installation de détecteur de monoxyde de carbone (CO) et du programme de maintenance du fabricant de la chaudière.


Temp (F)	Ohms
77	30,000
100	17,300
120	11,200
140	7,400
160	5,000
180	3,500
200	2,400
210	2,100

Table 10. Thermistor Readings


11.C Troubleshooting Table

#	Symptom	Cause	Remedy
1	Boiler Pump not operating	No power Pump defective Incorrectly wired	Check circuit breakers and power source. Replace. Recheck wiring diagrams (System pump will not work if below 160°F or if DHW call)
2	Pilot outage	Inlet gas pressure too low	Consult gas utility company. Inlet gas pressure to boiler should be 5.5" (1.4 kPa) to 9.0" (2.2 kPa) water column on natural gas. 10.0" (2.5k Pa) to 14.0" (3.4 kPa) on propane gas.
		Inlet gas pressure too high causing an unstable blowing pilot.	Pressure should be regulated within limits shown above.
		Damaged pilot.	Replace.
		Dirty pilot.	Blow dust or lint out of pilot.
		Plugged or undersized pilot.	Replace pilot orifice.
		No power from ignition control.	See Section 8.F or check control.
3	Flame roll-out on start-up	Blocked outlet	Check flue damper operation.
		Pilot out of position (delayed ignition)	Correct pilot position.
		Blocked heat exchanger or flue or dirty burners or orifices.	Clean and correct as necessary.
		Refractory tile out of place	Correct or replace tile as necessary.
4	Flame has lazy yellow tip	Low primary air	Correct manifold pressure according to rating plate. Correct orifice size if necessary (see parts list). Clean burner ports if dirty. Check heat exchanger.
5	Not enough heat	Inadequate gas supply	Gas meter too small. Gas line from meter to boiler too small.
		Low manifold gas pressure	Gas pressure on boiler manifold. Must be adjusted to 4.0" (1.0 kPa) W.C. natural gas 9.0" (2.2 kPa) W.C. propane. If the supply pressure is correct the gas valve regulator may be bad and need replacing.
		Boiler size inadequate	Replace with a boiler of a higher input.
		Burned Copper. Boiler was dry fired and copper has been damaged causing a reduced efficiency.	Replace heat exchanger
6	Pump noisy	Air in volute	Bleed air from volute. Check pump alignment.
		Worn bearings	Replace worn parts.
7	Boiler pounding or knocking	Too low water flow through boiler	Check temperature rise between inlet and outlet boiler piping. 15°F (8°C) to 25°F (14°C) temperature rise is recommended. If temperature rise is over 25°F (14°C), increase pipe size or pump capacity or locate obstruction. Check for stuck closed zone valves. Check for zone pumps not operating. Check for closed valve in system.
8	Boiler condensing	Low water temperature	Flue product moisture will condense at the start-up until the boiler water temperature reaches the normal operating conditions. -Check for proper wiring for anti-condensing protection. Install LLH or other piping arrangement to prevent low return water temperatures from reaching the boiler.
9	Pump cavities or low water pressure at boiler gauge or bubbles in system at high temperature	Defective fill valves or pressure regulator	Replace and ensure a minimum of 12PSI.
		Expansion tank piped incorrectly	Re-pipe expansion tank to suction size of pump at high temperature.
10	Pressure relief valve opens	Waterlogged expansion tank	Check charge in expansion tank. Replace or Refill with proper charge of air.
11	Pilot is lit but main burners will not come on. See Section	Main gas valve (MV) terminal is getting 24V power, gas valve is bad	Check wiring and control, replace control if flame light is lit and no power is going to the MV terminal. Replace gas valve if power is present at MV terminal and valve isn't opening.
12	Boiler short cycles	Heat anticipator in room thermostat set too low	Increase setting (1.0 is usually satisfactory)
		Low water flow through boiler	Increase size of pump or increase piping size.
		Hi-limit switch may be set too low.	Increase differential see 8.C.5, adjust Economy mode or Reset curve.

11.C.1 Troubleshooting Flow Chart 1 (burners off)

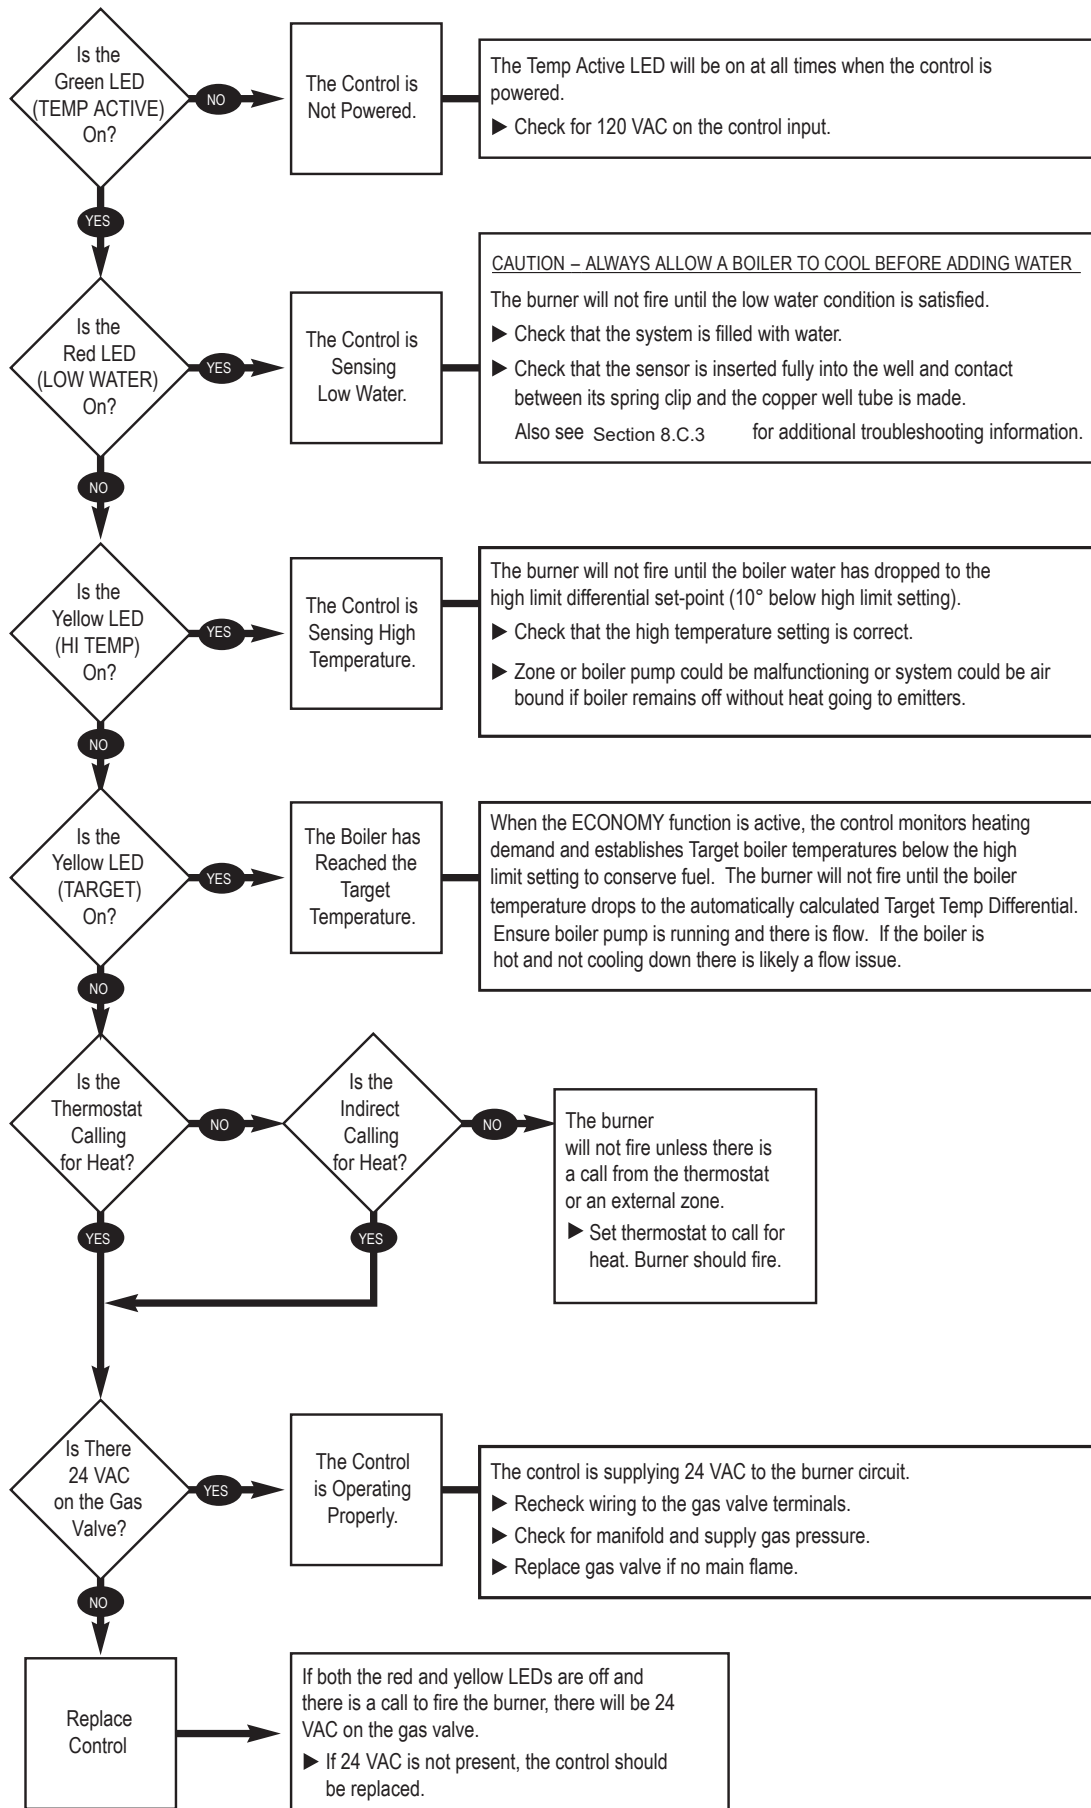


11.C.2 Troubleshooting Flow Chart 2 (burners on)

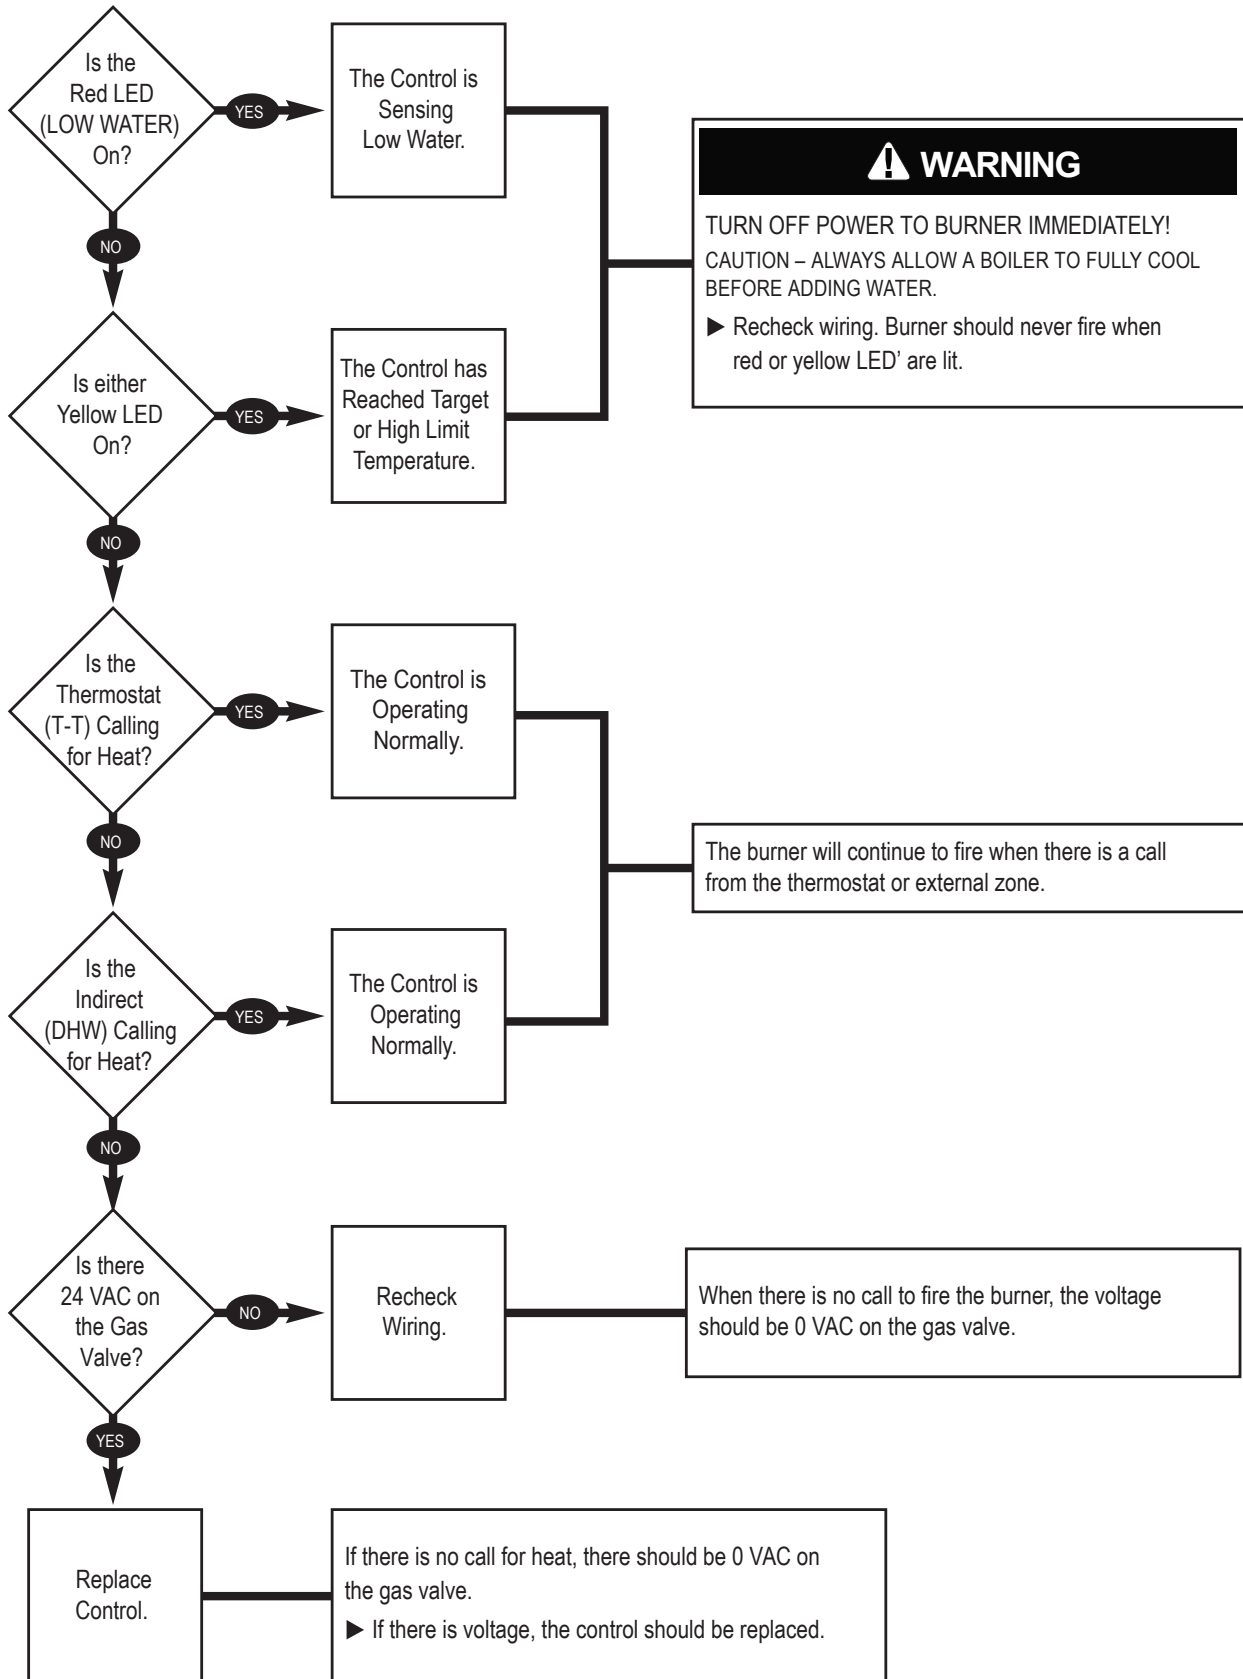


SECTION 12 REPLACEMENT PARTS

12.A Parts Illustrations


Reference to 12.B Parts List starting on next page.

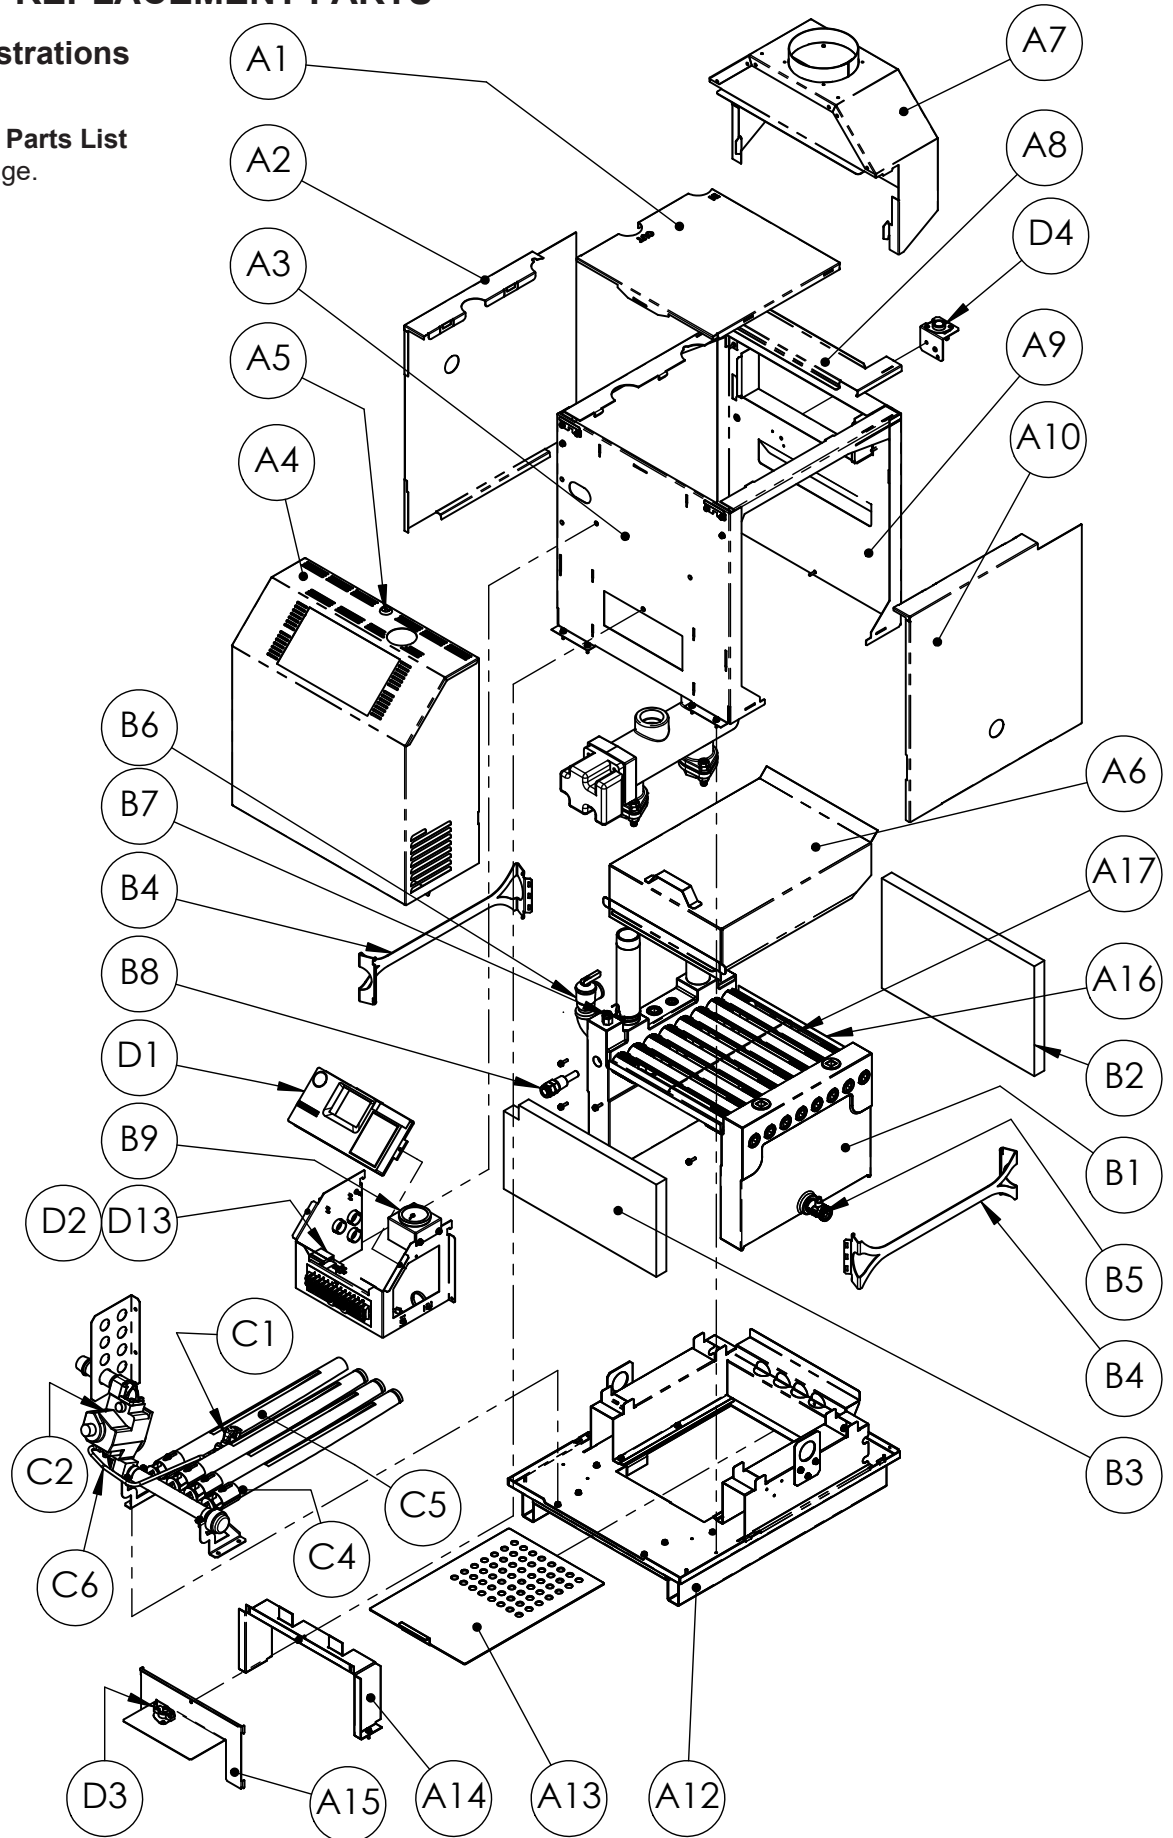

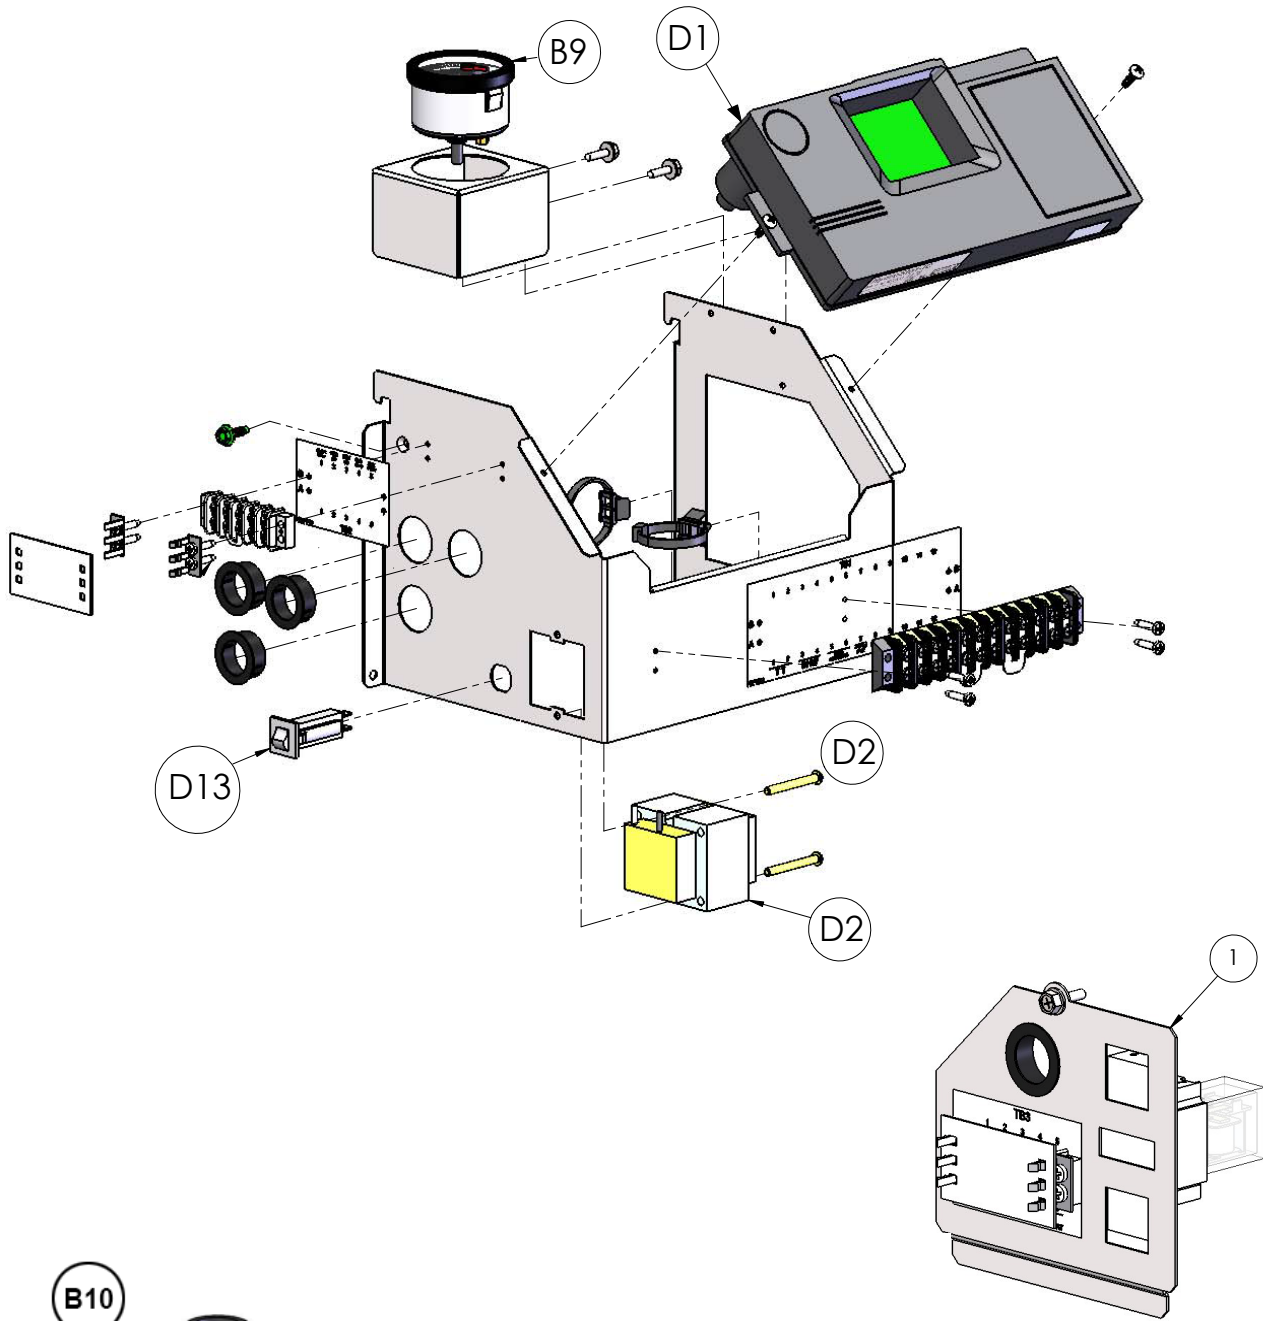

DHW Relay Kit

B10

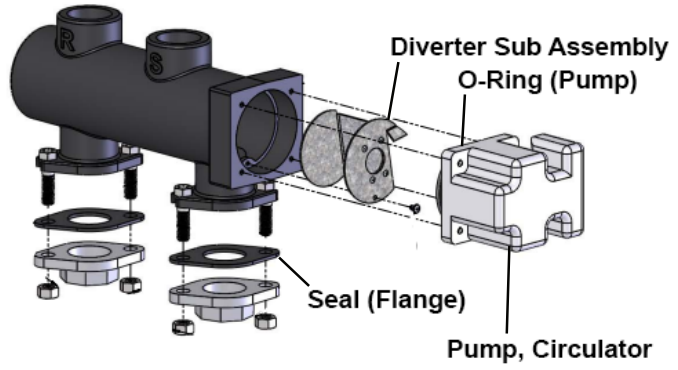

Parts List (continued)

	50	75	100	125	150	200
D	<u>Electrical System</u>					
D1	Controller	E2401400	E2401400	E2401400	E2401400	E2401400
	Limit Sensor 24"	E2407200	E2407200	E2407200	E2407200	E2407200
D2	Transformer 115/24V (40VA)	R0021300	R0021301	R0021302	R0021303	R0021304
D3	Roll-Out Switch, Man. Reset,250F SPST	E2103200	E2103200	E2103200	E2103200	E2103200
D4	Blocked Vent Safety Switch	R2061100	R2061100	R2061100	R2061100	R2061100
D5	Circuit Breaker, 2 AMP, Panel Mount	E2335100	E2335100	E2335100	E2335100	E2335100
D6	Terminal Block Finger Guard	E2402100	E2402100	E2402100	E2402100	E2402100
	<u>Wiring Harnesses (not shown)</u>					
	Low Voltage Harness (TB1 & damper)	E2403400	E2403400	E2403400	E2403400	E2403400
	X1 Connector Harness (Safety Chain)	E2402700	E2402700	E2402700	E2402700	E2402700
	LLH Pump Harness	-	-	E2402800	E2402800	E2402800
	Pump Kit Harness	20071500	20071500	-	-	-
	High Voltage Harness	E2402600	E2402600	E2402600	E2402600	E2402600
	Hi-Tension Ignition Lead	E2407000	E2407000	E2407000	E2407000	E2407000
	Vent Damper Assembly (not shown)	E2071501	E2071502	E2071503	E2071504	E2071505
B10	Low Loss Header Assembly	-	-	-	5X2050	5X2050
	Pump, Circulator	-	-	-	A2136500	A2136500
	Diverter Sub Assembly	-	-	-	5X2056	5X2056
	O-Ring (Pump)	-	-	-	S2138700	S2138700
	Seal (Flange)	-	-	-	S2137800	S2137800

12.C Accessories List

	50	75	100	125	150	200
DHW Relay Kit	CA019400	CA019400	CA019400	CA019400	CA019400	CA019400
Relay, 24VAC, DTTD	E2327800	E2327800	E2327800	E2327800	E2327800	E2327800
DHW Harness	E2404200	E2404200	E2404200	E2404200	E2404200	E2404200
Terminal Block Finger Guard	E2402100	E2402100	E2402100	E2402100	E2402100	E2402100
Outdoor Sensor	E2347400	E2347400	E2347400	E2347400	E2347400	E2347400
Power Vent Kits	CA019501	CA019501	CA019501	CA019502	CA019502	CA019502
Low Loss Header Kit for 50/75/100	CA019600	CA019600	CA019600	-	-	-
Conversion Kits						
LP 0-2,000'	CA019901	CA019905	CA019909	CA019913	CA019917	CA019921
LP 2,001-5,000'	CA019902	CA019906	CA019910	CA019914	CA019918	CA019922
LP 5,001-8,000'	CA019903	CA019907	CA019911	CA019915	CA019919	CA019923
LP 8,001-10,000'	CA019904	CA019908	CA019912	CA019916	CA019920	CA019924
Nat 0-2,000'	CA020001	CA020005	CA020009	CA020013	CA020017	CA020021
Nat 2,001-5,000'	CA020002	CA020006	CA020010	CA020014	CA020018	CA020022
Nat 5,001-8,000'	CA020003	CA020007	CA020011	CA020015	CA020019	CA020023
Nat 8,001-10,000'	CA020004	CA020008	CA020012	CA020016	CA020020	CA020024

12.D Glossary of Terms

Air Vent

A device used to purge air from the Circuit. Should be located at the highest point in the Circuit.

Branch

The section(s) of supply and return piping, including the heat distribution units connected directly to the trunk. Also referred to as a “zone”.

Circuit

Entire water circulation piping, beginning and ending at the boiler (Series Loop System).

Expansion Tank (Compression Tank)

Installed in the circuit to accommodate excess water produced by heat expansion.

Diaphragm Expansion Tank

Used instead of Expansion Tank (Compression Tank). Internal bladder separates air and water.

Heat Distribution Units

Transfers heat from the water supplied by the boiler to the area to be heated through the use of baseboard, convector, radiator, finned tube. Also known as “radiation”.

Isolation Valve

Used to isolate the boiler from the circuit. It minimizes the amount of water drained from the system.

Low Loss Header

Used to allow boiler flow to be independent of system flow so that Primary/Secondary system piping is unnecessary and system piping is simplified.

Primary-Secondary Piping

Two or more interconnecting circulating loops, each with its own pump. Primary =System Circuit; Secondary=Boiler Circuit.

Reverse-Return Piping

Balanced, equal flow (first in, last out) piping. Utilized with multiple boilers and/or radiation. Applied with single or multiple system pumps.

System Purge Valve

A device used to purge air from the circuit. Should be located as close as possible to the cold-water feed, but not immediately after the cold-water feed.

Temperature Controllers

The primary temperature controller maintains all normal heating operations.

Trunk

The section of piping which connects the boiler return and supply with the branch(es). Also known as a “main” or “header”. Should be same size as boiler inlet/outlet connections.

Zone Pump

Circulator installed in branch piping that diverts hot water coming from the boiler into various areas (zones) of a building.

Zone Valve

Diverts hot water from the boiler into various areas (zones) of a building.

